


# **AQUATIC AV**

## **USER MANUAL**

### **MP5 WATERPROOF MEDIA PLAYER**

**FOR 1998-2013 HARLEY DAVIDSON MOTORCYCLES**

**AQ-MP-5BT-H**

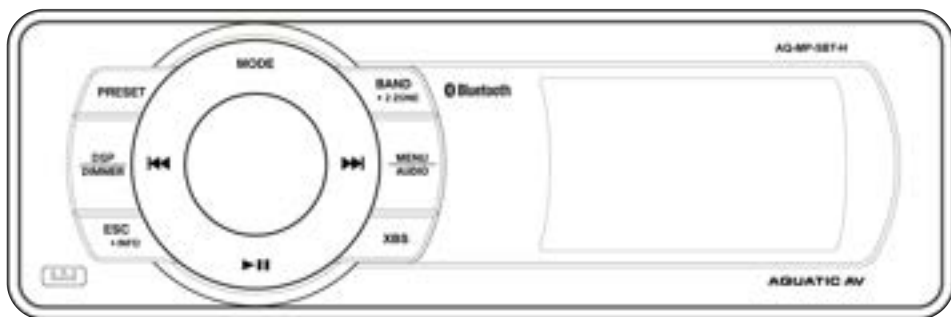

**! PLEASE READ THIS INSTRUCTION MANUAL  
BEFORE INSTALLATION AND OPERATION !**

|  |           |
|--|-----------|
| <b>1 Getting Started</b>   | <b>3</b>  |
| 1.1 Contents   | 3         |
| 1.2 Connections  | 3         |
| 1.3 Wiring Diagram   | 4         |
| 1.4 Mounting Precautions   | 5         |
| 1.5 Installing The Media Player If No Stereo Is Already Installed                  | 5         |
| 1.6 Installing The Media Player If An Existing Factory Stereo Is Already Installed | 6         |
| 1.7 Connecting Rear Speakers   | 6         |
| 1.8 Handle Bar Controls  | 7         |
| 1.9 Power On   | 7         |
| <b>2 Location Of Controls</b>  | <b>8</b>  |
| 2.1 Media Player Controls  | 8         |
| <b>3 Listening To Devices</b>  | <b>9</b>  |
| 3.1 Listening Via Bluetooth  | 9         |
| 3.1.1 Pair With Bluetooth Device   | 9         |
| 3.1.2 Listening Via Bluetooth Device   | 9         |
| 3.2 Listening Via Auxiliary Input (3.5mm Jack)                                     | 9         |
| 3.3 Adjusting Volume Level   | 9         |
| 3.4 Device Charging  | 9         |
| <b>4 Listening To AM/FM Radio</b>  | <b>10</b> |
| 4.1 Enter FM/AM Radio Mode   | 10        |
| 4.2 Scan Or Seek FM/AM Radio Chan  | 10        |
| 4.3 Saving Radio Channel To Memory   | 10        |
| 4.4 Listening To Saved Radio Memory  | 10        |
| 4.5 Switching Between FM Tuning Areas  | 10        |
| <b>5 Settings Menu</b>   | <b>11</b> |
| 5.1 Audio Menu   | 11        |
| 5.2 AS/PS (Auto Scan/Preset Scan)  | 11        |
| 5.3 Clock Settings   | 11        |
| 5.4 Local/Distant Tuning   | 11        |
| 5.5 Stereo/Mono  | 11        |
| 5.6 FM Tuning Area   | 11        |
| 5.7 Beep Tone  | 11        |
| 5.8 System Reset   | 11        |
| <b>6 Specifications &amp; Dimensions</b>   | <b>12</b> |
| 6.1 Specifications   | 12        |
| 6.2 Dimensions   | 12        |
| <b>7 Warranty Information</b>  | <b>13</b> |
| <b>8 FCC Statement</b>   | <b>14</b> |

## 1.1 Contents

- AQ-MP-5BT-H Digital Media Player
- Four-pin Speaker Wiring Harness

## 1.2 Connections (See Wiring Diagram 1.3)

### 1. 23-pin Harley-Davidson® Standard Harness Connection

The 23-pin harness supplies power and ground connections to the Media Player, the two front channel high-level (speaker) outputs, as well as the handle bar control inputs.

### 2. AM/FM Radio Antenna Jack

Allows connection of AM/FM radio antenna. For best AM/FM performance make sure the antenna is extended to the highest achievable position.

### 3. Auxiliary Outputs

Allows external amplifiers to be connected to power additional speakers.

### 4. Auxiliary Inputs

Allows an additional RCA input, from a standalone unit or another stereo source.

### 5. 8-pin DIN Cable

Allows connection of the wired Remote Control (AQ-WR-5F sold separately) RF receiver.


### 6. Power Antenna / Amplifier Remote

Provides +12V signal to turn on an external amplifier.

### 7. Rear Channel High-Level (Speaker) Output

High-level rear channel speaker output (see section 1.7).

1.3 Wiring Diagram

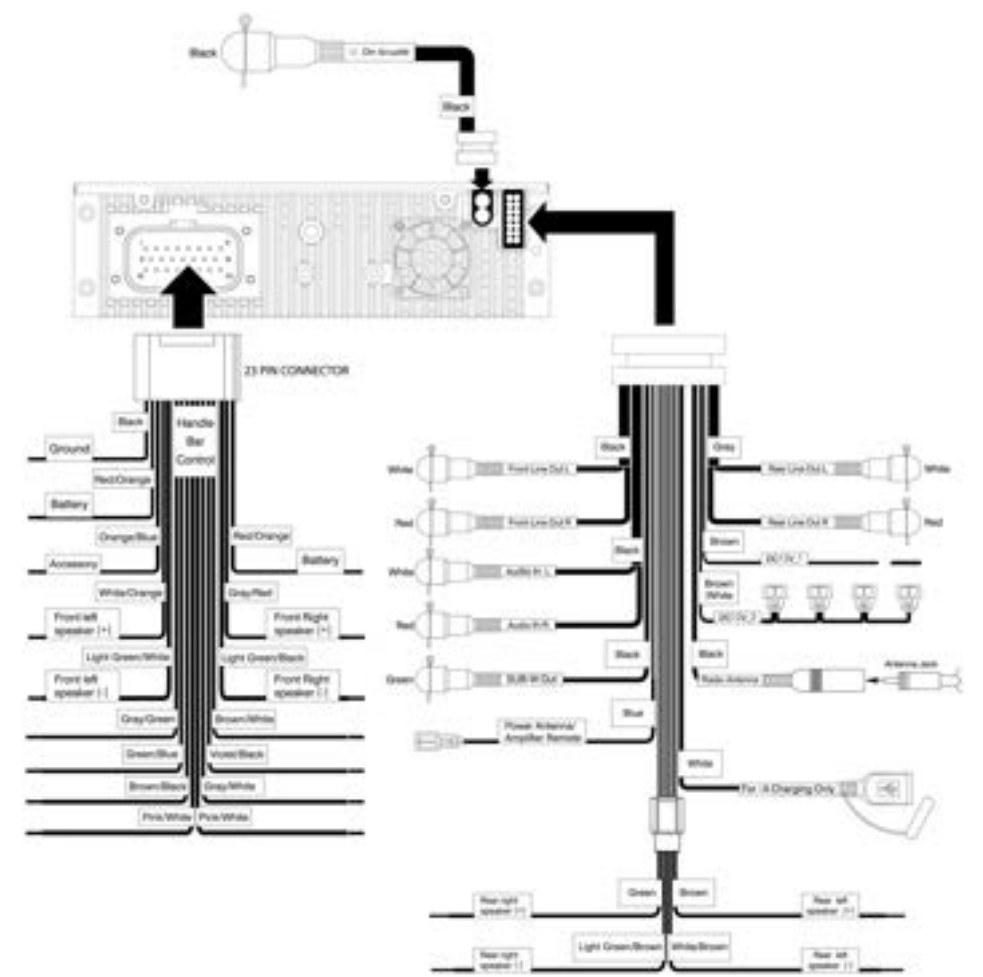


⚠ No lower than a 2 Ohm speaker load should be used or damage may occur to the media palyer. Make sure the polarity of speakers is connected correctly.

### 1.4. Mounting Precautions

Please observe the following precautions:


1. Install the unit where it does not interfere with driving.
2. Check clearances on both sides of a planned installation before drilling any holes or installing any screws.
3. When routing RCA cables, keep them away from power cables and speaker wires.

 A common source of noise in the audio system is the motorcycle ignition system. This is usually due to the radio being located close to the ignition system (engine). This type of noise is detectable by a varying pitch with the speed of the engine.

Ignition noise can be removed using a high voltage radio suppression type ignition wire and a suppressor resistor. Your motorcycle may already use this wire and resistor but it may be necessary to check them to ensure they are operating correctly. Alternatively, a noise suppressor could be installed.

### 1.5 Installing The Media Player If No Stereo Is Already Installed


1. Position the Media Player in front of the fairing opening so the wiring can be passed through the opening.
2. Follow the wiring diagram and ensure all connections are secure and insulated with crimp connectors to ensure proper operation.
3. Turn the Media Player on to confirm operation (motorcycle ignition switch must be on) and once correct operation is achieved turn the motorcycle ignition switch off before proceeding with the final mounting of the chassis.
4. Ensure that the unit is supported and secured on the sides using the existing 4 factory screws; failure to do so may allow the unit to move during while riding, causing damage to the mounting area.

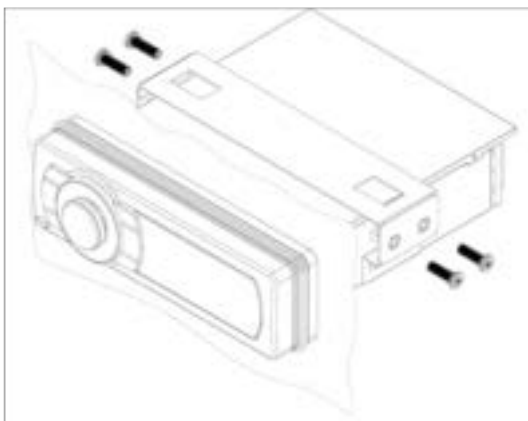

## 1.6 Installing The Media Player If An Existing Factory Stereo Is Already Installed

If replacing an existing Harley-Davidson factory stereo use the existing Harley-Davidson factory side mounting brackets and hardware to mount the Media Player.

1. Disconnect the radio harness and FM/AM radio antenna from the factory stereo.
2. Remove the factory stereo and replace with the AQ-MP-5BT-H Media Player using the existing factory mounting hardware.
3. Plug the 23-pin radio harness plug and FM/AM radio antenna into the AQ-MP-5BT-H media player. Only the 23-pin harness plug is utilized by the media player. Any additional harness plugs will hang loose in your fairing.
4. Turn the Media Player on to confirm operation (motorcycle ignition switch must be on) and once correct operation is achieved turn the motorcycle ignition switch off before proceeding with the final mounting of the chassis.
5. Ensure that the unit is supported and secured on the sides using the existing 4 factory screws; failure to do so may allow the unit to move during while riding, causing damage to the mounting area.

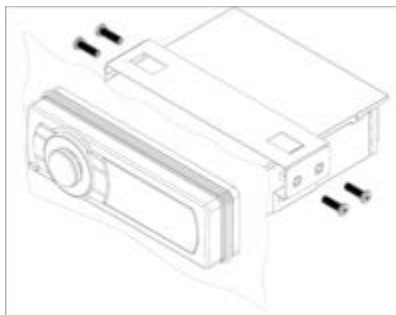

## 1.7 Connecting Rear Speakers


Rear speakers are usually installed on the following Harley-Davidson Motorcycle models: Electra Glide Ultra Classic, Road Glide Ultra, Ultra Limited. To continue using these speakers with your Aquatic AV Media Player follow the instructions below.

1. Locate the rear channel high-level (speaker) output (4-pin molex connector with four speaker wires). The pigtail itself is labelled with Color Code, Function and Description.
2. Locate the rear channel speaker lines in the 35-pin radio harness plug. This plug will not be connected to your Aquatic AV head unit. Cut the 4 speaker wires for the rear channels at pins 1 and 24(for the right side) and pins 2 and 25 (for the left side).
3. Strip the 4-pin pigtail wires 1/4" exposing bare wires. Strip the 4 wires that you cut from the 35-pin harness 1/4" exposing bare wires.
4. Connect and crimp using crimp caps or solder the connection, cover the soldered wires with non conductive heat shrink tube.



*After following the installation instructions above test your rear speakers for sound. If you do not have output from your rear speakers make sure to check your rear speaker setting in the settings menu and select rear speakers 'ON'.*

1.8 Handle Bar Controls

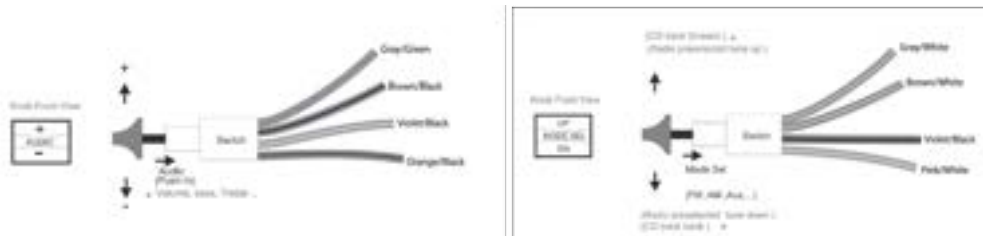

The AQ-MP-5BT-H is a plug and play solution for 1998-2013 Harley-Davidson Motorcycles. Plug the standard Harley-Davidson® 23-pin connector in to the back of the AQ-MP-5BT-H and your speakers and hand controls will work the same as the standard factory install (some Harley- Davidson® models may require additional steps).

Some stock Harley-Davidson features e.g. CB radio will not be supported through the AQ-MP- 5BT-H.

Below is a matrix of what can be controlled on the AQ-MP-5BT-H via the stock Harley-Davidson hand controls.


|           | HAND CONTROL UP       | HAND CONTROL DOWN         | MODE SELECT                     |
|-----------|-----------------------|---------------------------|---------------------------------|
| AM/FM     | Tunes to next station | Tunes to previous station | Switches mode                   |
| BLUETOOTH | Next track            | Previous track            | Switches mode                   |
| AUX       | No Function           | No Function               | Switches mode                   |
|           |                       |                           |                                 |
|           | ( + )                 | ( - )                     | Audio                           |
| AM/FM     | Turns volume up       | Turns volume down         | Accesses Audio menu adjustments |
| BLUETOOTH | Turns volume up       | Turns volume down         | Accesses Audio menu adjustments |
| AUX       | Turns volume up       | Turns volume down         | Accesses Audio menu adjustments |

1.9 Power On

The AQ-MP-5BT-H requires 12V DC to pins 10,20, and 12 in the 23-pin radio harness plug in order to power up. Ground should be connected to pin 11.

Once all connections are made press the rotary knob and the stereo will turn ON.

2.1 Media Player Controls

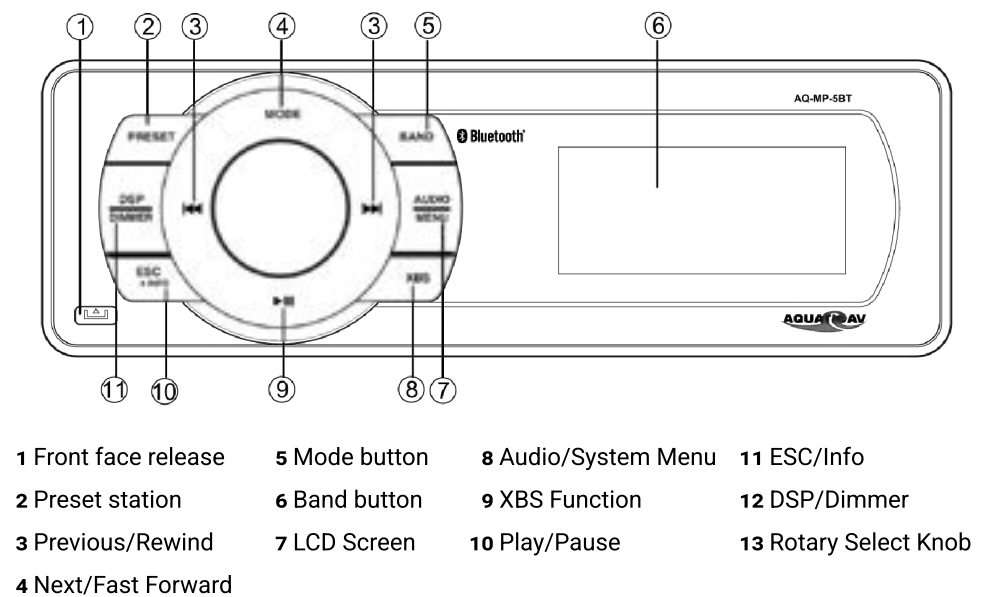

| Function                      | FM Mode   | Aux In      | Bluetooth                |
|-------------------------------|---|-------------|--------------------------|
| Rotary Select Knob            | Short Press: Mute   |             |                          |
|                               | Long Press: Power Off   |             |                          |
|                               | In menu: Select   |             |                          |
| Mode                          | Short Press: Switches through different modes   |             |                          |
|                               | Long Press: No Function   |             |                          |
| Rotary Knob Clockwise         | When turned clockwise the volume increases  |             |                          |
| Rotary Knob Counter Clockwise | When turned counter clockwise the volume decreases  |             |                          |
| Next                          | Short Press: Scans to the next station  | No Function | Changes to next song     |
|                               | Long Press: Switches into manual seek mode  | No Function | No Function              |
| Previous                      | Short Press: Scans to the previous station  | No Function | Changes to Previous Song |
|                               | Long Press: Switches into manual seek mode  | No Function | No Function              |
| Play/Pause                    | Short Press: Toggles between Play and Pause   |             |                          |
|                               | Long Press: No Function   |             |                          |
| Band                          | Short Press: Switches between AM/FM Bands   | No Function | No Function              |
|                               | Long Press: No Function   | No Function | No Function              |
| XBS                           | Short Press: Toggles Bass Boost on/off  |             |                          |
|                               | Long Press: No Function   |             |                          |
| DSP/Dimmer                    | Short Press: Turns on EQ Preset   |             |                          |
|                               | Long Press: Enables the two stage dimmer  |             |                          |
| ESC/Info                      | Short Press: Return to the current mode screen, if you are in a menu. Display clock when on mode screen |             |                          |
|                               | Long Press: Displays info if any available  | No Function | No Function              |
| Preset                        | Short Press: Advances through presets   | No Function | No Function              |
|                               | Long Press: Set up new presets  | No Function | No Function              |
| Audio/Menu                    | Short Press: Takes you into the audio menu  |             |                          |
|                               | Long Press: Takes you into the system menu  |             |                          |

*If your music player is connected via the Auxiliary input you will not be able to control track or receive track information.*


*Turn off DSP to access control of Bass and Treble*



## 3.1 Listening Via Bluetooth

### 3.1.1 Pair With Bluetooth Device

1. Open the Bluetooth settings on your Bluetooth enabled device.
2. Select 'AQUATIC AV' from the list of available devices to pair (no password is needed).
3. A Bluetooth logo will illuminate on the Media Player LCD to verify Bluetooth is activated.

 Only one Bluetooth device can be paired with the Media Player at any time.

### 3.1.2 Listening Via Bluetooth Device

1. After pairing a Bluetooth enabled device, switch the Media Player to Bluetooth Mode.
2. Media played on your paired device, will be transmitted to the Media Player.
3. The PLAY/PAUSE, NEXT, and PREVIOUS buttons will control their appropriate functions on your device.
4. A paired Bluetooth device can be controlled through the controls on the device, the faceplate controls, or using the handle bar controls.

## 3.2 Listening Via Auxiliary Input (3.5mm Jack)

1. Remove the faceplate from the stereo.
2. Connect your MP3 device to the 3.5mm connector.
3. Re-attach the faceplate.
4. Press the rotary knob to power the Media Player ON (if the faceplate was removed with the stereo still powered on, it will power on by itself).
5. Press MODE on the Media Player or remote control to select 'AUX-1' mode.

 
 Always ensure to connect and disconnect your Media Player with dry hands!

## 3.3 Adjust Volume Level

1. Turn the rotary knob clockwise increase the volume.
2. Turn the rotary knob counter clockwise to reduce the volume.

## 3.4 Device Charging

1. Remove the faceplate from the stereo.
2. Place your device in the storage compartment and connect your USB device to the USB connector.
3. Re-attach the faceplate and ensure the stereo is switched on. The device battery will then charge.

 The USB connector will provide charging only. Audio content stored on your device will not be recognized or playable by the stereo.

## 4.1 Enter FM/AM Radio Mode

Press the MODE button to switch your Media Player to the radio mode.

## 4.2 Scan Or Navigate FM/AM Radio Channels

1. Press the NEXT or PREVIOUS buttons to scan for the strongest radio signals in your area.
2. Press and hold the NEXT or PREVIOUS buttons to manually tune the radio to desired station.

## 4.3 Saving Radio Channel To Memory

1. Tune to the station you would like to be saved as a preset.
2. Press and hold the 'Preset' Button.
3. The stereo will enter the add preset button menu.
4. Using the rotary knob you can select which preset slot you would like to save the current station to.
5. Press the rotary knob to confirm your selection.
6. Upon successfully saving a preset the screen will display SAVED and the preset number selected will be shown in the right corner.



*Presets are only for the current band you are on. Each band FM1, FM2, FM3, AM1 and AM2 has six presets for a total of 30 (18x FM & 12x AM).*

## 4.4 Listening To Saved Radio Memory

1. Once the presets have been set either manually or using AS/PS press the 'Preset' button to scroll through your presets.

## 4.5 Switching Between FM Tuning Areas

When in 'RADIO' mode.

1. Press and hold the 'AUDIO/MENU' button to enter the System Menu.
2. Press the 'AUDIO/MENU' button to scroll through the options.
3. Scroll to 'AREA' then; turn the rotary knob to select your desired tuning area.
4. Once the desired tuning area has been selected you can press esc to return to FM Mode.



*US mode will increase and decrease the FM frequency in steps of 0.2 MHz, e.g. 88.1, 88.3, 88.5 MHz.*

*EUR mode will increase and decrease the FM frequency in steps of 0.05 MHz, e.g. 88.25, 88.30, 88.35 MHz.*

*RUSS mode will increase and decrease the FM frequency in steps of 0.05 MHz, e.g. 88.25, 88.30, 88.35 MHz.*

*LAT mode will increase and decrease the FM frequency in steps of 0.1 MHz, e.g. 88.2, 88.3, 88.4 MHz.*

*ASIA mode will increase and decrease the FM frequency in steps of 0.1 MHz, e.g. 88.2, 88.3, 88.4 MHz.*

*JAPAN mode will increase and decrease the FM frequency in steps of 0.1 MHz, e.g. 88.2, 88.3, 88.4 MHz.*

*MID E mode will increase and decrease the FM frequency in steps of 0.05 MHz, e.g. 88.25, 88.30, 88.35 MHz.*

*AUS mode will increase and decrease the FM frequency in steps of 0.1 MHz, e.g. 88.2, 88.3, 88.4 MHz.*

## 5.1 Audio Menu

From the 'Audio Menu' you are able to change the bass, treble, balance, and fader.

1. To enter the 'Audio Menu' press the 'AUDIO/MENU' button.
2. In the 'Audio Menu' press the 'AUDIO/MENU' button to scroll through all options.
3. To change the parameters use the rotary knob to adjust settings.

⚠ Any changes made in the 'Audio Menu' are system wide so it will affect all modes.

## 5.2. AS/PS (Auto Scan/Preset Scan)

Scans through the current frequency band, and assigns presets to the radio stations that have the strongest signal strength.

⚠ Only does this for one AM/FM band at a time.

## 5.3. Clock Settings

The clock can be adjusted from the clock settings menu in the system settings. The clock can be accessed while on the mode screen by pressing the ESC button.

1. To change the clock, press and hold the AUDIO/MENU button to access the system settings.
2. Once in system settings, press the AUDIO/MENU button to scroll through settings until you reach Clock settings.
3. Turn the rotary knob left to adjust the hours and right to adjust the minutes.

## 5.4 Local/Distant Tuning

When 'Local' is turned on the Media Player seeks to only the radio channels with strong signal strength. When 'Local' is turned off the Media Player will seek to all radio channels it receives signal from.

⚠ When local is turned on the word 'Local' will appear in the upper right hand corner of the Media Player LCD.

## 5.5 Stereo/Mono

Change the output mode between stereo and mono. Some applications only accept a mono input.

## 5.6 FM Tuning Area

The FM tuning can be set to different areas, using the rotary knob to scroll through to select the desired tuning area.

There are 7 different tuning areas: USA, EUR, LAT, ASIA, MIDDLE EAST, AUSTRALIA, RUSSIA.

## 5.7 Beep Tone

Beep tone plays when any button is pressed, it can be toggled on and off from this selection.

## 5.8 System Reset


Restores all factory settings.

1. To restore your Media Player to factory settings, access the System Settings by pressing and holding the AUDIO/MENU button. Once in system settings press the AUDIO/MENU button again to navigate to the RESET option.
2. Press the rotary knob to confirm the reset. The Media Player will power off. After a few seconds manually turn the unit on by pressing the rotary knob once.

9.1 Specifications

|                         |   |
|-------------------------|---|
| Supported Media:        | Bluetooth Audio / MP3 / AM / FM                 |
| Device Charging:        | Via USB   |
| Input Channels:         | 1x 3.5mm Stereo Jack Socket, 1x Stereo Pair RCA |
| Output Channels:        | 1x Stereo Pair RCA (2V)                         |
| Power:                  | 4x 45W (4 Ohms), 4x 72W (2 Ohms)                |
| Current Draw:           | 7A (Max) / 6mA (Standby)                        |
| Operation Voltage:      | 9.6V – 14.4V DC                                 |
| Water Resistant:        | Yes - IP65                                      |
| Salt/Fog/UV Protection: | 500hrs Stable, ASTM D4329 & ASTM B117 Compliant |
| Materials:              | Stainless Steel Mountings                       |

9.2 Dimensions

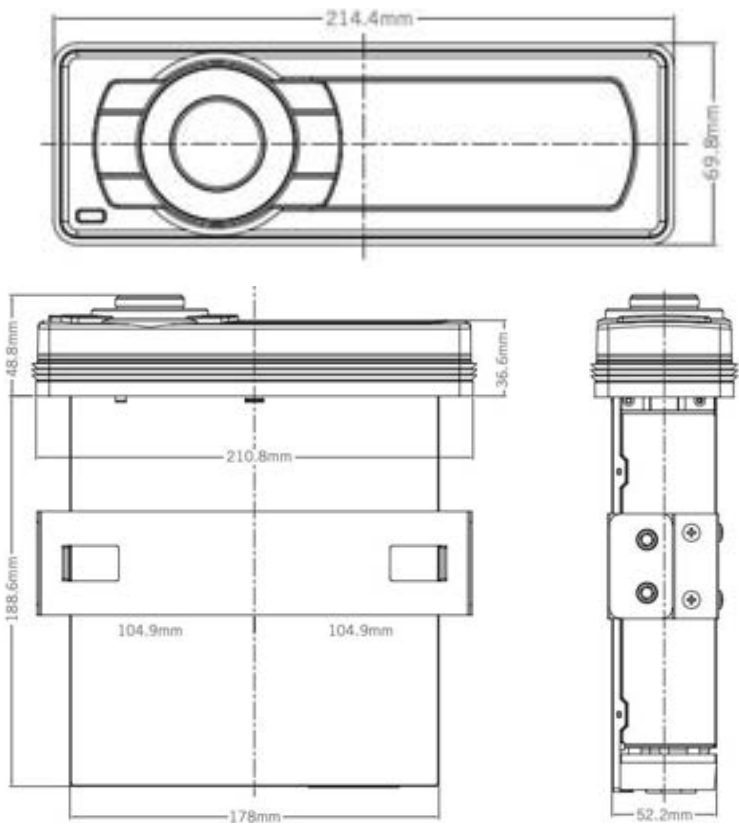

## Product Registration

Register your new Aquatic AV product in order to receive a 2-year warranty. You will need proof of purchase, such as a receipt, from an authorized dealer. Additionally, you will have to provide your contact information, the date and location of the purchase.

You can submit a Product Registration form at the Aquatic AV Support Center or through the Aquatic AV App. The app is available on the App Store for iOS devices and on the Play Store for Androids.

## Warranty

Aquatic AV offers a limited warranty of our products on the following terms:

### Length Of Warranty

2 years on audio systems, electronics, speakers, and accessories (receipt required).

### Coverage

This warranty covers only the original purchaser of a Aquatic AV product purchased from an authorized Aquatic AV dealer in the United States. In order to receive service, the purchaser must provide Aquatic AV with a copy of the receipt stating the customer name, dealer name, product purchased and date of purchase.

### Defective Products

Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Aquatic AV's discretion.

### What Is Not Covered

- Damage caused by accident, abuse, improper operations, theft.
- Any cost or expense related to the removal or reinstallation of product.
- Any product with the serial number or tamper labels defaced, altered, or removed.
- Subsequent damage to other components.
- Any product not purchased from an authorized Aquatic AV dealer.

### Limit On Implied Warranties

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Aquatic AV any other liability in connection with the sale of the product.

### How To Obtain Service

You must obtain a return material authorization number (RMA) to return any product to Aquatic AV. You are responsible for shipping charges of returned products to Aquatic AV.

FCC ID:

MADE IN CHINA

### FCC Statement to the User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
3. Increase the separation between the equipment and receiver.
4. Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

***Product design and specification subject to change without notice. E&OE.***

# AQUATIC AV

## AQUATIC AV

282 KINNEY DRIVE  
SAN JOSE, CA 95112, USA

**E-MAIL:** [INFO@AQUATICAV.COM](mailto:INFO@AQUATICAV.COM)

**US & CANADA:** 1 877 579 2782

**INTERNATIONAL:** +1 408 559 1668

**FAX:** +1 408 559 0125

**AQUATICAV.COM**



**California Proposition  
65 Warning**



**WARNING:** This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

*For more information: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)*