

Copyright© 2012 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 13-306

LED DIGITAL FLASHER RELAY
HONDA CRUISERS

06/01/12

TOOLS NEEDED: VARIOUS

INSTALLATION:

1. LOCATE THE STOCK FLASHER UNIT. THE STOCK FLASHER UNIT CAN BE LOCATED IN SEVERAL PLACES DEPENDING ON YOUR MODEL OF BIKE. IT CAN BE LOCATED BEHIND THE HEADLIGHT IN THE HEADLIGHT HOUSING, UNDERNEATH THE LEFT OR RIGHT SIDE COVERS, OR UNDERNEATH THE SEAT (REFER TO OWNER'S MANUAL.) IT LOOKS LIKE A SMALL SQUARE BLACK BOX WITH A THREE-PIN CONNECTOR AND THREE WIRES GOING TO IT.

NOTE: TURNING ON THE TURN SIGNALS AND LISTENING FOR THE CLICKING CAN HELP YOU LOCATE THE STOCK FLASHER.

2. ONCE YOU HAVE LOCATED THE STOCK FLASHER, REMOVE IT FROM THE THREE-PIN PLUG. THIS PART IS NO LONGER NEEDED ON YOUR BIKE.

3. TAKE THE NEW DIGITAL FLASHER AND PLUG THE MALE THREE-PIN PLUG INTO THE FEMALE THREE-PIN PLUG.

4. ASSEMBLE THE WIRE HARNESS TO THE RELAY. THE BLUE WIRE GOES TO THE "L", THE RED WIRE TO THE "B", AND THE BLACK WIRE TO THE "E". (SEE DIAGRAM)

5. REASSEMBLE THE BIKE AND TEST THE FUNCTION OF THE TURN SIGNALS.

