

## FIRE EXTINGUISHER MOUNT

For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403  
 PHONE: 909-596-9690, FAX: 909-596-9693  
 sales@jokermachine.com, www.jokermachine.com

### TOOLS NEEDED

- 5mm Hex Key / Driver
- 3mm Hex Key / Driver
- Medium Strength Thread Locker

### FIRE EXTINGUISHER

#### Recommended:

- 3": Amerex Chrome Extinguisher 2.5 lbs # B417TC-2.5 LBS
- 3 1/8" First Alert 2.5 lbs White #FE105GR

### INSTALLATION

- On first assembly we recommend putting a little anti-seize on the locking pin shaft.
- Tighten "Jack Screw" to spread clamp enough to insert extinguisher tank.
- Mount receiver bracket anywhere.
- Use medium strength thread locker on all hardware.

### TO OPERATE

- Simply pull the flame engraved handle briskly to remove the tank/clamp assembly

NOTE: It is not "spring loaded" and it will dis-connect easily

- When re-mounting bracket/tank to receiver bracket, make sure pull handle is fully engaged into square cavity to ensure ball bearing in pin is engaged on opposite side correctly.

