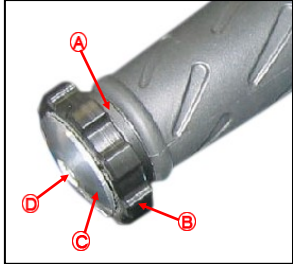


	KAOKO™ THROTTLE STABILIZER KITS: SPTRIP11 • SPTRIP11CRG	For Models TRIUMPH SPEED TRIPLE 1050 (2011-)
1	 A — Threaded insert to be removed to expose thread	2  A — Plastic Thrust Washer B — Threaded insert removed
3	 A — Plastic Thrust Washer B — Friction Nut & Grub Screw C — Kaoko bar-end weight D — Central retaining bolt	

DISCLAIMER: NO RESPONSIBILITY ACCEPTED FOR NON-ADHERENCE TO THESE INSTRUCTIONS

KAOKO™ Safety Warning:

The KAOKO™ Throttle Stabilizer is an aftermarket accessory. Any misunderstood, abused or incorrectly installed motorcycle accessory is a safety hazard that could cause injury or death. It's the rider's responsibility to understand the operation and purpose for which the KAOKO™ Throttle Stabilizer is designed, namely, for cruising, only when safe to do so. At all other times the control should be disengaged. The KAOKO™ Throttle Stabilizers are to be used only by experienced and responsible riders. See reverse of page for full indemnity.

Note: An adjustment to throttle assembly position may be necessary to suit KAOKO™ Throttle Stabilizers. The throttle assembly position on aftermarket bars, and some OEM bars, is adjustable. The assembly can marginally be re-positioned along the handle bars slightly loosening the throttle assembly clamp screws, and then sliding the throttle assembly along the handle bars (left or right). Once done, firmly tighten the clamp screws to OEM torque specifications. This adjustment is generally not necessary.

Fitting Instructions

Step 1

Completely remove the right hand side bar weight as shown in picture 1.

Step 2

Completely remove the threaded insert to expose the larger ID thread as shown in Picture 2. In some cases this threaded insert cannot be easily removed.

In this case, insert the OEM bar weight central retaining bolt to the insert with a high strength thread locking adhesive. This should provide sufficient resistance to remove the threaded insert. Failing this contact your Triumph Dealer and have their mechanic remove the insert for you.

Step 3

Insert the plastic thrust ring into end of throttle sleeve as shown in Picture 2.

Note: To enable improved functionality, it is recommended (not essential) to apply very light smear of Automotive grease or Petroleum jelly to the friction face of the thrust washer (See Figure 3 at the back of the page)

Step 4

Screw in the KAOKO™ Throttle Stabilizer kit as shown in picture 3 and firmly tighten with an 8mm A/F hex key.

Note: Prior to screwing in the kit, ensure the friction nut is backed up close to the shoulder of the Bar Weight.

Step 5

Carefully set rotational resistance of the friction nut by tightening/loosening the grub screw by small adjustments using the 2mm allen key provided in the Kaoko Kit. Take care not to over tighten risking damage to threads. The nut should have fairly firm rotational resistance.

See under **Maintenance below.**

Step 6

In the case of Kit SPTRIP11CRG , attach bar-end mirror following guide lines from the mirror supplier.

Operating Instructions

The Friction Nut has a **left hand thread**. In readiness for engagement, the Friction Nut must be adjusted so that it makes light contact against the thrust washer.

To Engage: While rolling on the throttle, the Friction Nut can be gripped between the small finger and palm of hand. This action tightens the nut and provides sufficient friction to set the throttle to the desired opening.

(The friction is such that the rider may still open and close the throttle. The throttle simply has a slight rotational stiffness.)

To Disengage: While rolling off the throttle, grip the Friction Nut between small finger and palm of hand.

VERY IMPORTANT!! The throttle should open and snap closed freely when correctly disengaged.

Note: The Grub Screw needs to be set to provide the necessary resistance on the thread of the friction nut (only small adjustments need to be made as to not damage the friction nut threads). This may be adjusted periodically to take up wear.

Maintenance: Remove kit annually. Unscrew Friction Nut and brush clean threads with a mild soap. Apply petroleum jelly to threads and assemble. Adjust grub screw to desired operating resistance. (O-Ring cushion: 19.6mm I.D. x 2.4mm section — if replacement is required)