



CAN-AM DEFENDER RM4 PLOW MOUNT INSTALLATION INSTRUCTIONS

PART# 4501-0659

The RM4 plow mount attaches to the front of the machine to the winch location.



QTY.	PART#	Description
1	2485-100	Plow Mount Weldment
1	KD200PF	Removable Mount
2	HDW9002	5/16 Flat Washers
2	HDW7058	5/16 Nylock Nut
2	HDW2050	5/16 x 3/4 Hex Bolt
2	HDW1059	8mm x 55mm Hex Bolt
2	HDW1062	8mm x 60mm Hex Bolt
2	HDW9405	5/8 x 1-1/4 Spacer
2	HDW9420	5/8 x 1 Spacer
1	HDW9185	1/2 x 1 x 1-1/2 Cotterless Hitch Pin

Hold mount up in place and attach the lower portion with the 5/16" x 3/4" hex bolts going through the mount and up through the lower front frame cross bar. Use the 5/16" nylock nuts on top inside frame tube. **Do not tighten completely at this time.**

The front portion of the mount will attach to the winch location. **NOTE: If winch is already installed, you need to remove the bolts that hold the winch in place.**

Attach plow mount to the front of machine by using the 8mm x 60mm hex bolts and the 1" spacers in the lower location and the 8mm x 55mm hex bolts and 1-1/4" spacer in the top location. Spacers go between the mount and front bumper. Place bolts through the plow mount, then through spacer and thread into the winch. Start all four bolts before tightening. Next tighten the bottom bolt.

Install the 1/2" bolts and 1/2" nuts into the front of the removable mount or push tube. These are used as droop stops to keep the plow from drooping down too far. Thread them in halfway. Slide the removable mount into the permanent mount and pin into place with the 1/2" hitch pin. Install blade and push tube to mount. Once completely installed on machine, put blade straight and on the ground. Adjust the droop stop bolts so there is about 3/4" gap between the bolt head and mount or push tube, tighten and lock down.

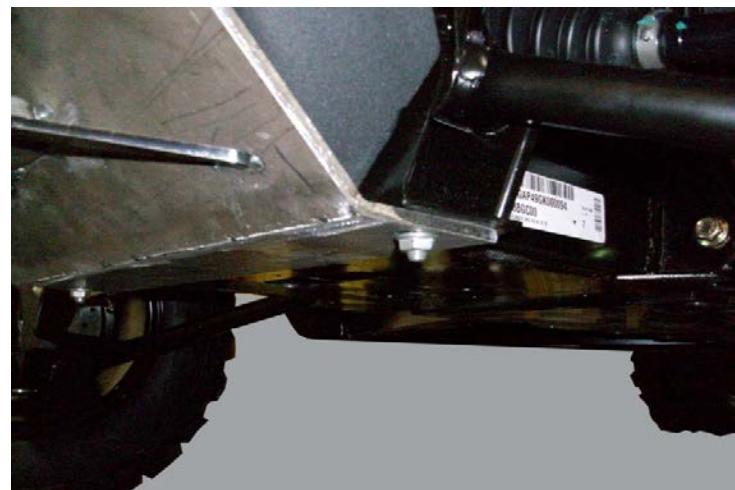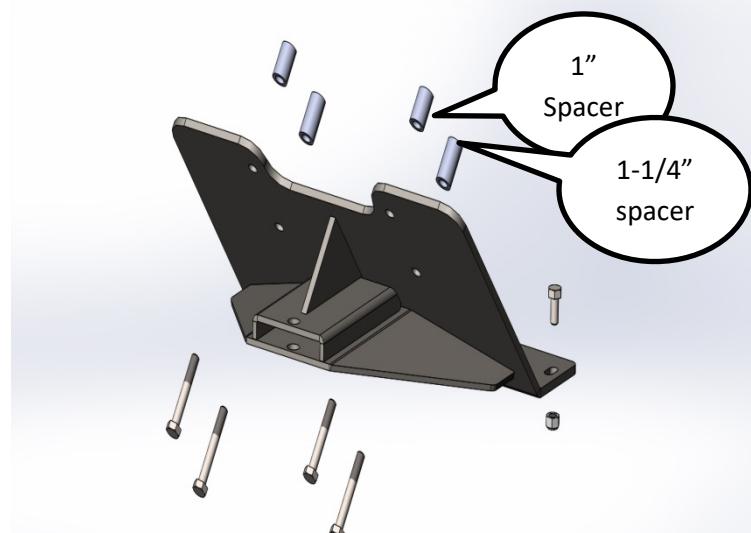

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST2485PF