


| ITEM | PART# | QTY. | DESCRIPTION |
|------|---------|------|--------------------------|
| 1 | 1553-70 | 1 | Winch Mount Plate |
| 2 | HDW9408 | 2 | 3/4 U-Clamp |
| 3 | HDW9407 | 2 | 7/8 U-Clamp |
| 4 | HDW7058 | 4 | 5/16 Nylock Nut |
| 5 | HDW1054 | 2 | 8mm x 25mm Hex Bolt |
| 6 | HDW2052 | 2 | 5/16 x 1-3/4 Hex Bolt |
| 7 | HDW9430 | 2 | 3/4 x 3/4 Plastic Spacer |

Winch Mount Installation Instructions

for 89-98 Suzuki LTF250, 87-98 LT250 4x4, 91-98 LT300 King Ouad

PART#4505-0655

- 1. Remove the front bumper protection pad and screen. (Retain the screen and pad for use when the winch mount is removed.)
- 2. Remove the top two bolts that secure the front rack to the bumper.
- 3. Install the winch to the winch mount using the hardware provided with the winch. **Note:** The winch attaches to the mount upside down. Be sure that the winch winds in the correct direction. Install the winch/mount under the main bumper tube with the winch mount support arms aligned with the top two racks/front bumper bolts. Install the two 8mm x 25mm hex bolts provided as illustrated. **Do not completely tighten.**
- 4. Install the two ¾" u-clamps around the rear of the bumper tube and install two of the 5/16" bolts and nylock nuts. **Do not tighten.**
- 5. Install the two 7/8" u-clamps around the front of the main bumper cross tube. Install the other two 5/1" bolts through the clamps, spacers and winch mount and install the nylock nuts. Tighten all bolts securely.
- 6. Attach roller fairlead and winch with hardware provided from winch manufacturer and wire to their specifications.

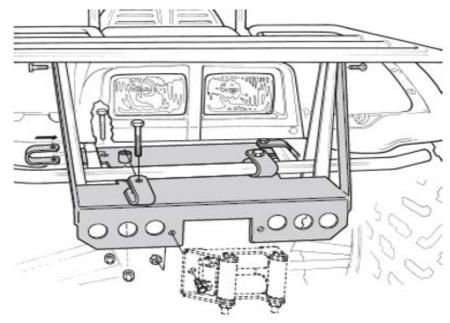

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).