

Copyright © 2021 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-936, 52-936BK

TOUR RACK

REVISED 4/26/2021

FITMENT: HONDA GOLDWING TOUR 2018-2020

TOOLS NEEDED:	DRILL	5/16" DRILL BIT	4MM ALLEN WRENCH	REMOVABLE THREAD LOCK	MASKING TAPE
	PENCIL/MARKER				




PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *USE REMOVABLE THREAD LOCKER ON ALL FASTENERS*
ESTIMATED INSTALLATION TIME: 30 TO 45 MIN.

INSTALLATION:

- CLEAN THE TRUNK LID.
- USING A TAPE MEASURE FIND THE CENTER OF THE TRUNK LID. USE MASKING TAPE TO MARK THE CENTER LINE. SEE FIG.1.
- HOLD THE RACK ABOVE THE TRUNK LID IN THE POSITION YOU WISH TO MOUNT IT. USE THE CENTER LINE MARK AS REFERENCE POINT.
- PLACE FOUR PIECES OF MASKING TAPE ON THE TRUNK LID WHERE THE LEGS WILL TO BE. SEE FIG. 1.
- SET THE RACK ON THE TRUNK LID WITH THE LEGS RESTING ON THE MASKING TAPE. CAREFULLY CHECK THE ALIGNMENT OF THE RACK. SEE FIG. 2.
- USING A MARKER CIRCLE AROUND THE BOTTOM OF EACH LEG ON THE MASKING TAPE. SEE FIG. 3.
- REMOVE THE RACK AND MARK THE CENTER OF EACH CIRCLE AS SHOWN IN FIG. 4. MEASURE THE MARKS TO MAKE SURE THEY ARE CENTERED.
- USE A 5/16" DRILL BIT TO DRILL A HOLE ON EACH CENTER MARK THROUGH BOTH LAYERS OF THE TRUNK.
- REMOVE THE MASKING TAPE AND ANY BURRS. REMOVE THE RUBBER COVERS ON THE LEGS OF THE RACK.
- INSTALL THE RACK TO THE TRUNK USING THE SUPPLIED HARDWARE AS SHOWN IN FIG. 5.
- ROTATE THE ANGLED SPACERS TO BEST FIT THE TRUNK LID AS YOU TIGHTEN EACH OF THEM.

NOTICE

DO NOT EXCEED THE LOAD CAPACITY THAT IS SPECIFIED BY THE VEHICLE MANUFACTURER. EXCESSIVE LOADING ON THE TRUNK LUGGAGE RACK MAY CAUSE LOSS, DAMAGE TO THE MOTORCYCLE OR INJURY. BIG BIKE PARTS IS NOT RESPONSIBLE FOR LOSS, DAMAGE OR INJURY CAUSED DUE TO EXCESSIVE LOADS OVER THE VEHICLE MANUFACTURER'S LOAD SPECIFICATIONS ON THE LUGGAGE RACK.

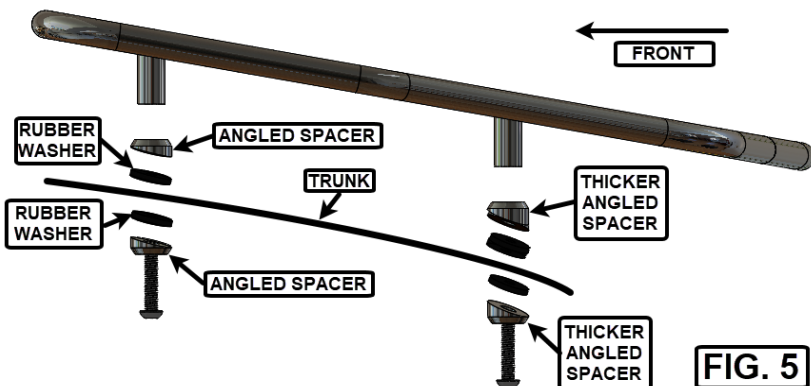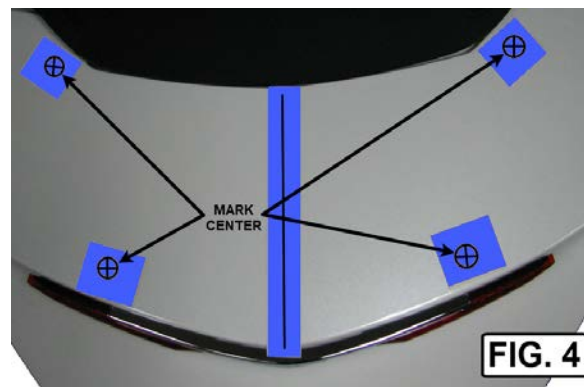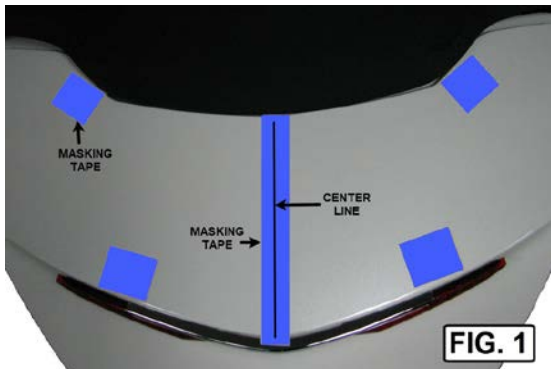

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.