



INSTALLATION INSTRUCTIONS

FUEL PETCOCK

CAUTION: MAKE SURE IGNITION SWITCH IS OFF AND BATTERY GROUND (-) CABLE IS REMOVED FROM THE BATTERY DURING INSTALLATION.

STEP 1 REMOVE OLD FUEL PETCOCK

1. Drain the gas tank.
2. Disconnect fuel line from fuel petcock.
3. Carefully loosen and remove old fuel petcock.

STEP 2 INSTALL SPYKE FUEL PETCOCK

4. Install Spyke Fuel Petcock and start the thread but do not fully tighten down.
5. Adjust the knob part of the petcock to your liking.
6. Reattach fuel line from carburetor.
7. Tighten down fuel petcock.

Your install is Complete!

For technical assistance call 909/547-9058

**PerTronix, LLC.
440 E. Arrow Hwy.
San Dimas, CA 91773**



LIMITED WARRANTY

PerTronix, LLC. Warrants to the original Purchaser of its solid-state ignition system (product) that the module, trigger rotor and wiring (components) shall be free from defects in material and workmanship for a period of (12) months from the date of purchase.

If within the period of the foregoing warranty PerTronix finds, after inspection, that the product or any component thereof is defective, PerTronix will, at its option, repair such products or component or replace them with identical or similar parts PROVIDED that within such period Purchaser Promptly Notifies PerTronix, in writing, of such defects.