



Shock springs can be changed by pushing down on the handle of the tool with it installed as shown in the illustration.

This tool has two different shoes, one for left hand wound springs, the other for right hand wound springs.