

SLP Hot/Cold Air Vent

The SLP Hot/Cold Air Vent is designed to be installed on any flat surface for hot air escape or reversed for cold air inlet.

Installation Instructions

1. Locate a flat or near flat surface in the area that you want to install the vent.
2. Mark a 2 1/8 x 10 inch hole in the area that you desire to place the vent. If you are mounting it as a hot air escape, the vent will overlap this cutout in the front by about one inch and in the rear by about 2 inches. If you are mounting it as a cold air inlet, it will overlap the cutout by 2 inch in the front and 1 inch in the rear. It is very important to double check the placement before actually cutting the hole.
3. Cut the previously marked opening by using either a jigsaw or razor knife. Make sure to check behind the surface where you are cutting to locate any obstacles such as wiring, metal bracketry, etc.
4. Place the vent into the opening and mark the position of the five screw holes.
5. Drill out the five screw holes using a 3/16 inch drill bit.
6. Mount air vent to surface using five screws and speed nuts provided.