

RGB LED Guide



- Device must be Bluetooth capable and Bluetooth must be turned on to control LED's.

App install method:

Scan QR code on Control Box.



Before contacting customer service, review possible problems:

- Verify that Fuse is not blown.
- Ensure that all connections, including power, are secure and connected.

When done operating, Bluetooth connection must be disconnected.

After 2 hours, lights will enter "sleep mode"; reset to continue useage.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

 
 
 
Thank You

For Choosing

SUPERATV.COM[®]


if only a portion or small amount of LED's are active, see "Chase Settings",
pg. 11, in attached PRO RGB App Details guide



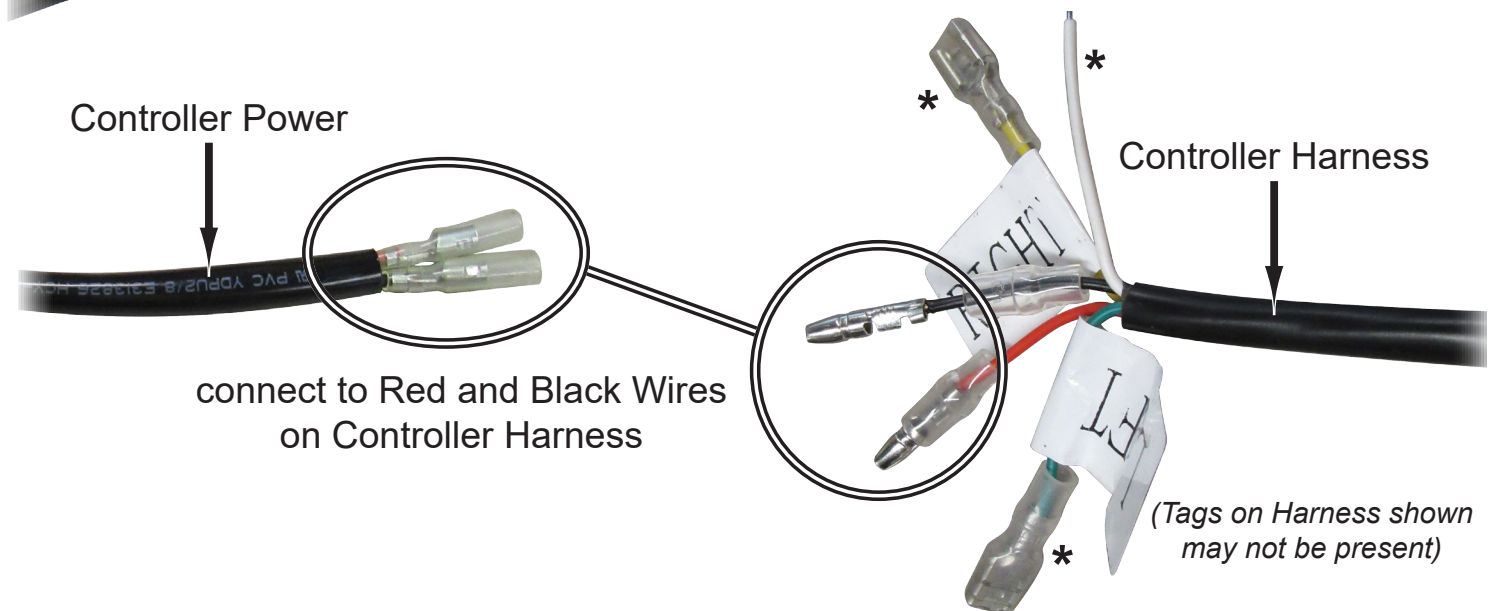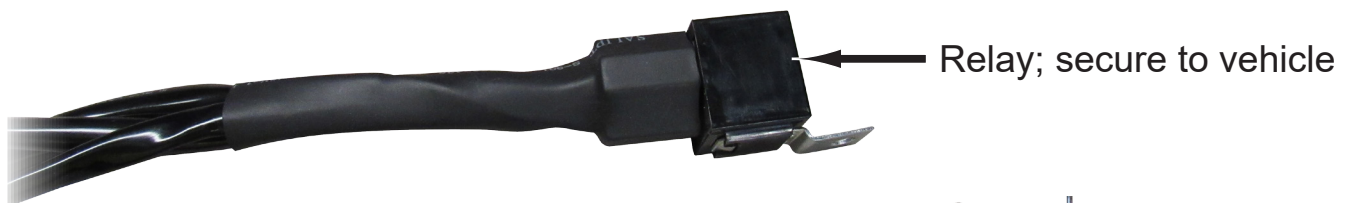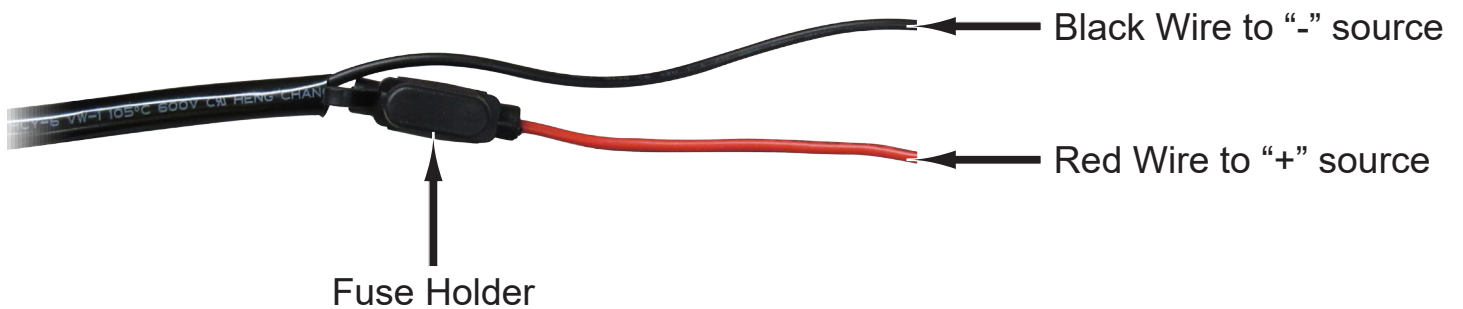



 Turn Signal or Brake Light Wiring (optional)

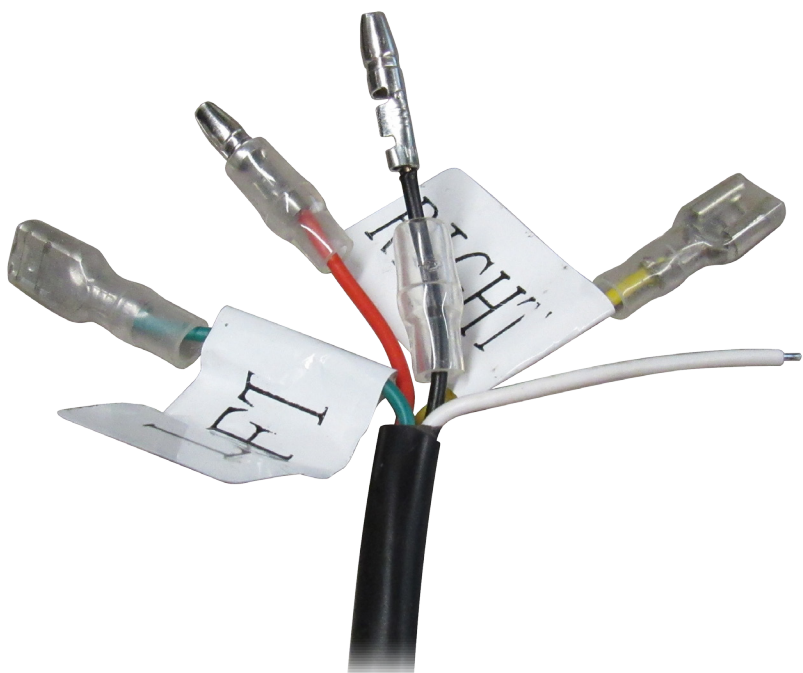

Color	Description
Yellow	Right Turn Signal
Green	Left Turn Signal
White	Brake Light

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

PRO RGB App Details

RF Remote Control

Button	Function
On	turn lighting on
AUTO	activate demo mode
Off	turn lighting off
SPEED +	increase mode speed
MODE +	switch to next mode
BRIGHT +	increase lighting brightness
SPEED -	decrease mode speed
MODE -	switch to previous mode
BRIGHT -	decrease lighting brightness
Purple	press and hold for 5 seconds to lock remote control
White	press and hold for 5 seconds to unlock remote control
Colors	press to display correspondong light color



Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

 
Read instructions and view illustrations before beginning.

Thank You


For Choosing


SUPERATV.COM®




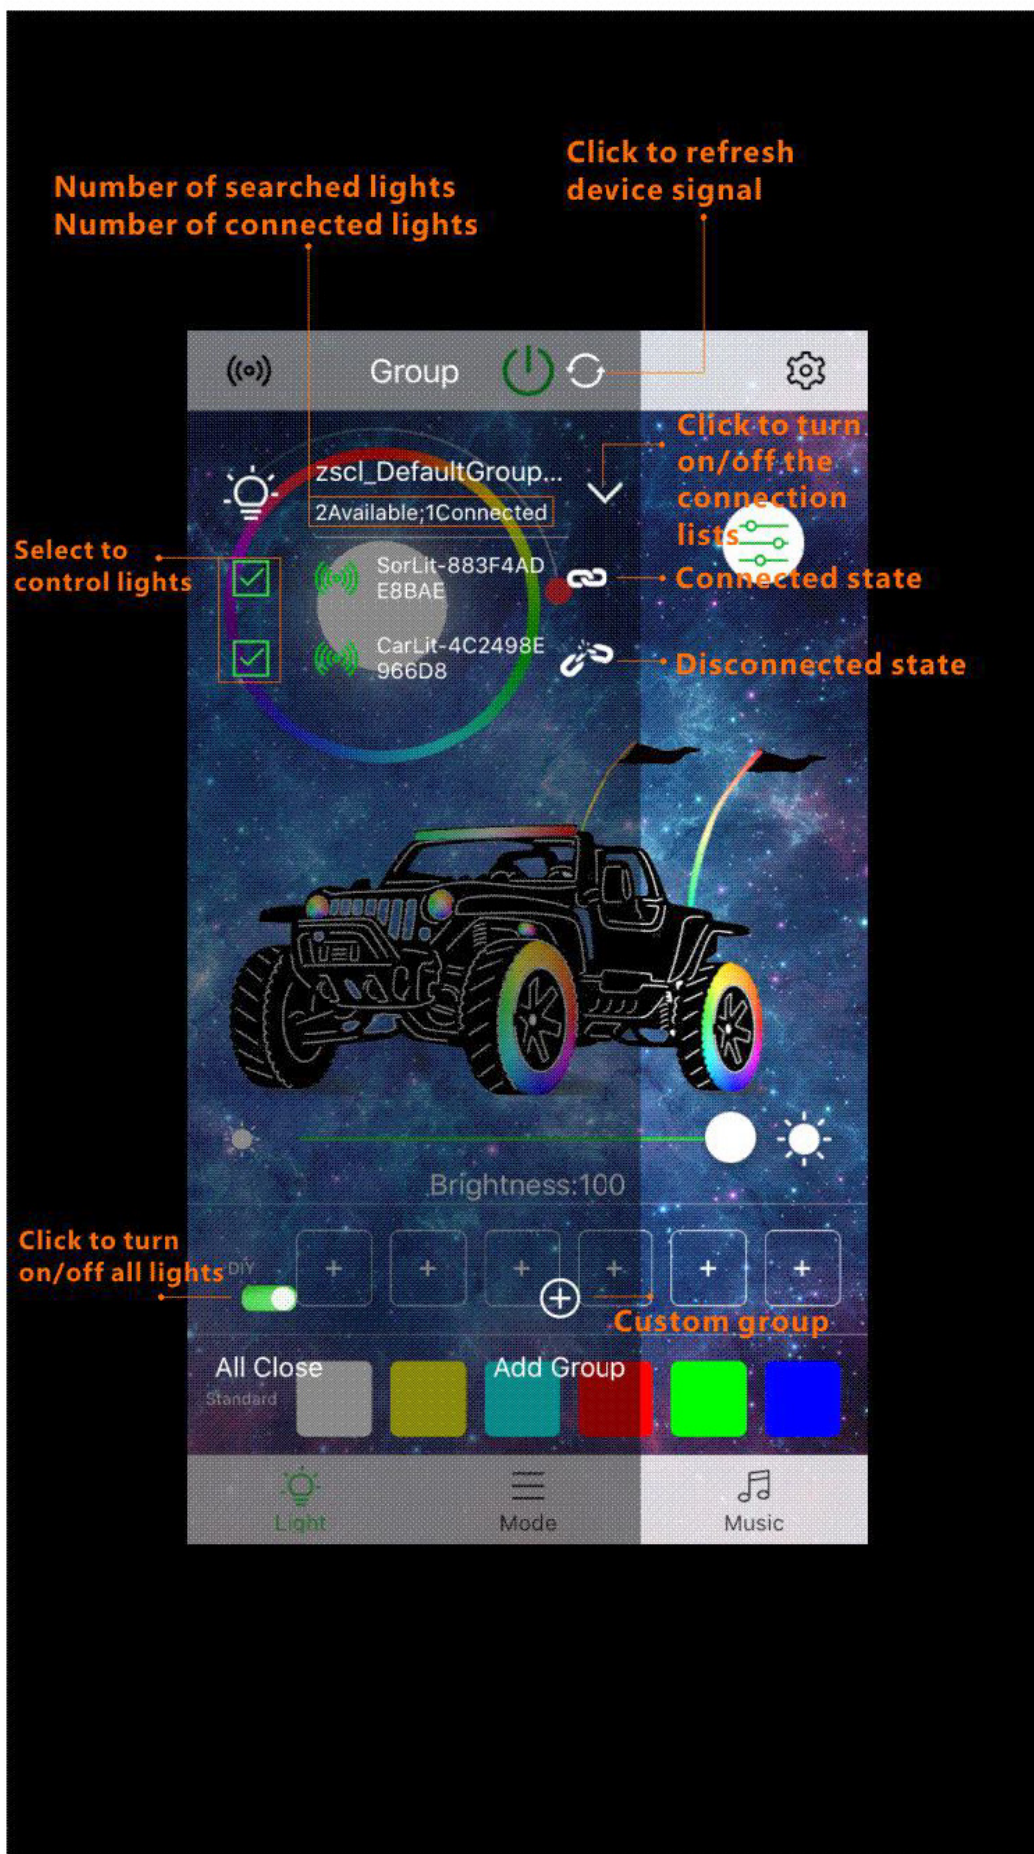


     
Click to enter the device
color and pixel setting page

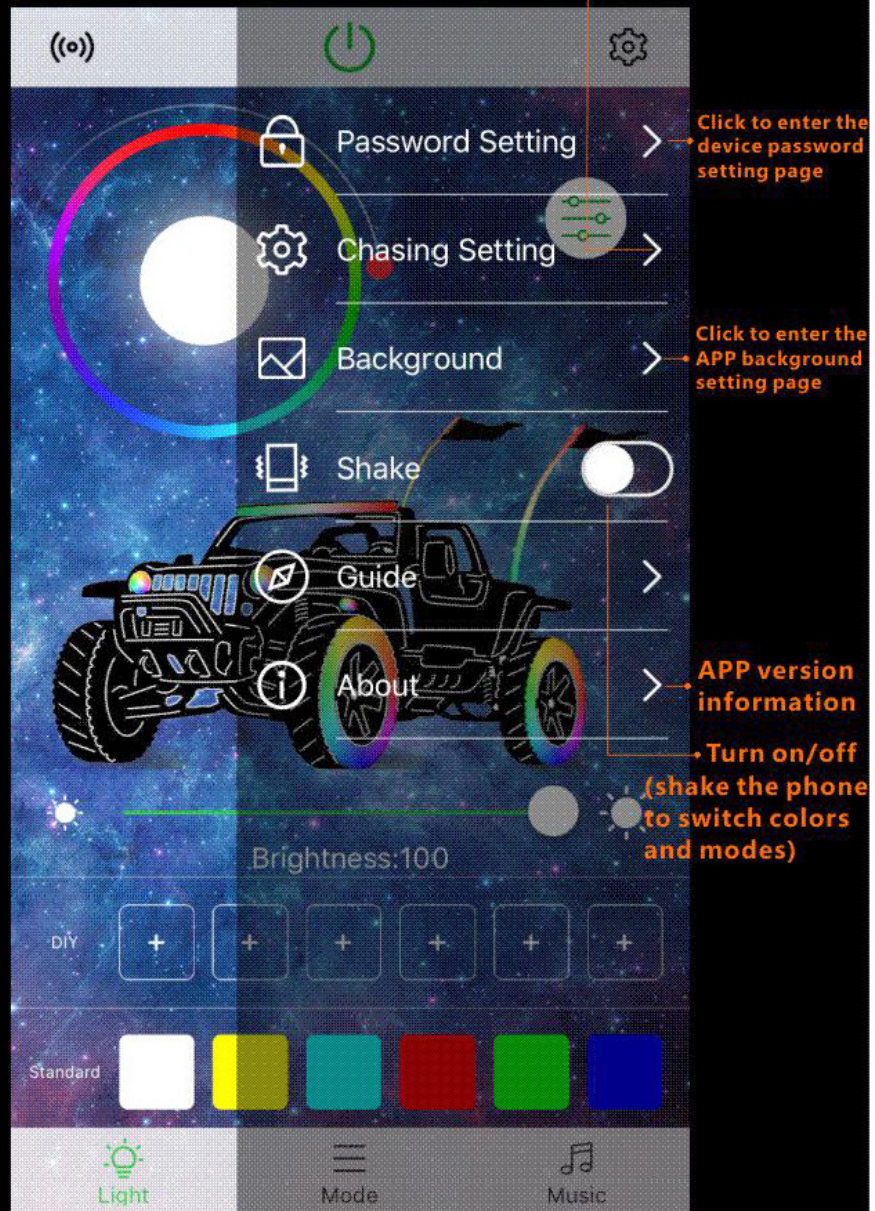 


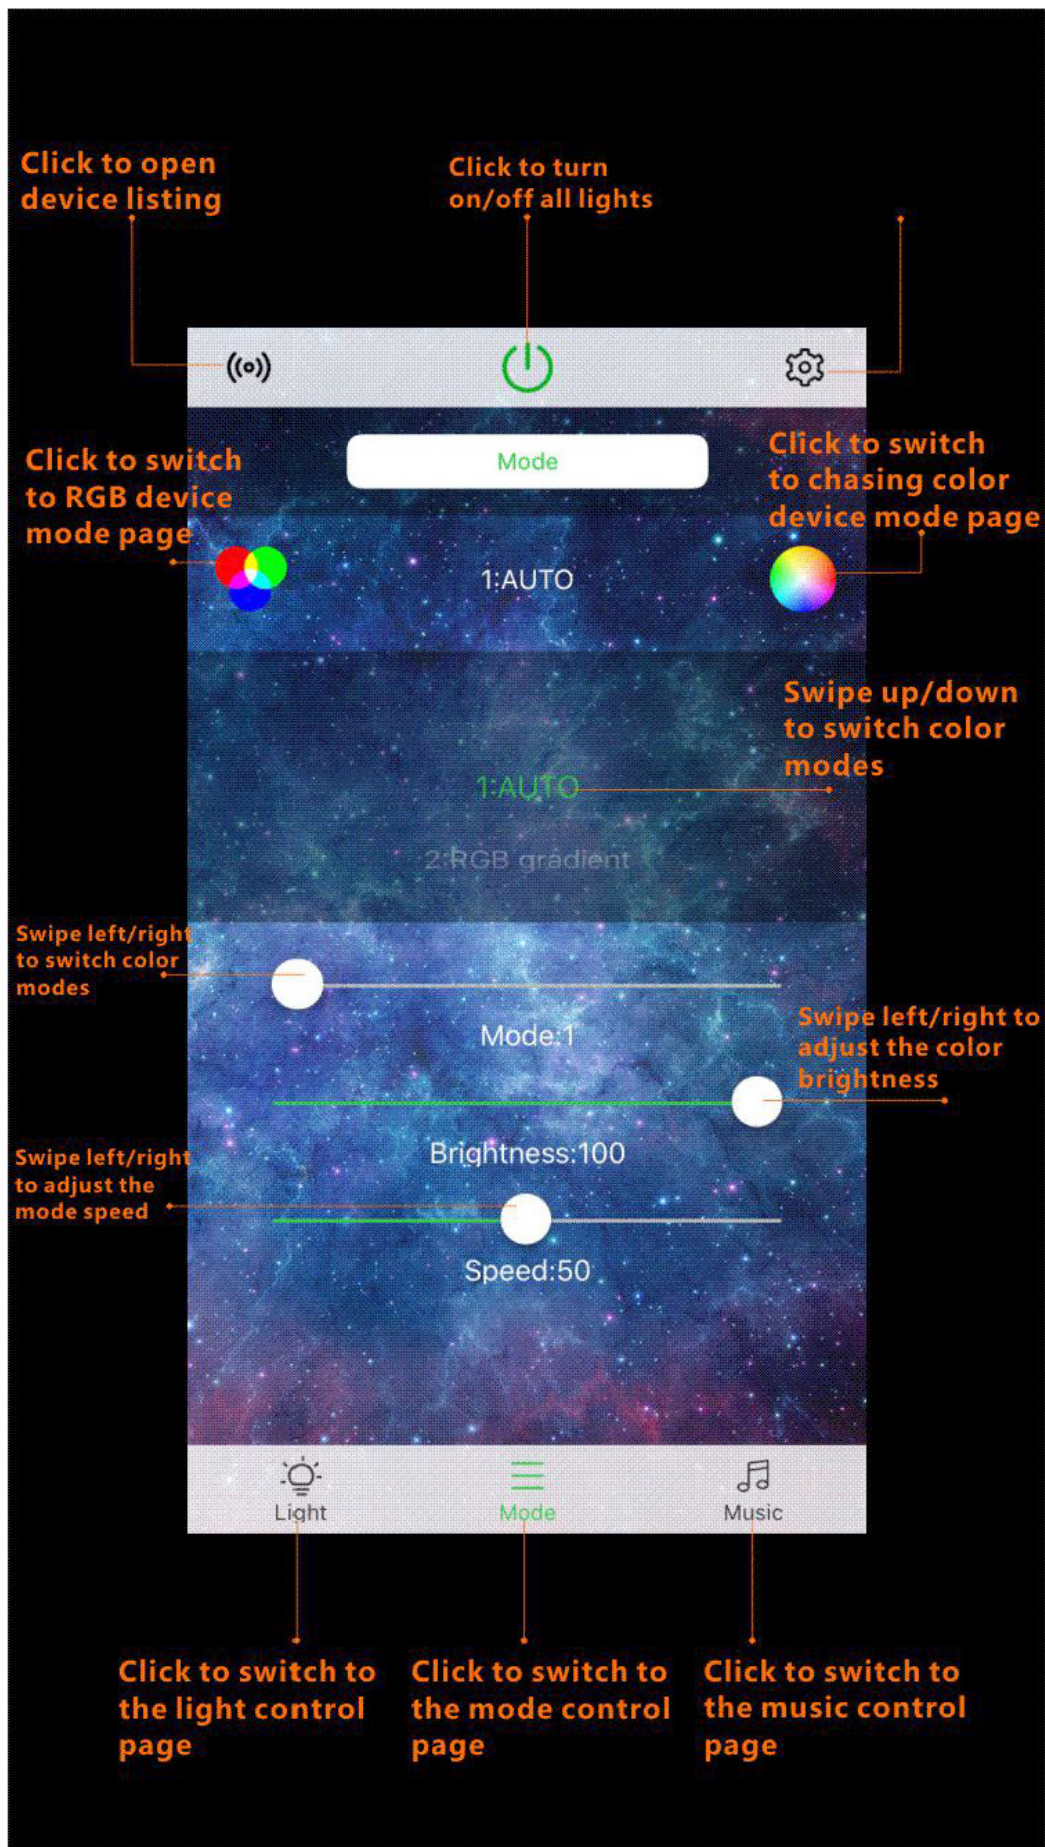

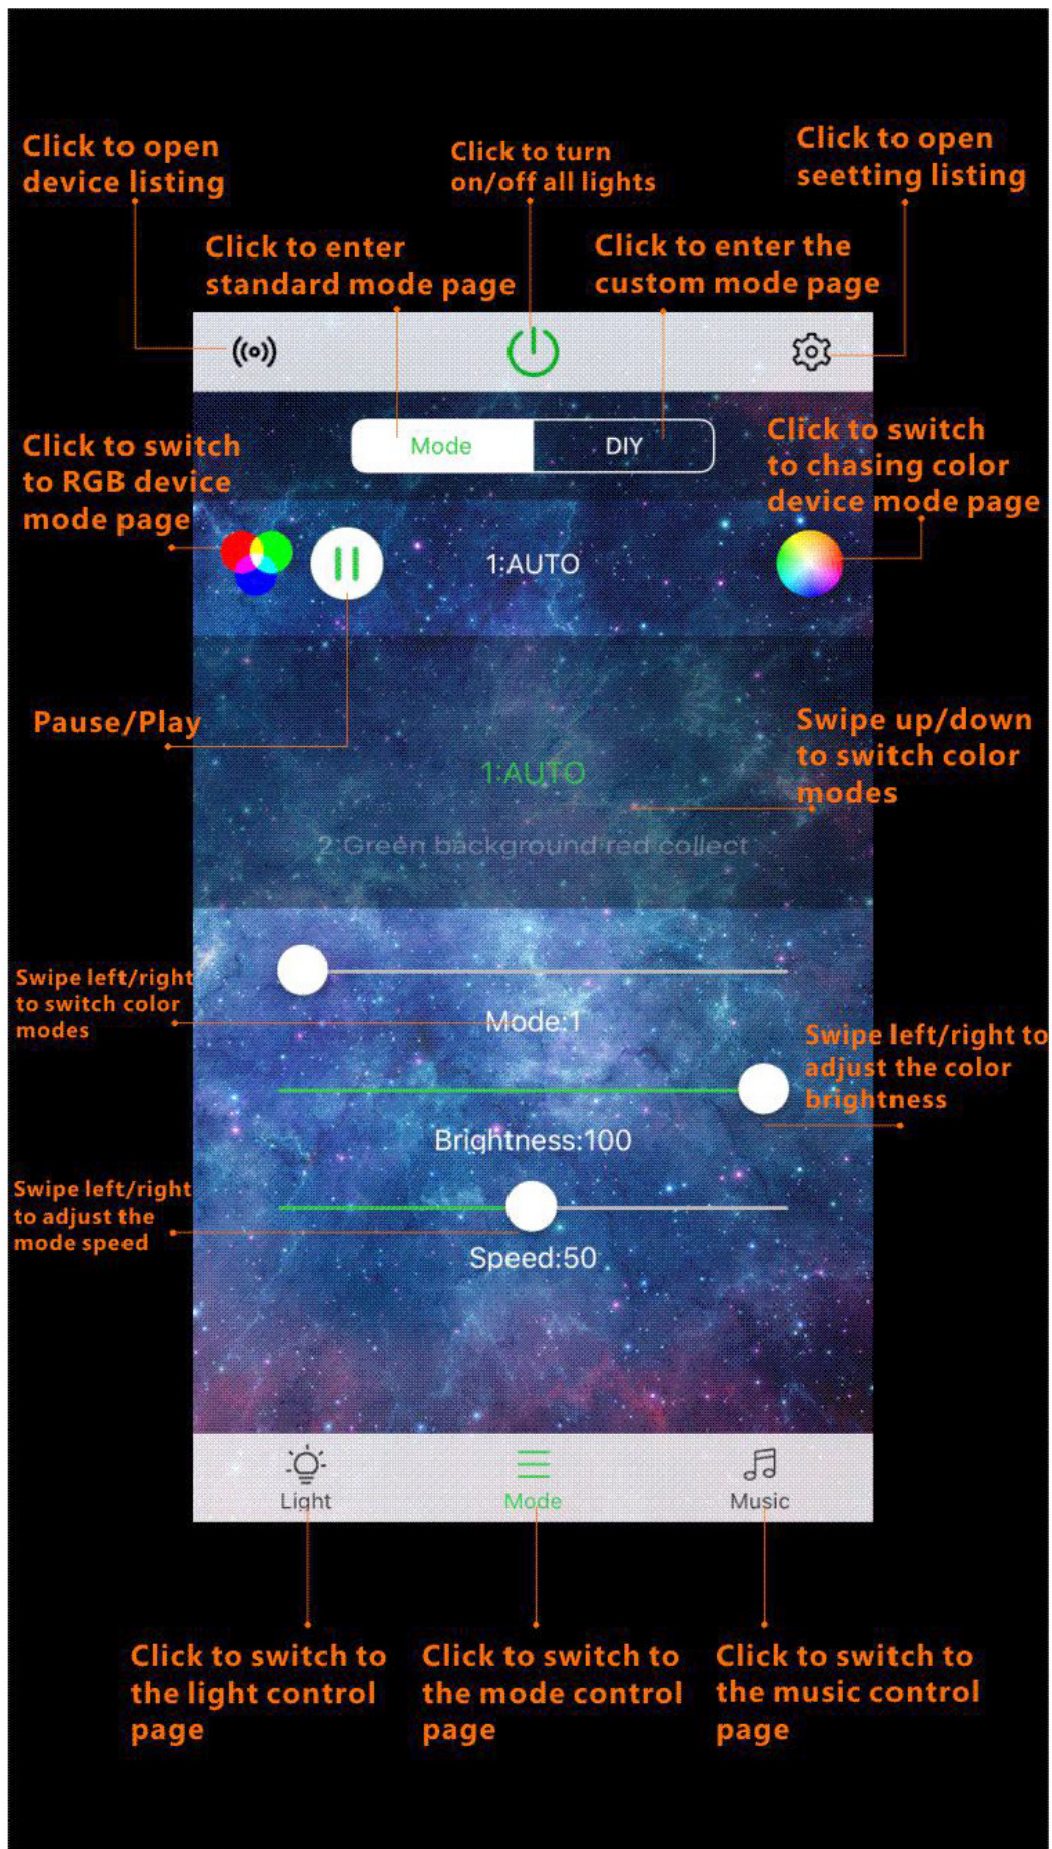

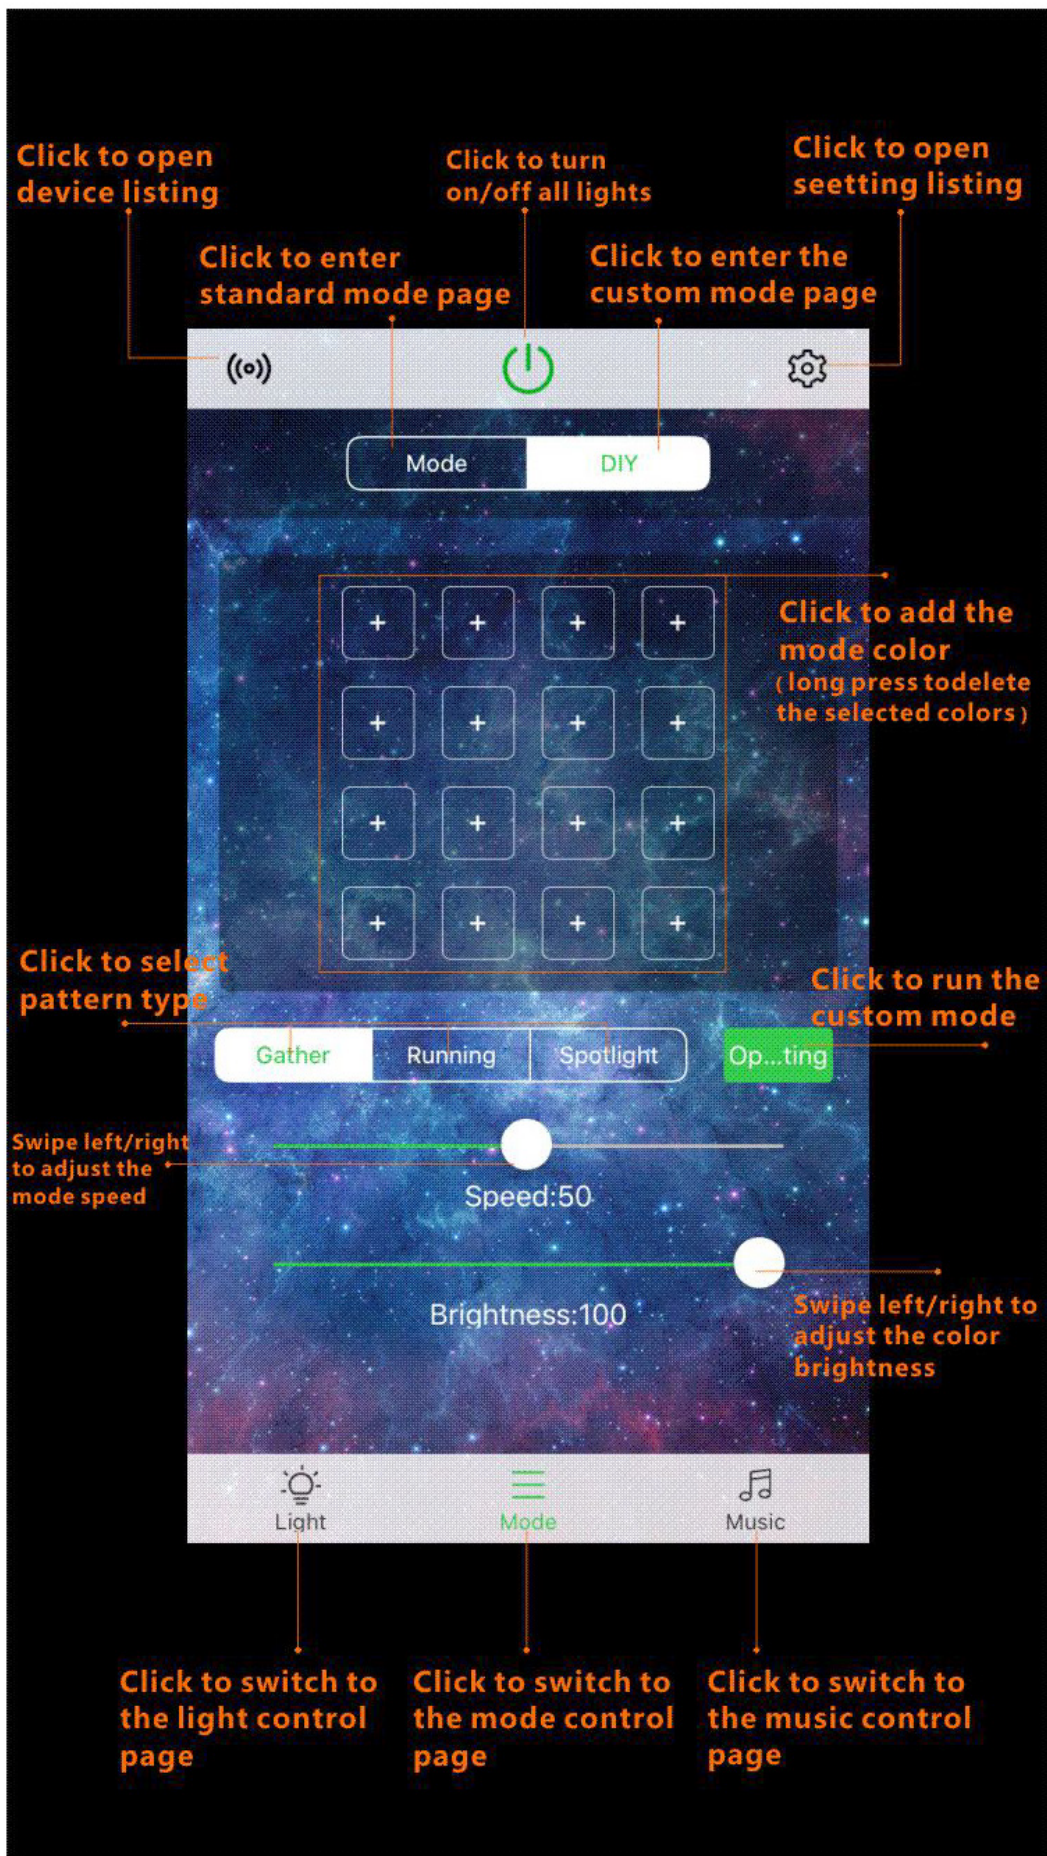

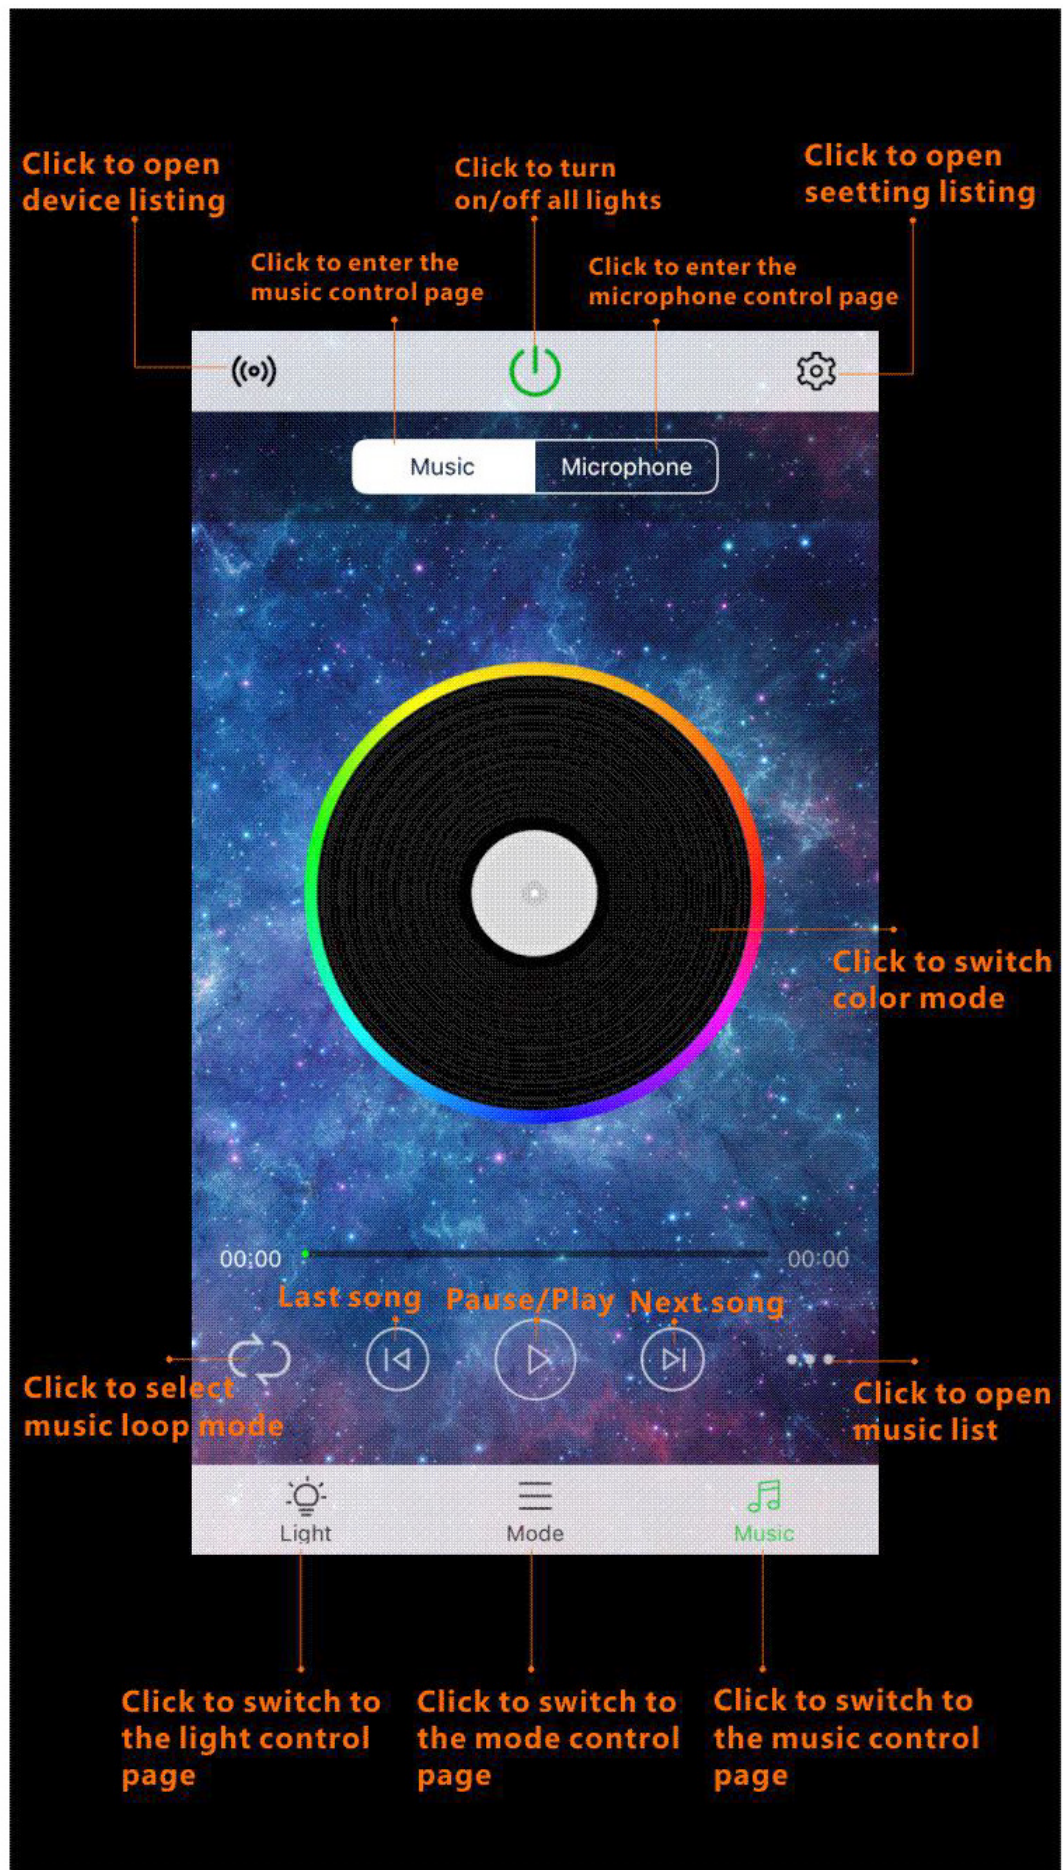

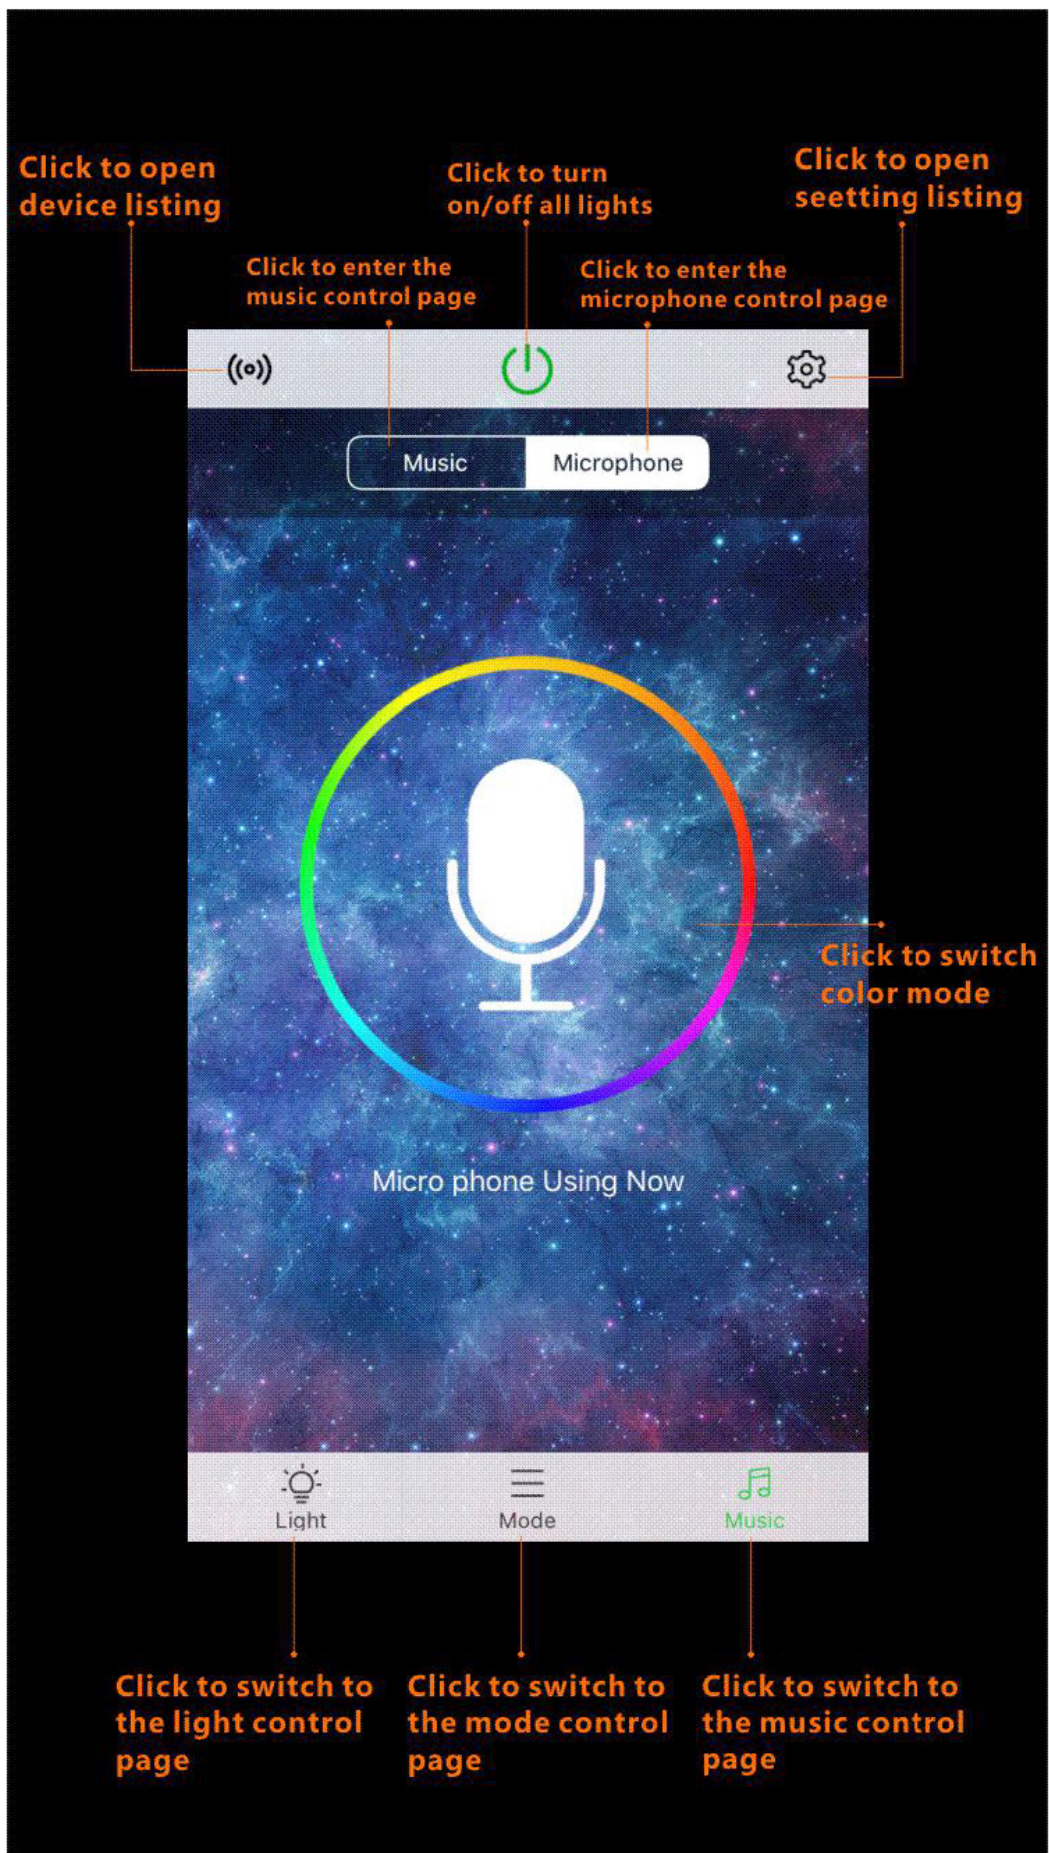

Click to return to the previous page

Swipe up/down to select device

Click to save new password

< Password Setting

↑ Please scroll to select

Original Password: Input Original Password

New Password: Input New Password

 
New Password: Input New Password

Setting

Click to input the original password
(Original password: 123456)

Click to input new password

Reinput new password

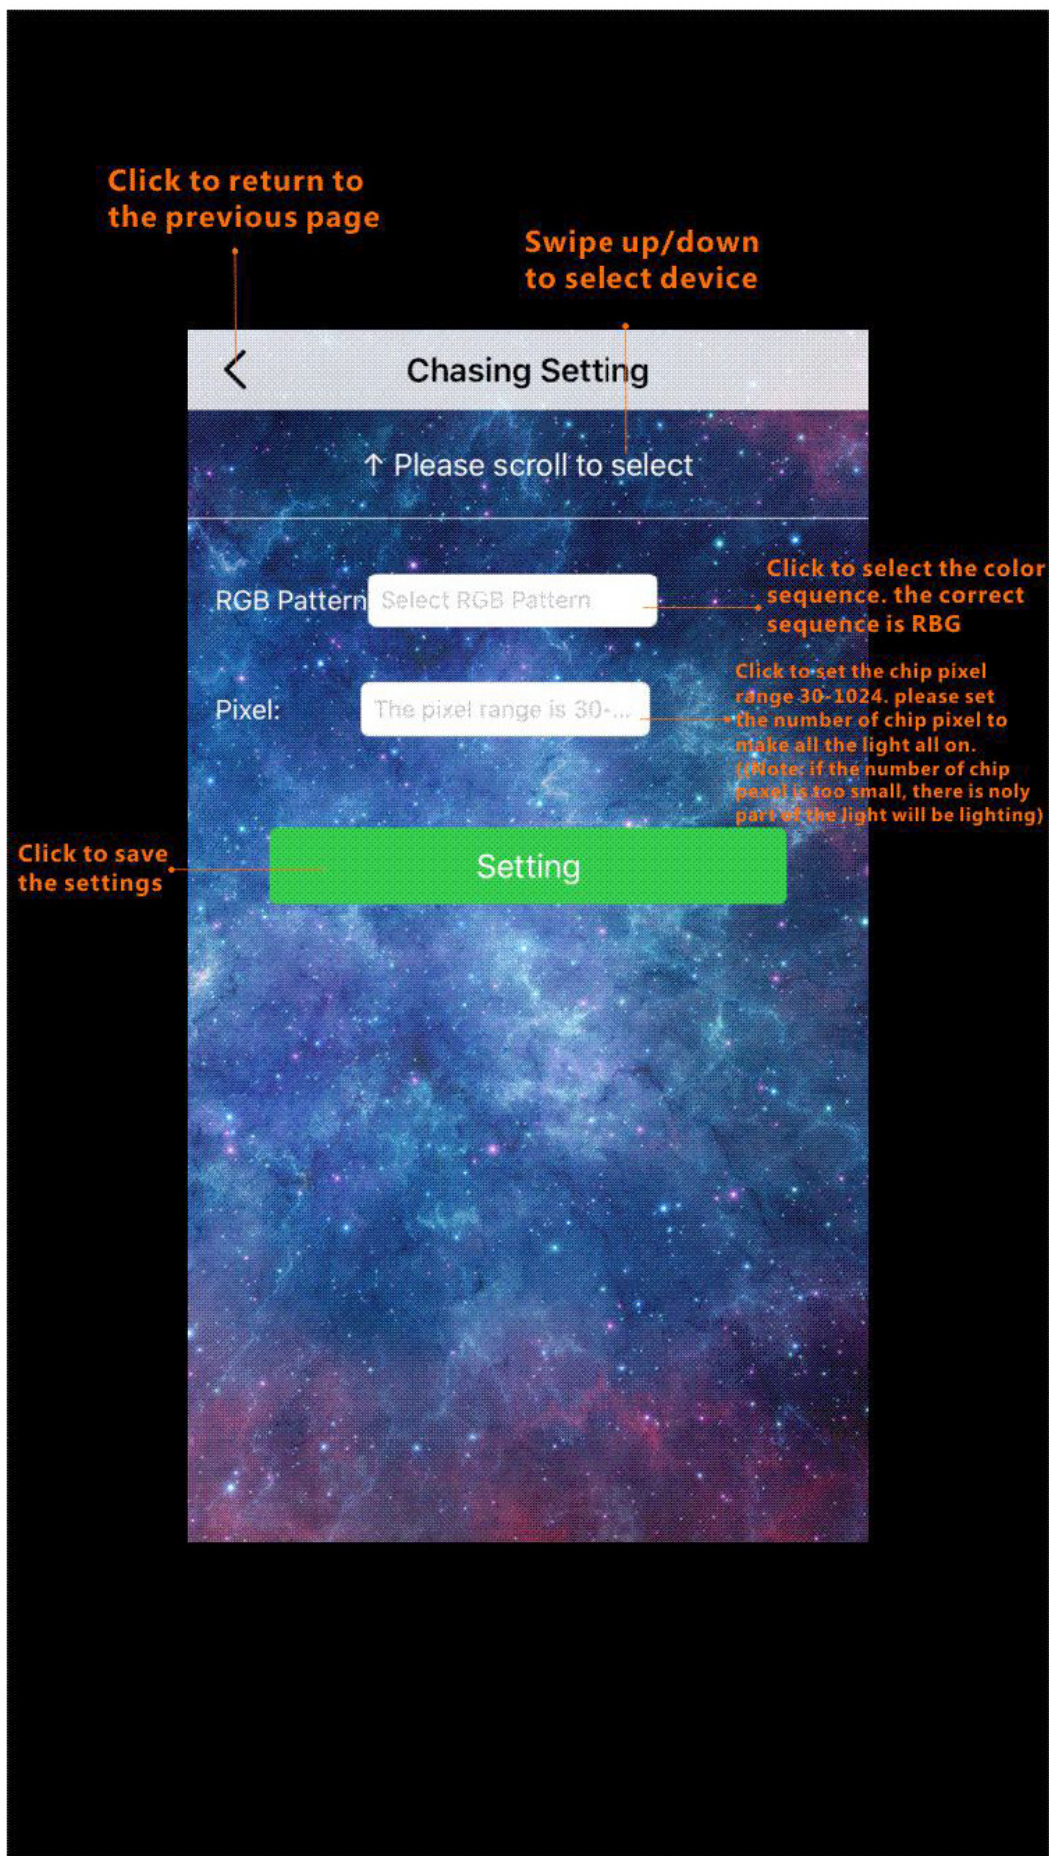

Click to return to
the previous page



APP version information

Click to return to the previous page

Swipe up/down to select device

The image shows a mobile application interface titled "Light Setting". At the top, there is a status bar with signal strength, Wi-Fi, and battery icons, and a time of 21:46. Below the status bar is a navigation bar with a back arrow on the left and the title "Light Setting" in the center. The main content area has a dark blue space background with stars and nebulae. At the top of this area, there is a white arrow pointing up and the text "Please scroll to select". Below this, there are four settings, each with a label and a white input field: "Device Name: Input Device Name", "Device Location: Select Installation Pos...", "Turning: Select Mode", and "Brake: Select Mode". To the right of each input field is an orange arrow pointing to it, with a corresponding orange text annotation. At the bottom of the settings area, there is a large green button with the text "setting". To the left of this button is an orange arrow pointing to it, with a corresponding orange text annotation.

Device Name: Input Device Name

Device Location: Select Installation Pos...

Turning: Select Mode

Brake: Select Mode

setting

Click to customize device name

Click to select the device location
(Synchronize color between the control light with the external device)

Click to choose the turning light color
(amber / red)

click to choose the braking light mode
(steady red / slow flash red / blasting flash red)

Click to save settings

