


Arctic Cat® UTV

Installation Instructions - Accessory Kit

Rear Panel Kit (1436-363)

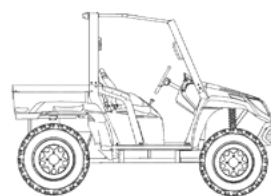

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: All Prowler models


Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Upper Rear Panel
N/A	1	Lower Rear Panel
N/A	4	Fender Washer
N/A	8	Flat Washer
N/A	4	Clamp (1 inch)
N/A	4	Clamp (3/4 inch)
N/A	10	Cap Screw
N/A	10	Lock Nut
0453-625	1	Instructions

■ **NOTE:** On 2009 XTZ or 2010 Prowler models, the lower rear panel will not be installed.

1. Fasten the Lower Rear Panel to the Upper Rear Panel using four Cap Screws, four Fender Washers, and four Lock Nuts. See note above.
2. Raise the cargo box; then place the assembled Rear Panel assembly onto the rear canopy tubes.
3. With the rear panel in position, locate the four 1-in. Clamps and place onto rear canopy tubes. See Fig. 1.


Fig. 1

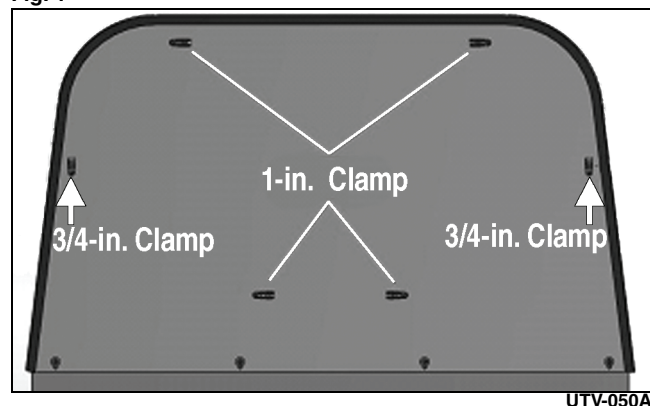

4. Install two 3/4-in. Clamps onto the head rest bar. See Fig. 1.

■ **NOTE:** If using a canvas roof, place the remaining two 3/4-in. clamps on the backside of the rear panel for auxiliary mounting strap locations. See Fig. 2.

Fig. 2

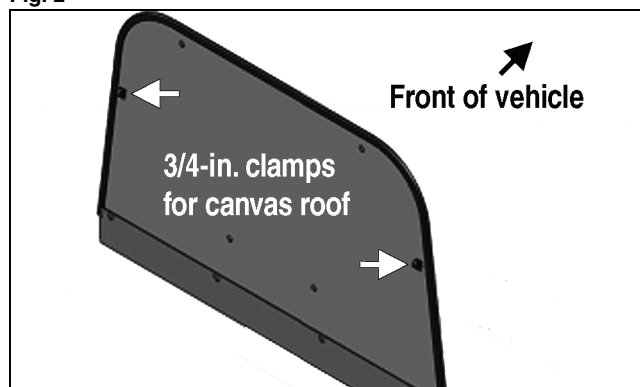

5. With all the clamps in place, loosely fasten the rear panel to the clamps and roll frame using six cap screws, six Flat Washers, and six lock nuts.
6. Adjust rear panel to obtain proper seal; then fully tighten all hardware.

