


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Shoulder Bag Kit (1436-770)

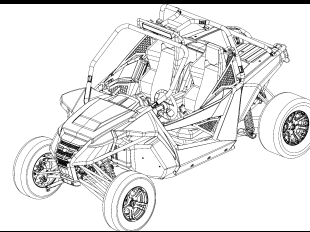

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Shoulder Bag
0453-770	1	Instructions

1. Remove both seats; then remove all six machine screws shown below. See Fig. 1.

Fig. 1



ROV-020A

2. Place Shoulder Bag into position and secure using the existing machine screws in the order shown below. See Fig. 2.

Fig. 2



ROV-037A

3. Install both seats.

