


# Arctic Cat® Wildcat 4

## Installation Instructions - Accessory Kit

### 2nd Battery Hold Down Kit

(p/n 1436-810)

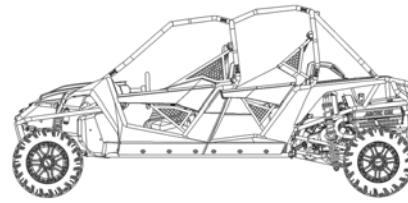

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: Wildcat 4

##### Kit includes:

p/n	QTY	DESCRIPTION
0123-903	3	Cable Tie
0445-082	1	Hardware Kit
0445-105	1	Positive Battery Cable
0445-106	1	Negative Battery Cable
0541-085	2	Battery Hold Down Bracket
0645-327	1	Positive Cable Terminal Boot
8050-252	4	Flat Washer
8410-830	4	Cap Screw
8427-805	4	Nyloc Nut
0453-881	1	Instructions

■ NOTE: This kit works with batteries (p/n 1436-358 or 1436-691) which are sold separately.

1. Remove the four cap screws securing the right and left rear seats. Remove the seats; then remove the front two seats.
2. Remove the front and rear center consoles. Retain all hardware.
3. Remove an appropriate amount of torx-head screws securing the rear right portion of the main skid plate to the frame.

4. Position the 2nd battery (with the terminals facing forward) over the four mounting holes in the floor (under the right rear seat); then secure the battery to the floor using both Battery Hold Down Brackets, four Cap Screws, four Flat washers, and four Nyloc Nuts. Tighten securely. See Fig. 1.

#### CAUTION

Always connect the positive battery cables first; then connect the negative cables.

5. Install Positive Cable Terminal Boot over the end of the positive battery cable.
6. Route Positive Battery Cable and Negative Battery Cable along the frame and to the existing battery; then secure the cables using Hardware Kit and the existing screws on the existing battery. **Cable Tie the cables away from any moving components.**
7. Install the center consoles, and all four seats.

Fig. 1



ROV-277