


Arctic Cat® Wildcat Trail

Installation Instructions - Accessory Kit

Rear Fender Flare Kit

(p/n 2436-004)

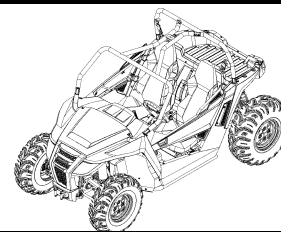


■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat Trail


Kit includes:

Ref. No.	p/n	QTY	DESCRIPTION
1	8468-625	4	Button-Head Screw
2	8050-223	4	Fender Washer
3	8427-605	4	Flange Nut
4	2441-943	1	Left-Side Fender Flare
5	2441-942	1	Right-Side Fender Flare
N/A	1453-055	1	Instruction

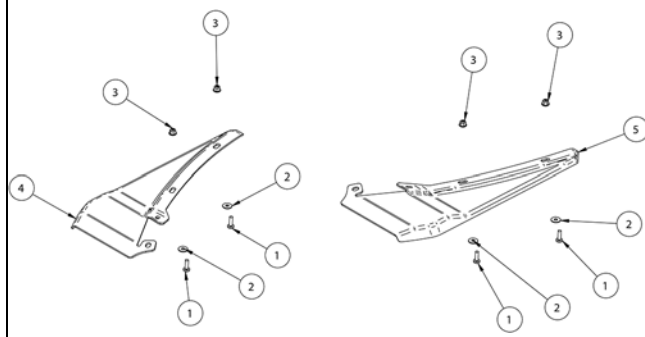

1. Remove the torx screws securing the cargo box to the rear fascia; then remove the torx screw securing the rear left fender to the cargo box. See Fig. 1.


Fig. 1

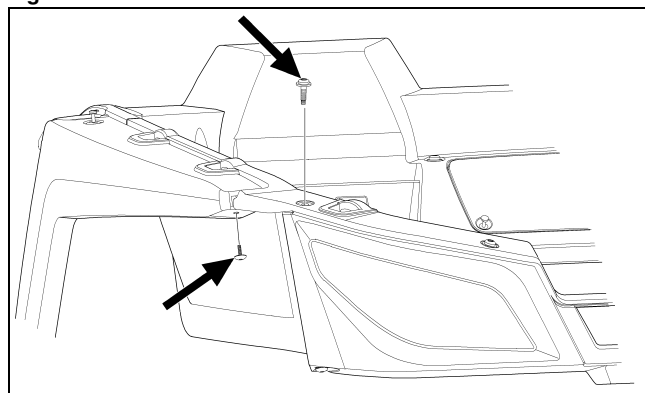

0748-650

2. Position Left-Side Fender Flare with the mounting location and loosely secure using the torx screw from step 1. See Fig. 2.


Fig. 2

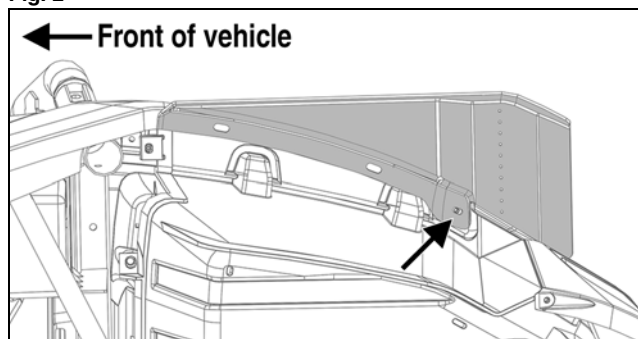

ROV-623A

3. Mark the two front mounting locations on bottom side of the left rear fender; then remove the flare. Using a 3/16-in. drill bit, drill both mounting locations.
4. Secure the flare to the rear fascia and left rear fender using the torx screws from step 1 and two Button Head Screws, Fender Washers, and two Flange Nuts. Tighten securely. Repeat for opposite side. See Fig. 3.


Fig. 3

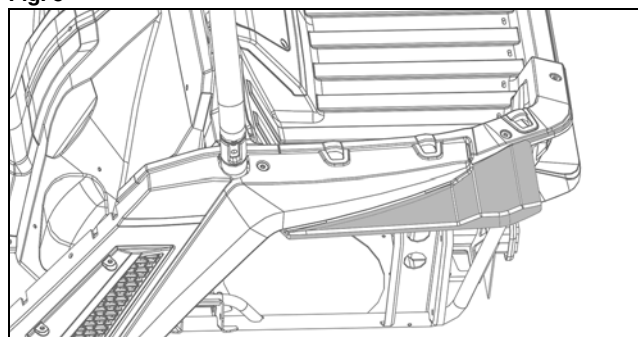

ROV-625

■ **NOTE:** If Deluxe Rear Steel Bumper is installed, cut along the dotted line on the bottom side of the flare or use the attached templates. See Fig. 4.

Fig. 4

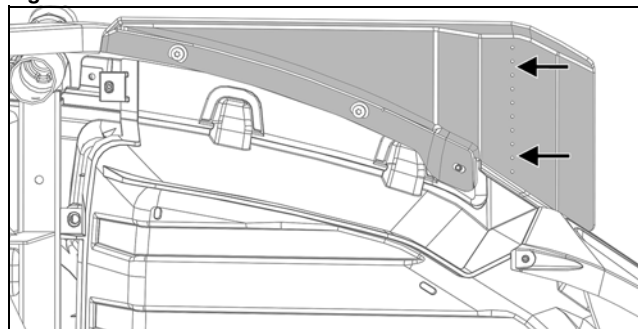

ROV-624A

Wildcat Trail Fender Flares (2436-004)


Trim for fitment with Steel Deluxe Rear Bumper (1436-980).

Trim per instructions or use these alternate templates.

The line below should be
6 inches long when
printed to 100% scale.
(Use a ruler to verify)



Left side flare

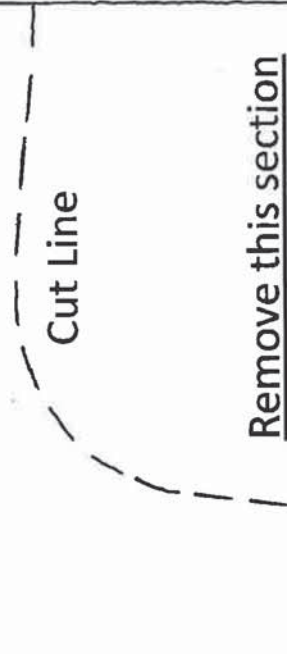

Right side flare

