


Arctic Cat® Wildcat Trail

Installation Instructions - Accessory Kit

Shoulder Bag Kit

(p/n 2436-022)

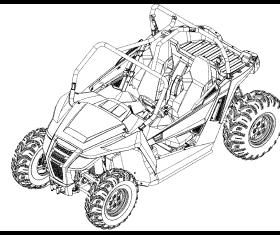

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat Trail

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Shoulder Bag
1453-025	1	Instructions

1. Remove both seats; then remove the two machine screws shown below. See Fig. 1.

Fig. 1



ROV-392A

2. Place Shoulder Bag into position and secure the top using the existing machine screws; then install the snaps into the rear panel aligning with the snaps in the bag. See Fig. 2.

Fig. 2



ROV-037A

3. Install both seats.

