


Arctic Cat® Wildcat Trail

Installation Instructions - Accessory Kit

Overhead Bag Kit

(p/n 2436-026)

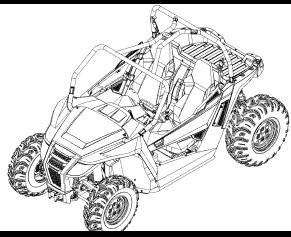

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat Trail

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Front Overhead Bag
N/A	1	Rear Overhead Bag
1453-003	1	Instructions

1. Place Front and Rear Overhead Bags over the top ROPS tubes.

Fig. 1



ROV-410

2. Connect the velcro straps around each tube. See Fig. 1.

■ NOTE: Maximum carrying capacity is 2 lbs.

