

Copyright[®] 2014 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-165**BEVERAGE HOLDER****CAN-AM SPYDER RT (SE MODELS ONLY) 2010-2015**

9/25/2014

TOOLS NEEDED: T15 TORX DRIVER

2.5 MM ALLEN WRENCH

2 MM ALLEN WRENCH

THREAD LOCK

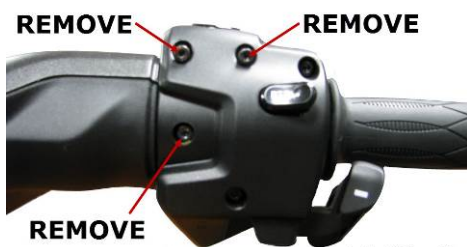
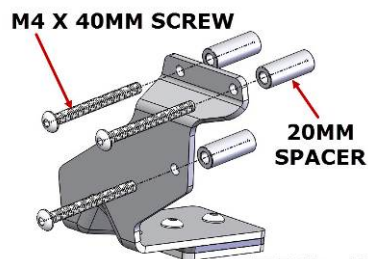
PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: USE THREAD LOCK ON ALL FASTENERS.

NOTE: DOES NOT FIT MODELS WITH A MANUAL CLUTCH LEVER.

INSTALLATION:

1. USING A T15 TORX DRIVER REMOVE THE THREE SCREWS ON THE FRONT OF THE LEFT HANDLEBAR CONTROL. SEE FIG. 1. THESE WILL NOT BE REUSED.
2. APPLY THREAD LOCK NEAR THE END OF THE THREE M4 X 40MM SCREWS SUPPLIED WITH THE MOUNT.
3. ASSEMBLE THE M4 X 40MM SCREWS AND SPACERS AS SHOWN IN FIG. 2.
4. USING A 2.5MM ALLEN WRENCH INSTALL THE THREE SCREWS INTO THE LEFT HANDLEBAR CONTROL AS SHOWN IN FIG. 3 AND TIGHTEN.
5. SLIDE BEVERAGE HOLDER INTO MOUNT AND INSTALL THE M3 SCREW AS SHOWN IN FIG. 4

**FIG. 1****FIG. 2****FIG. 3****FIG. 4**

Scan code with
your smartphone
to view video

