


PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

**INSTALLATION:**

1. REMOVE THE KEY FROM THE IGNITION SWITCH.
2. USING BOTH HANDS GRAB THE REAR CORNERS OF COMBINATION SWITCH COVER AND PULL STRAIGHT UP. SEE FIG. 1
3. LAY THE COMBINATION SWITCH COVER FACE DOWN ON A CLEAN TOWEL OR RAG.
4. LINE UP THE TABS ON THE OLD KEY GROMMET WITH THE TWO CUTOUTS IN THE COMBINATION SWITCH COVER. SEE FIG. 2
5. SLIDE THE KEY GROMMET TO ONE SIDE AS SHOWN IN FIG. 2.
6. LIGHTLY PUSH THE TAB DOWN AND SLIDE THE OLD KEY GROMMET OFF.
7. TAKE THE NEW CHROME KEY GROMMET INSTALL IT IN REVERSE ORDER.
8. REINSTALL COMBINATION SWITCH COVER LINING UP THE NEW CHROME KEY GROMMET WITH THE IGNITION SWITCH.

NOTE: EVERY BIKE IS A LITTLE DIFFERENT SO YOU MAY HAVE TO MOVE THE KEY GROMMET AS YOU REINSTALL THE COMBINATION SWITCH COVER.

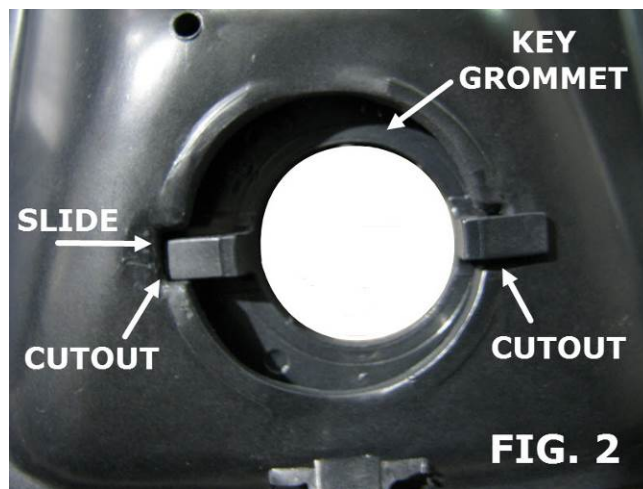

Scan code with  
your smartphone  
to view video

