


## SKI INSTALLATION INSTRUCTIONS

SKI-DOO - ALL 120cc MODELS  
MOUNTING KIT #76000277

1. Remove old ski.
2. Discard unneeded hardware (items #39, #6, #31, & #25).

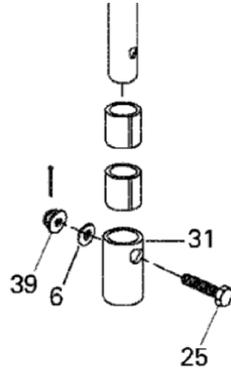

ITEM#	PART#	DESCRIPTION	QTY
1	76000190	METRIC BOLT, 10-1.5 X 130MM HEX	2
2	76000219	WASHER, 1.5" X .406" X .187"	4
3	76000274	BUSHING SKI-DOO MINI Z	4
4	76000193	METRIC NUT, M10-1.5 NYLOC	2
5	77000280	DAMPENER - 280	2
6	76000373	SPACER - SPINDLE	2
7	77000286	CRADLE, DAMPENER	2

3. Install carbide on ski using the manufacture's guidelines & hardware.
4. Place one bushing (item #3) into the inner saddle and push outward (this will fit very tightly). Next, place the dampener into the cradle (item #8) and slide both into place with the tallest side of the dampener towards the rear of the ski. Now install the remaining bushing, again pushing outward until it fits snug in the ski saddle. (see picture)



## SKI INSTALLATION INSTRUCTIONS

SKI-DOO - ALL 120cc MODELS  
MOUNTING KIT #76000277

5. Take the Spindle Spacer (item #7) from the provided hardware kit and slide it up the lower part of the spindle until it sits flush with the factory bushing on the bottom side of the A-arm.



6. Install ski onto sled by centering the hole in the dampener with the lower part of the spindle. This will allow you to now install the bolt, washers, and nut. (see picture).

7. Repeat sets 1-6 for other ski.