



## STREAK TRUNK LIGHT

**WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

**CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.


**ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

### Installation Instructions:

- Step 1 Park on a level surface, allow the vehicle to cool.
- Step 2 Remove seat and Tour Pack liner. Set them aside for reinstallation.
- Step 3 Place masking tape on the left side corner of the Tour Pack as shown in Fig.1.
- Step 4 Hold the Streak light up to the Tour Pack lid, making sure it is centered, and mark the wire location, Fig.1.
- Step 5 Measure 11/16" (18mm) up from the rim of the Tour Pack lid and mark with a horizontal line, Fig.2.
- Step 6 First, drill a pilot hole at the marked location, then use a "step drill" to create a 1/2" (13mm) hole at the marked location.
- Step 7 From the inside of the Tour Pack, near the front left corner, drill a pilot hole in the location shown in Fig.3.
- Step 8 From the outside of the Tour Pack, enlarge the size of the pilot hole drilled in Step 7 to 1/2" (13mm). Install an included grommet.
- Step 9 Remove the masking tape and thoroughly clean the backside of the Tour Pack lid where the light will be mounted with an amonia based window cleaner.
- Step 10 Insert the wire of the Streak light into the hole drilled in the Tour Pack lid in Step 6. Pull the wire through until the light is to the lid. Use tape to hold the Streak light in place on the lid temporarily.
- Step 11 Slide the wire under the plate in the bottom of the Tour Pack. Pull the wire through the grommet. A small amount of lubrication may help. Fig.3,4,5.

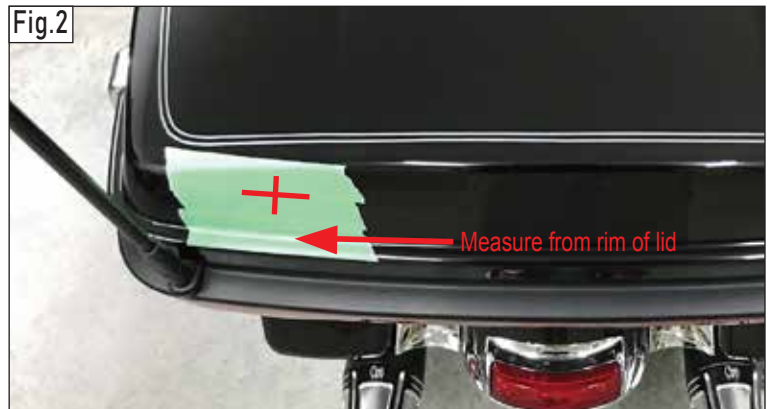

Step 12 Insert the wire terminals into the connectors. Place the female connectors onto the male connectors on the Ciro wire harness. Align the brown and black wires into one connector. Align the red, blue and violet wires into the other connector. Gently push the terminals into the female connectors, Fig.7.

**CAUTION** Use care when inserting terminals as they are delicate, improper installation will result in damage to the terminals and/or connectors. **Be sure of orientation of the terminal before pushing them into place.** The locking clip must lock into the housing slot, Fig.8. Make sure to align the locking clip with the groove when inserting the wire into the connector, Fig.9. A light “click” sound can be heard when they lock into place. The terminal connector is not properly installed if any of the metal terminal is visible outside of the connector, Fig.10. A small tool or pick may be helpful to insert the terminals. The terminals are properly installed as shown in Fig.11.

Step 13 Install the Ciro wire harness in-line with the black 6-pin harness on the motorcycle. Plug in the Streak light connectors, Fig.6.

Step 14 Turn on the ignition and test the Streak light functions.






Step 15 Remove the adhesive backer from the Streak light. Put the light into place and press firmly for 30 seconds.

Step 16 Route the wire over the hinge. Secure the wire to the Tour Pack and Tour Pack lid with the included zip tie keepers, Fig.5.

Step 17 Reinstall the Tour Pack liner.

Step 18 Route the wire under the seat along the left side of the frame and secure it using zip ties. Reinstall the seat.

Step 19 To use Lightstrike, follow the instructions below.

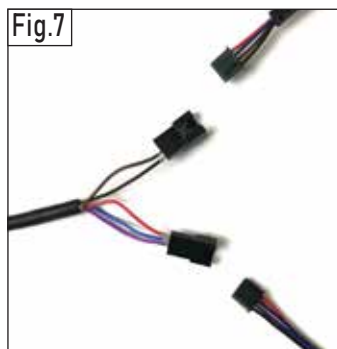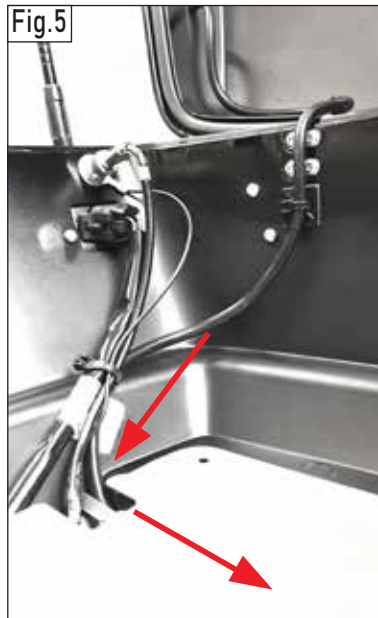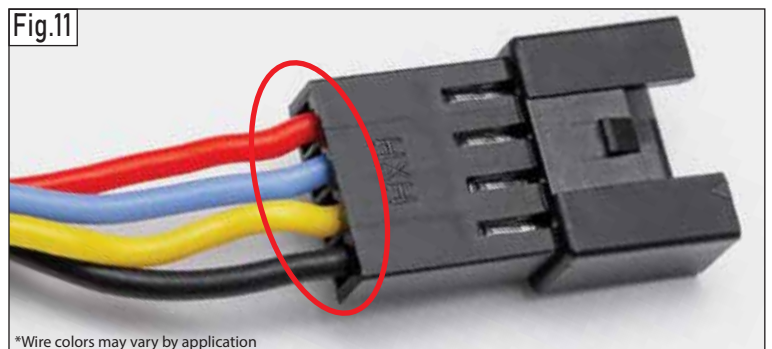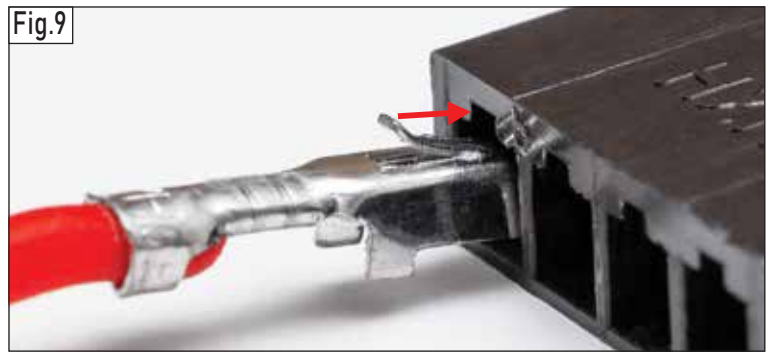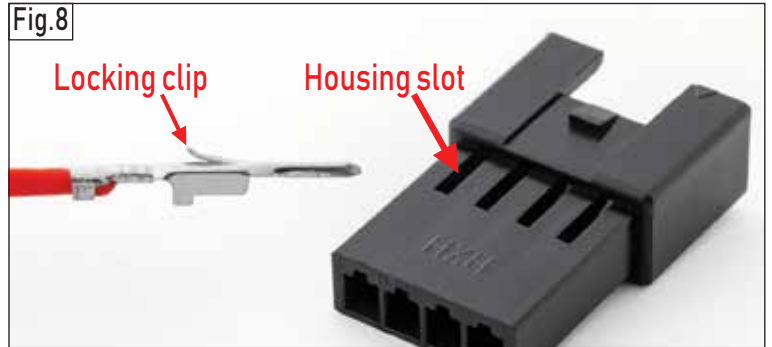

**LIGHTSTRIKE**  
TECHNOLOGY

Lightstrike Technology uses your smartphone and Bluetooth to control this product.

- 1) Download the Lightstrike app where you get your iOS or Android phone apps.
- 2) The default password is 000000 (six zeros).
- 3) For additional information and video, scan the QR code.



SCAN ME