



TWIN RAIL FOOTRESTS WITH '18-UP SOFTAIL MOUNTS

Parts Included:

- 2 Footrest adapters
- 2 Narrow flat washers
- 2 5/16-18 x 1.0 SHCS

Installation Instructions:

1. To remove the OEM footrest, release the "e" clip and slide out the pivot pin. Set them aside to reinstall later.

2. Pull out the OEM footrest and steel detent plate together. (Fig. 1)




3. Slide the steel detent plate off the footrest to release the ball and spring. Be careful - the ball is spring loaded and can fly out.

4. Put the spring and ball into their hole on the **Ciro Footrest Adapter** and slide the steel detent plate over the assembly. (Fig. 2 and Fig. 3)



5. Insert the footrest adapter and detent plate as an assembly into the OEM footrest mount. (Fig. 4)

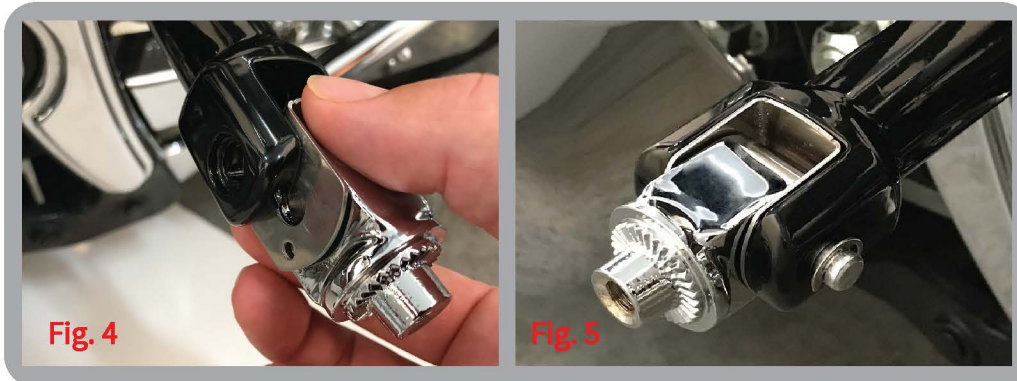

6. Slide the OEM pivot pin through the mount and adapter. Reinstall the clip. (Fig. 5)

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All **Ciro** products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. **Ciro** warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. **Ciro** will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. **Ciro** will not be liable for any consequential and incidental damages, including labor, or non-**Ciro** products. Please visit our website Ciro3d.com for our complete warranty policy.

CIRO3D.COM

7. Insert the 5/16 screw and washer into the footrest. (Fig. 6)



8. Using a 1/4 Hex wrench to hold the screw in place, align the screw threads with the female threads in the adapter, then tighten.

9. Set the preferred angle then torque to 25 ft. lbs. (Fig. 7)

