




## CONTENTS: KIT #16566




REMOTE LEVER X 1, INLINE BARREL ADJUSTER X 1  
HOUSING FERRULES X 2

## TOOLS:

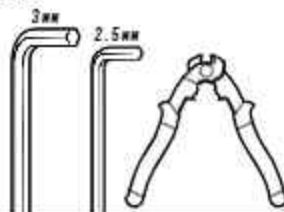


3MM HEX WRENCH, 2.5MM HEX WRENCH,  
CABLE/HOUSING CUTTER


## NOTE:

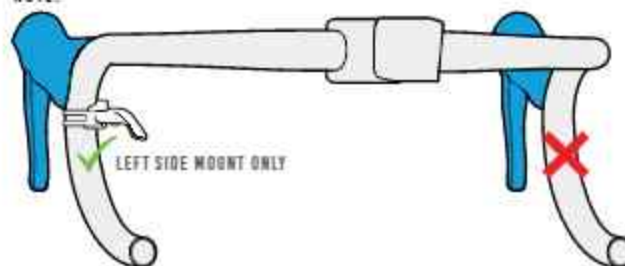


1. Remove handlebar tape (if installed). Loosen 3mm hex screw on the clamp band and slide remote (housing port / Logo forward) onto handlebar.
2. Position the remote under the hood area to your preference and tighten 3mm hex screw to 6Nm to secure into place. (Note orientation of paddles; long arm forward)

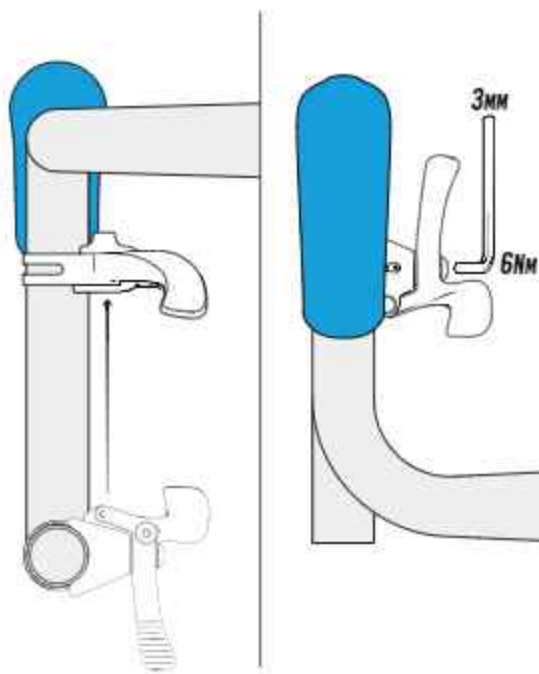


3. Install housing with ferrule installed (not provided) into remote port and cut part the center of the handlebar. Install provided ferrules onto cut sections of housing and insert the inline barrel adjuster between them.

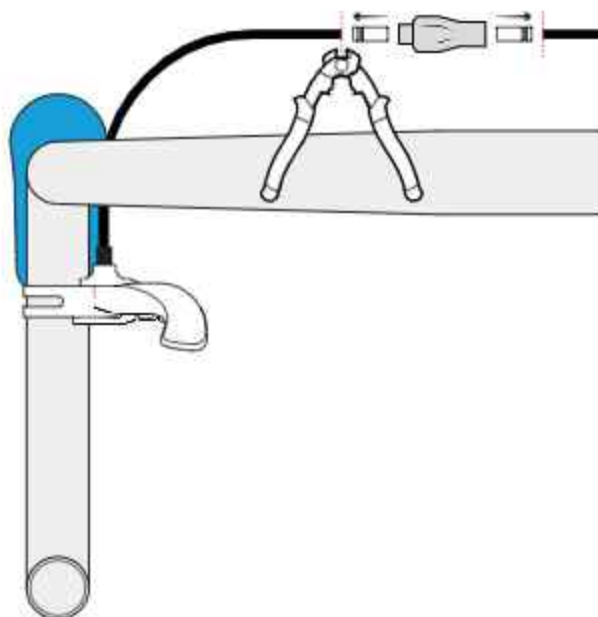


4. Route cable from dropper seatpost through the housing sections and into the remote lever.

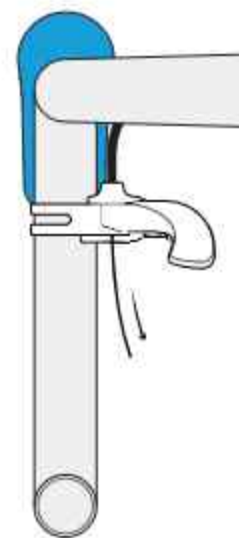

5. Pull the cable taut and secure to remote lever with the 2.5mm cable screw. Tighten to 4Nm.

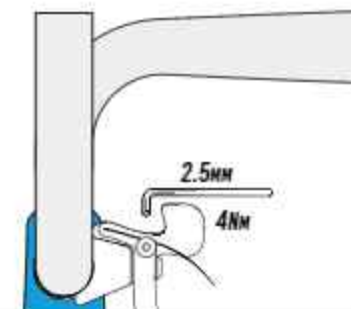

6. Cut cable (hold with fingers to prevent fraying) and crimp with cable end cap (not provided).

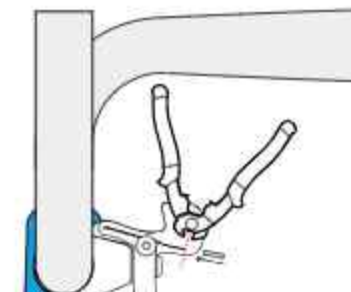

7. Secure housing under handlebar tape, wrap to preference. (Do not cover inline barrel adjuster!)