



Custom Dynamics® CVO Plate Frame Mount Installation Instructions

We thank you for purchasing the Custom Dynamics® CVO Plate Frame Mount. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-CVO-MOUNT-B
CD-CVO-MOUNT-C

Package Contents:

- Plate Frame Mount (1)
- Rubber Gasket (1)



Fits: 2014-2022 Harley-Davidson® Street Glide CVO™ (FLHXSE), 2018-2022 Road Glide CVO™ (FLTRXSE) and 2014 Road King CVO™ (FLHRSE)
Fits standard 4" x 7" motorcycle license plates.

Installation:

1. Remove the license plate from the OEM plate frame mount.
2. Locate the license plate illumination connector cover located on the underside of the rear fender. Refer to Photo 1.
3. Remove the nut securing the connector cover to the fender. With the nut removed, pull the cover off of the stud and slide the cover up to remove. Refer to Photo 1.




Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

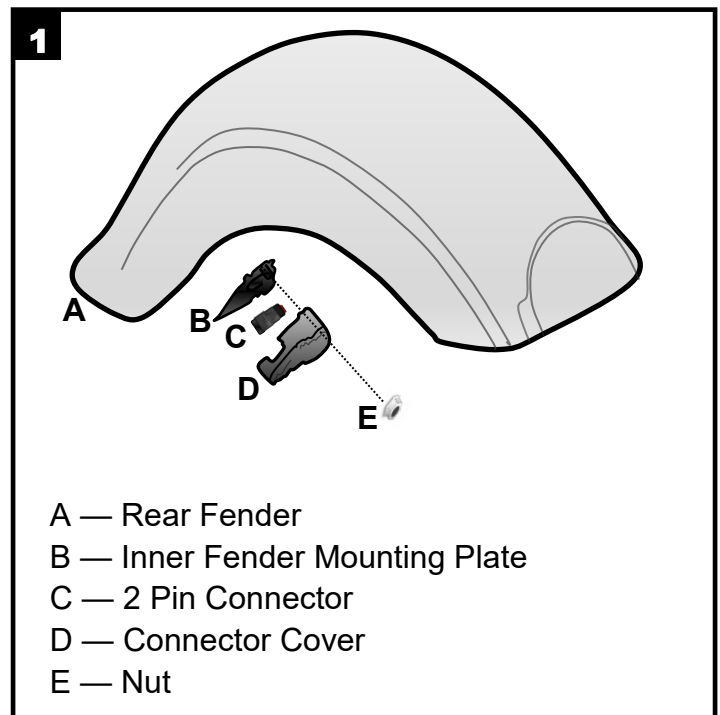

- A — Rear Fender
- B — Inner Fender Mounting Plate
- C — 2 Pin Connector
- D — Connector Cover
- E — Nut

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2.

Installation:

4. Disconnect the 2 pin license plate illumination connector.
5. Remove the OEM plate frame mount from the fender by removing the two mounting bolts. Refer to Photo 2.
6. Install the rubber gasket on the back of the CVO Mounting plate.
7. Lay the new CVO Mounting Plate, with the Rubber Gasket installed, onto the fender. Align the mounting holes on the CVO Mounting plate with the holes in the fender.
8. Using the 2 existing mounting bolts, secure the CVO Mounting Plate to the rear fender.
9. Reinstall the connector cover on under side of the rear fender using the existing nut.
10. Gently radius your license plate to match the radius of the CVO Mounting Plate.
11. Using the provided bolts and Threaded Bolt Plates, mount your license plate to the CVO Mounting Plate.

