



Custom Dynamics® Smart Triple Play® Installation Instructions

We thank you for purchasing the Custom Dynamics® Smart Triple Play®. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: GEN-SMART-TPU-18ST

Package Contents:

- Smart Triple Play® Module (1)
- Instructions

Fits: 2018 - 2019 Harley-Davidson® Softail® Heritage Classic, Deluxe, Low Rider®, and FXDR.



ATTENTION



Please read all warning information below before installation

Important: For this system to be legal you must use RED rear turn signal lamps.

Important: This system is designed to work with single intensity rear turn signals, if you do not have single intensity rear turn signals do not install this module. Contact Technical Support.

Important: Remove any existing Run-Brake-Turn or similar modules prior to installing this unit.

Important: Never install a load equalizer with the use of this unit. Your model has a CanBus electrical system and is not needed.


Caution: Never install a trailer adapter, trailer harness or trailer controller on the output side of this unit, a trailer adapter, harness or controller must be installed on the input side of this unit.

Important: Dial and switches should be maneuvered by hand only. Do not use any tool such as a screwdriver that could damage waterproof covers.

Caution: This unit is designed for a maximum load of 27 watts per channel. Do not exceed 27 watts per left turn signal output, 27 watts per right turn signal output, and 27 watts per brake signal output. Overloading unit could cause damage to the unit and cause the unit to malfunction.

Important: Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the bike. Use Tie-wraps, tape, or other means to secure. Custom Dynamics® is not liable for damage to the module or the bike as a result of improperly securing the module.

Notice: Product is Not DOT approved.



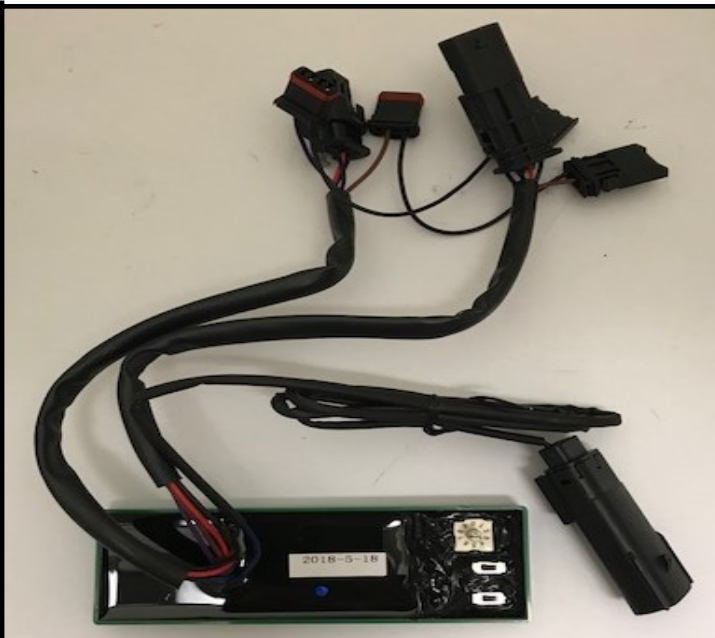


Installation:

1. Secure motorcycle on level surface. Confirm the ignition switch is in the off position. Remove the seat and locate rear lighting connectors to the rear fender as shown in Picture 1.
2. Plug the Smart Triple Play® module, into the rear lighting connectors shown in Picture 1. The Smart Triple Play® JAE turn signal connectors with the brown wire will connect to the Grey JAE connectors of the bike's wiring harness. The Smart Triple Play® JAE turn signal connectors with the Purple wire will connect to the Black JAE connectors of the bike's wiring harness as shown in Picture 2.
3. Remove the left side cover and locate the bike's P&A connector as shown in Picture 3. Plug the P&A connector from the Smart Triple Play® into the bike's P&A connector.
4. Mount the Smart Triple Play® as shown in Picture 4. Secure with tie-wraps, tape or other means so that unit cannot move.
5. Run the 4 way hazards, with the ignition in the off position, to allow the BCM to Sync the new load.


Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

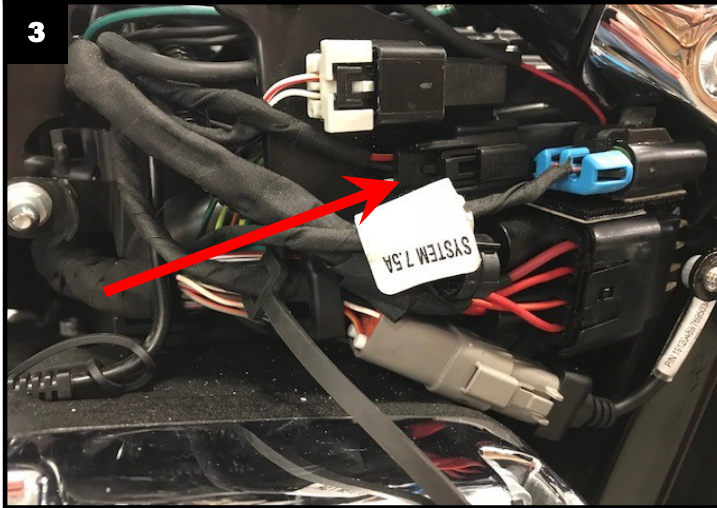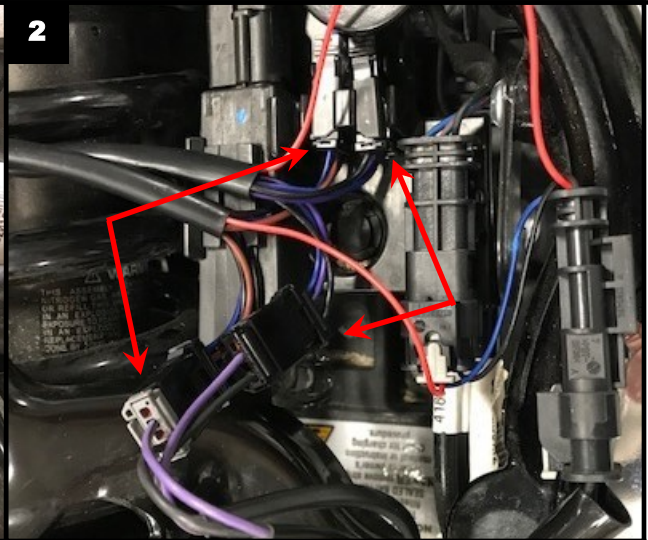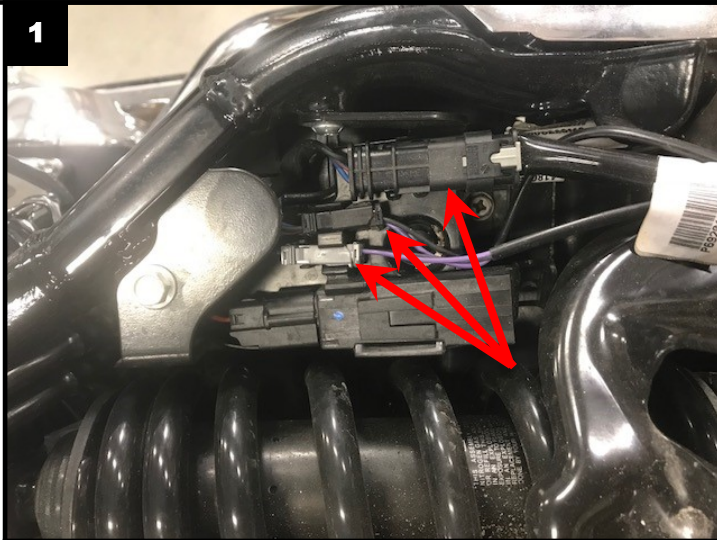

Initial Setup & Operation

6. Locate the two switches and rotary dial. Be sure the rotary dial is set to position 0. There is small arrow on the dial, this is the pointer that should now be at position 0. Be sure Switch 1 and Switch 2 are both in the ON position. (See Diagram)
7. Turn the ignition key on and check operation as follows:
 - Running Lights: Turn Signals and Taillight are now illuminated dimly.
 - Apply Right Turn Signal and check operation of right turn signal, should flash off to bright. Disable turn.
 - Apply Left Turn Signal and check operation of left turn signal, should flash off to bright. Disable turn.
 - Apply Brake Light. Check to see that all 3 lights flash 4 times then remain bright.
 - Apply Left Turn Signal then Apply Brake, Check to see that Only Center Light Flashes 4 times then remains bright.

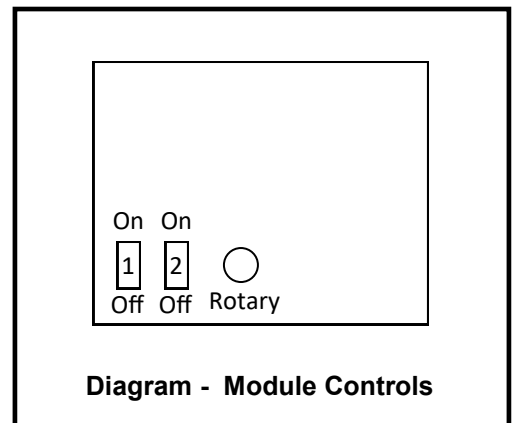

Installation Instructions - Page 3

Program Mode

7. The Smart Triple Play® allows you to program the running light brightness of the turn signals so they are a match to your center taillight. To enter the modules program mode:
 - Turn ignition key off, be sure Switch 1 and Switch 2 are in the OFF position and the Rotary Dial in in the 0 position.
 - Turn ignition key on, immediately turn Switch 2 On-Off-On. Turn Switch 1 On-Off-On. Do not depress Brake or Turns Signals during this action.
 - The turn signals should now fade up and down slowly, do not proceed unless this confirmation takes place.
 - Turn the rotary dial clockwise to increase the brightness of the running lights, 0-being the dimmest setting and 9-being the brightest. Match the running light brightness to the taillight. Once happy with the setting, press and hold the brake for a couple of seconds. The setting will now be saved.
9. Turn ignition key OFF and set switches for desired Operation.

Program Menu

Switch Functions:

Switch 1 On, Switch 2 On: Strobes/Flashes on all three Rear Lights

Switch 1 On, Switch 2 Off: Strobes/Flashes on rear turn signals only

Switch 1 Off, Switch 2 On: Strobes/Flashes on center light only

Switch 1 Off, Switch 2 Off: No Strobes/Flashes

Dial Strobe Functions: (Note that Patterns 0-3 are compatible with incandescent bulbs) See Diagram on page 4.

Test & Finish

10. Turn ignition key on and Test Operation based on your desired switch settings. Once programming is complete, re-install the seat. Installation is complete.

Installation Instructions - Page 4

Flash Pattern Information:

