



## Custom Dynamics® Magic Strobes-BRK Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes Module! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Number: MAGIC-STROBES-BRK**

### Package Contents:

- Magic Strobes Plug and Play Module (1)
- Instructions


Fitment: 2013 & Newer HD Breakout & Slim

### Installation

1. Secure motorcycle on level surface. Remove seat. Disconnect negative battery cable from the battery. Locate and unplug the 2 lighting connectors to the rear fender.
2. Plug the Magic Strobes™ BRK Module, in-line, into the rear lighting harness and into the bike's wiring harness.
3. Re-connect the battery's negative battery cable to the negative of the battery.
4. Locate a secure place for the Magic Strobes™ BRK unit that will not interfere with the secure placement of the seat or side cover. Use tie wraps or tape if needed.

### Initial Setup and operation

5. Locate the two switches and rotary dial. Be sure the rotary dial is set to position 0. Note there is a screw driver slot to make the dial turn easier, this is not the pointer, there is small arrow on the dial, this is the pointer that should now be at position 0.
6. Make sure switch 1 & 2 are in the ON position.
7. Select the desired strobe setting listed below with the power off. Always turn power off before changing settings.
8. Turn power on and test for function of the turn signals, running and brake signals with desired setting.
9. Switch 1 enables you to turn the strobe feature on/off on the rear turn signals (if equipped), or other lights installed such as our Flatz™ or Plasma Rods™.
10. Switch 2 enables you the ability to turn on/off the center brake (if equipped) strobe signal.

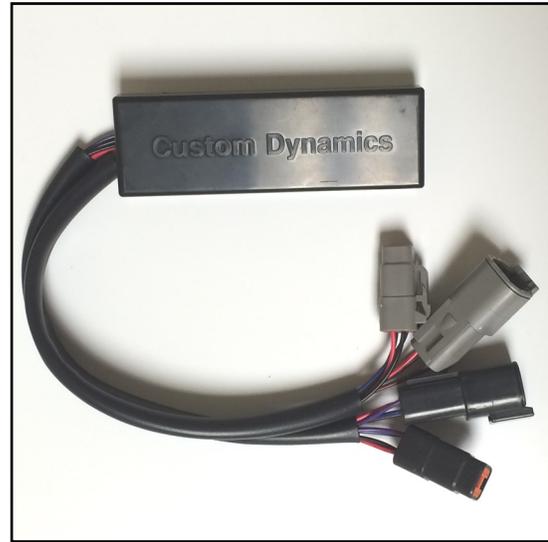

Please read all Information below before Installation

**Important:** This module's intended application is for use with LED replacement signals only. DO NOT use this product with stock incandescent bulbs, it will not work correctly.

**Important:** Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the bike. Use tie-wraps or other means to secure. Custom Dynamics® is not liable for damage as a result of improperly securing or failing to secure the module.


**Important:** This module will not work properly if the settings in your BCM (body control module) have been modified from its stock factory configuration.

**Caution:** A stuck brake switch may cause this unit to overheat and fail. Unplug module immediately if this condition occurs.


**Note:** Although this device has been designed to significantly increase your braking visibility, flash/strobe patterns may not be street legal in your area. This Device is not DOT approved.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

# Installation Instructions - Page 2

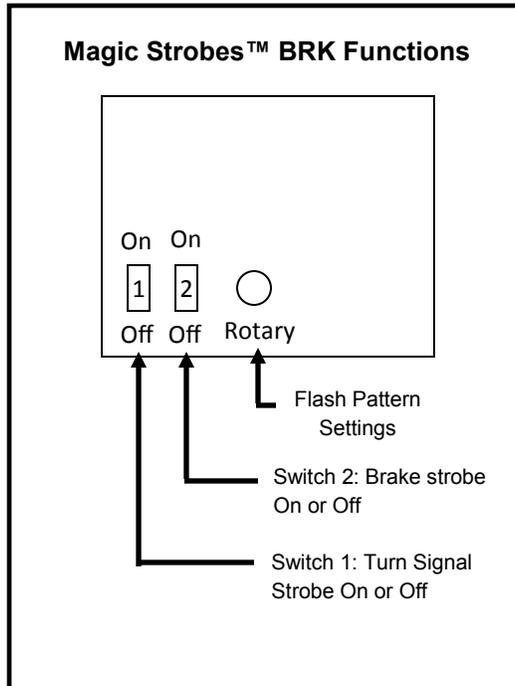

## Flash Pattern Information

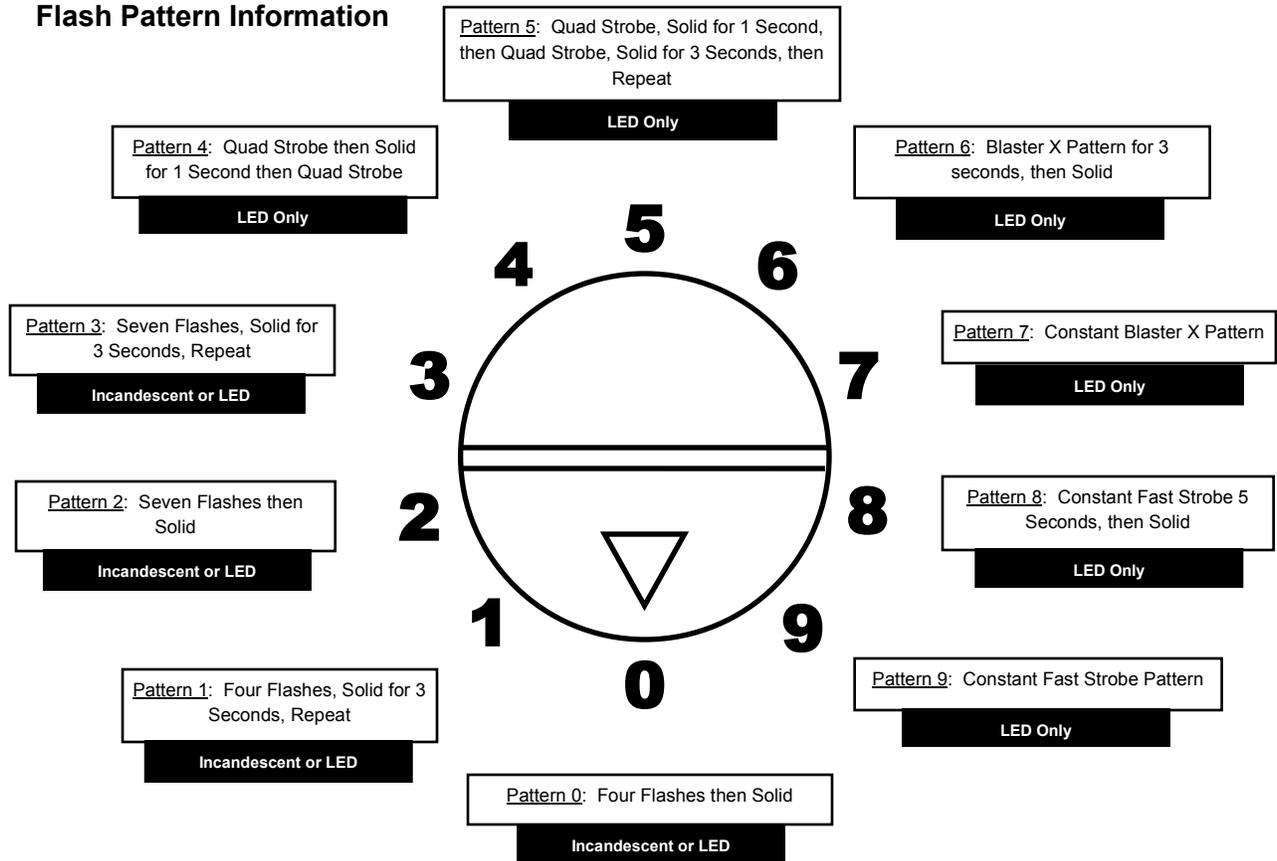

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST