


Custom Dynamics® MPR-BCM Adapter Fits 2014 HD Tourning Models

1. Locate connector for Rear Harness under Seat.
2. Unplug connectors and plug in Adapter.
3. Connect wires as need using Posi Taps.
 - Black—Ground
 - Blue— Running
 - Red— Brake
 - Brown—Right Turn/Brake
 - Purple—Left Turn/Brake
 - Orange—Aux Power
4. Check operation of all lights.
5. Re-install seat.

Posi-Lock Connector

Posi-LockConnectors have been put to the test worldwide since 1997. Superior In-Line splices with just hand tightening! The connector of choice from Automotive OEM's to our US Military.

EASY AS ①②③

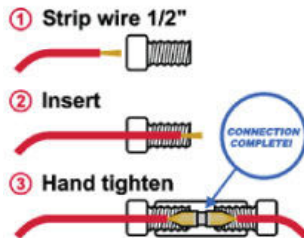

Custom Dynamics® MPR-BCM Adapter Fits 2014 HD Tourning Models

1. Locate connector for Rear Harness under Seat.
2. Unplug connectors and plug in Adapter.
3. Connect wires as need using Posi Taps.
 - Black—Ground
 - Blue— Running
 - Red— Brake
 - Brown—Right Turn/Brake
 - Purple—Left Turn/Brake
 - Orange—Aux Power
4. Check operation of all lights.
5. Re-install seat.

Posi-Lock Connector

Posi-LockConnectors have been put to the test worldwide since 1997. Superior In-Line splices with just hand tightening! The connector of choice from Automotive OEM's to our US Military.

EASY AS ①②③

