




Custom Dynamics® Harley Universal Wiring Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® Harley Universal Wiring Adapter. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: MPR-SS6

Package Contents:

- HD Universal SS6 Wiring Adapter

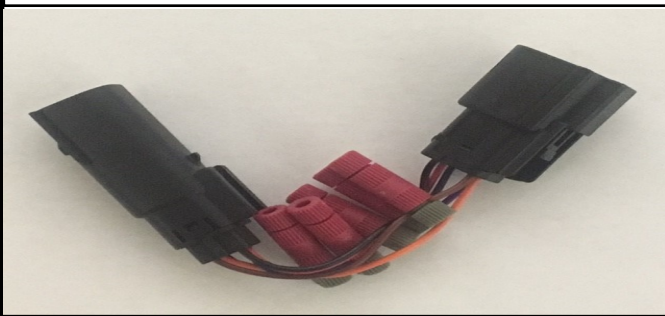

Fitment: 2010-2013 Street Glide
2010-2013 Road Glide Custom



ATTENTION



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.

Installation:

1. Locate connector under side panel of bike.
2. Unplug connectors and plug in Adapter.
3. Connect wires as needed using Posi-Taps.

Black—Ground

Blue— Running

Red— Brake

Brown—Right Turn

Purple—Left Turn

4. Check operation of all lights.
5. Re-install seat.

