# delta

# Single Bike Wall Mount Rack with Tray for Fat Tires

## **Assembly instructions RS4008C**

- Locate stud beneath wallboard and mark position of desired height to hang bike.
- Use back plate to mark positions for drilling pilot holes for mounting screws. Drill holes.



### **IMPORTANT SAFETY NOTE**

Beware of drilling into electrical wire or pipes within wall!

Use spirit level to ensure plate is horizontal when drilling holes for mounting screws.

- 3 Hang bike on hook to determine lower plate height.
- Position bottom plate in line with top plate, remove backing tape and adhere to wall.

### **Tools Required**

Phillips Head Screwdriver




Hand Drill 1/8" (3mm)



Spirit Level

Way of locating studs within the wall (see hardware store for advice)

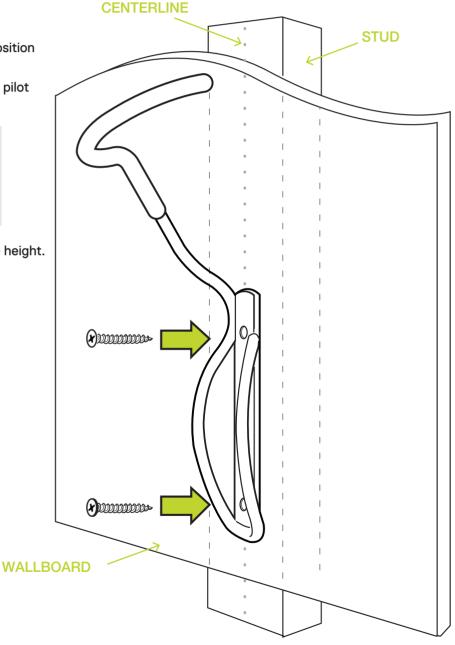

**STUD** 



### WARNING