

FEEL THE HEAT!

Revision No: 00
 Revision Date: 05-30-2018

Light Mount Brackets, Universal
 Part # **04-2800** Universal Black

Congratulations on your purchase of the DragonFire Light Mount Brackets. These Light Mount Brackets will allow you to mount light bar or light pod at your desired location. Be sure to check out the full line of DragonFire Accessories for your vehicle at your local authorized dealer or online at <http://www.DragonFireRacing.com>

- **Hardware not included**
- **Slot diameter is 6.5mm, which allows the use of 1/4", 6mm, or equivalent hardware sizes**
- **Drilling may be required**



- **Read and understand these instructions before installing product**
- **Do not use product if there are any signs of damage**
- **Improper installation may result in product malfunction and/or damage to vehicle**
- **Do not use the product beyond its intended function**

Disclaimer



Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Pre-installation: Lay out components and compare to list and images.

Refer to DragonFire Racing Website for ensure that you have the latest revision of instructions & templates.

Part & Hardware List					
ITEM	QTY	SIZE	LENGTH	TYPE	STEP USED
P1	1	-	-	Light Mount Bracket LH	5
P2	1	-	-	Light Mount Bracket RH	5

Tools Required
10mm Socket and Wrench
Extension (If Needed)
Ratchet
Drill (If Needed)

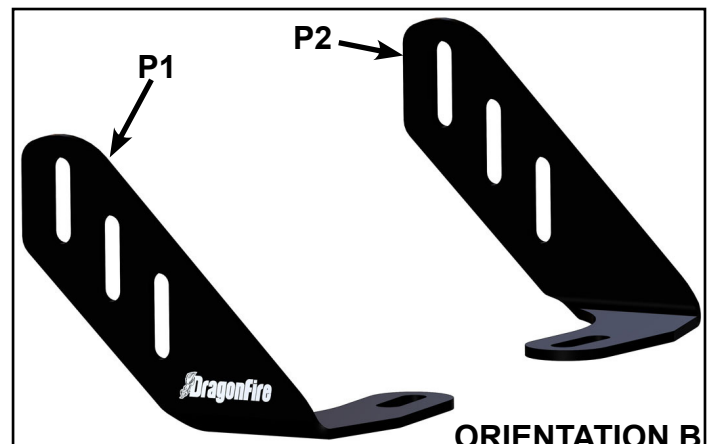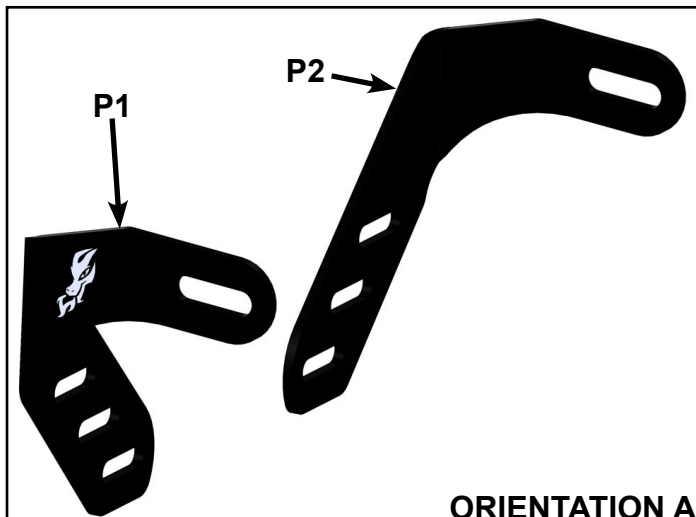

Note: An assistant may be needed to hold the product in place during installation.



Step 1: Place vehicle on a flat and level surface. Place gear selector in "Park" and remove keys from the ignition.

- To mount light brackets to the Maverick X3 suspension, go to Step 2.
- To mount light brackets to other area, go to "Special Note". Mounting light brackets to other area might require drilling holes.

Step 2: Locate the hood of the maverick X3 (Figure A). Uninstall the hood to make installing light brackets easier.

Step 3: Uninstall the hood and locate factory hardware (Figure B). Uninstall hood will make it easier to install light brackets.

Step 4: Using 10mm socket and wrench remove the factory hardware (Figure C). Be careful not to lose rubber spacers. Set hardware aside to be reused.

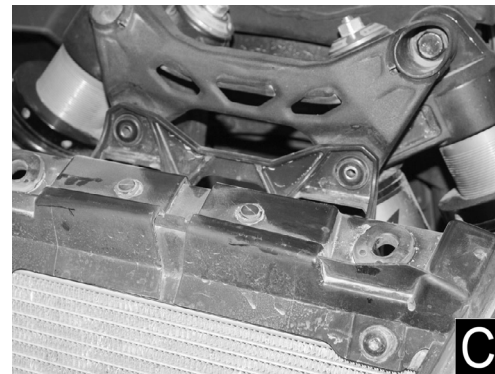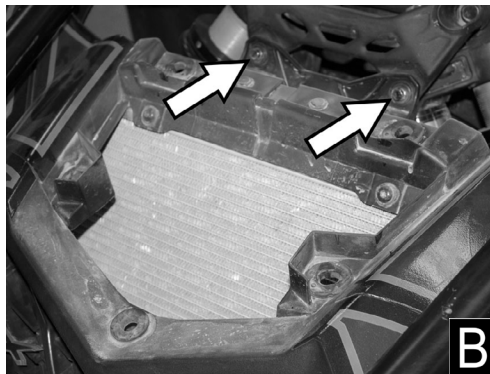

Step 5: Place light bracket between the radiator housing and the suspension bracket (Figure D). Align the bottom slot of the light bracket to the holes on the vehicle and then install factory hardware removed in Step 4. Leave hardware loose.

Step 6: Repeat for opposite side. With both brackets installed, align and tighten hardware until brackets are at straight alignment. Recommendation: use light bar to make brackets alignment easier.

Step 7: Tighten factory hardware to factory specifications. Reinstall plastic hood (Figure E).



Special Note: Figure F and G show possible locations where light brackets can be install on roof of Maverick X3. Using the light brackets, a 32" light bar can be mounted on top of the roof. For the rear, a 11" to 12" light bar can be mounted.

For other platform, find the desired mount location with a flat surface on the vehicle.

Step 8: This completes installation. Time to ride and enjoy!

ProTip: Periodically check all hardware and re-tighten if needed.

For further assistance please contact us at customerservice@dragonfireracing.com or 1-800-708-9803.

