

BMW Velocity Stacks

Install guide for 91012001

Fitment for:

2014-2018 BMW R1200GS

2016-2018 BMW R1200R

2016-2018 BMW R1200RT

2015-2018 BMW R1200RS

PARTS LIST

2 VELOCITY STACKS

2 HOSE CLAMPS

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION.
THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION.

×

91012001.01


INSTALLING THE VELOCITY STACKS

- 1 Remove the seat.
- 2 Remove the bodywork around the fuel tank / airbox area.
- 3 Remove the airbox lid to access the air filter.
- 4 Remove the air filter




- 5 Remove the clamps from the intake boot to the airbox on each side of the motorcycle.


These clamps can be reused if desired by using special pliers

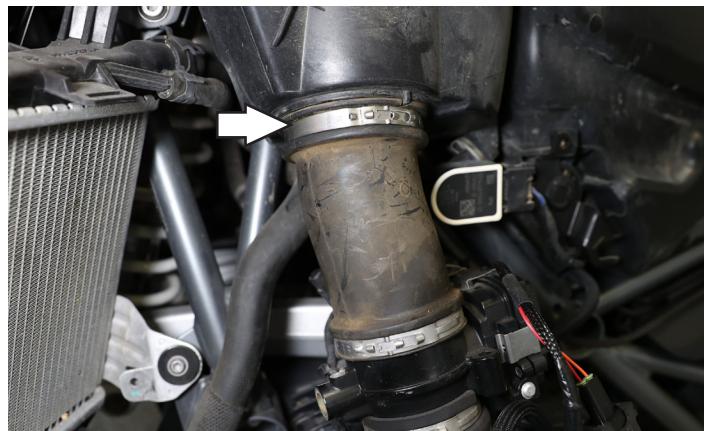

- 6 From the inside of the airbox grab the stock velocity stack and pull it out of the rubber boot.

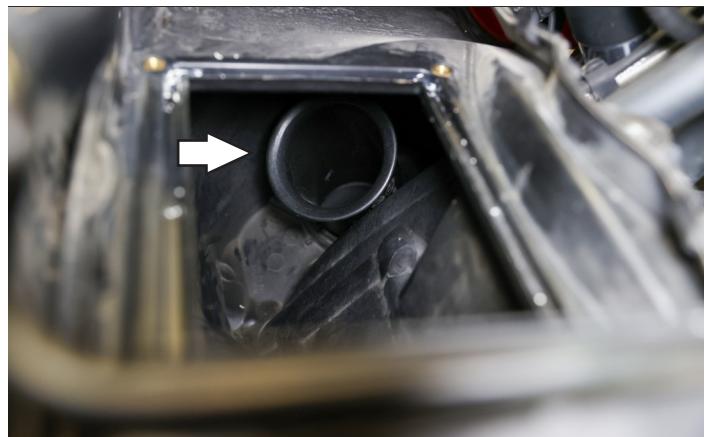

INSTALLING THE VELOCITY STACKS

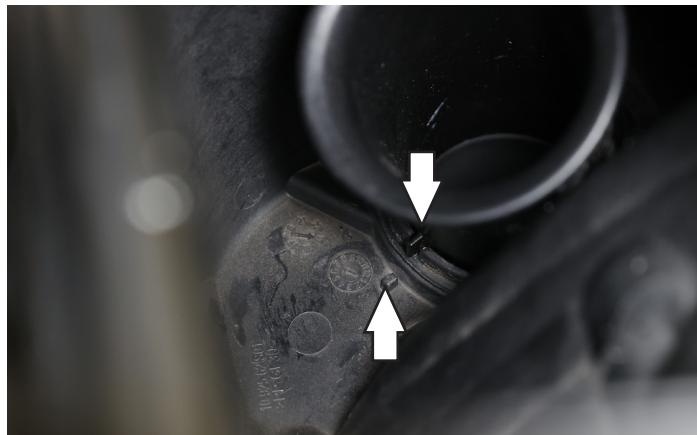


- 7 Install the Dynojet velocity stacks in place of the stock part.

Make sure to align the tab on the velocity stack with the mark on the airbox.



- 8 Reinstall the stock clamps or use the supplied clamps in the kit.
- 9 Reinstall the air filter and bodywork.

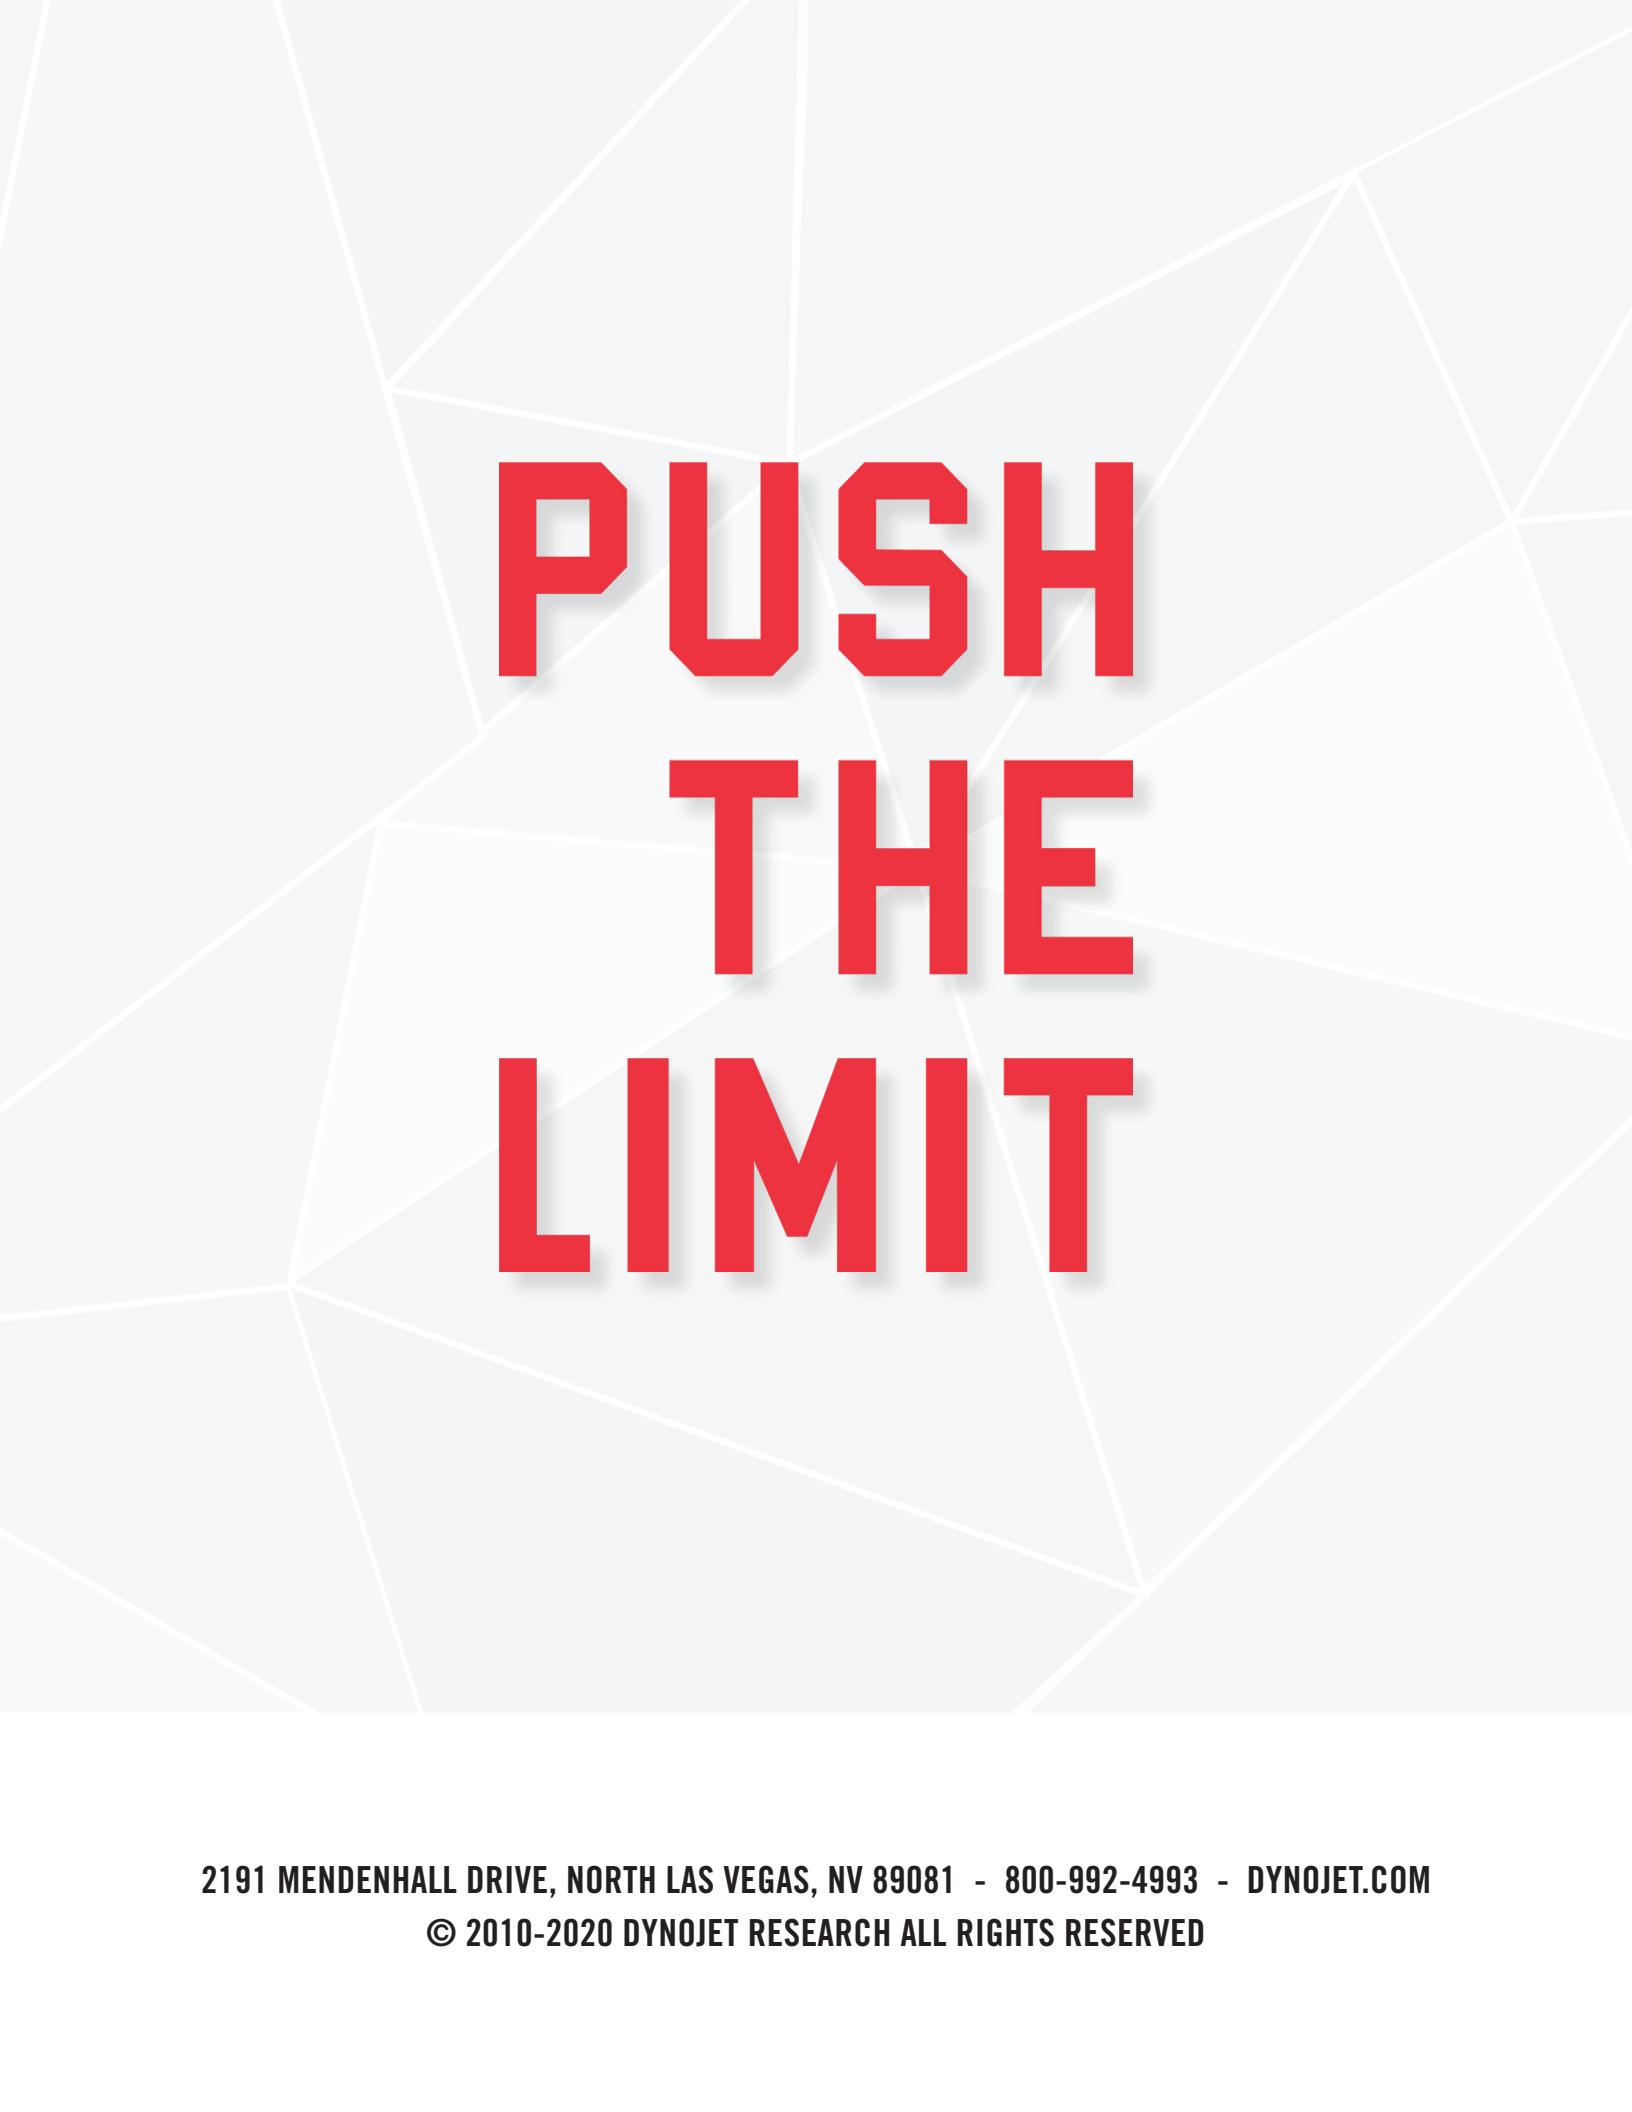

**PUSH
THE
LIMIT**

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNODET.COM
© 2010-2020 DYNODET RESEARCH ALL RIGHTS RESERVED