

# RADIATOR GUARD

## Harley Davidson Pan America Installation Guide

### PARTS LIST

- |   |                 |   |                  |
|---|-----------------|---|------------------|
| 1 | RADIATOR SHIELD | 1 | BRACKET, BOTTOM  |
| 1 | BRACKET, RH     | 3 | 6X8MM TORX SCREW |
| 1 | BRACKET, LH     |   |                  |

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**


× 61300104



# INSTALLATION


Remove the skidplate by removing T40 bolts on each side and the 4 bolts underneath.

*The installation can be done WITHOUT removing the skidplate although it does make accessing the bottom, bolt of the radiator shield easier.*

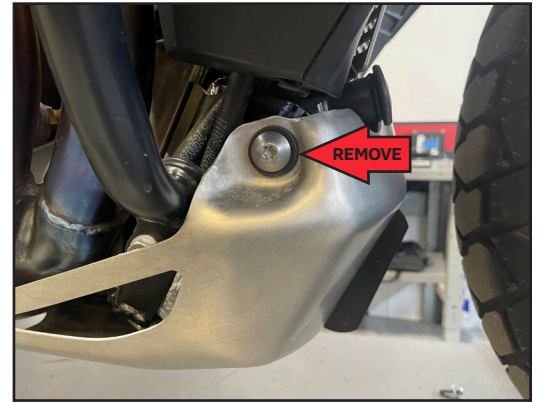



Using a T30 torx remove the 3 bolts holding the radiator in place.

*The stock bolts will be reused.*

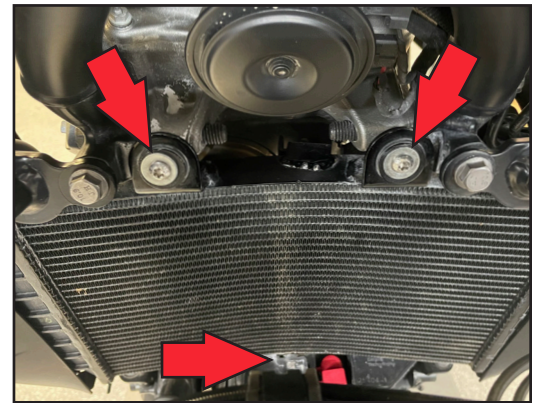

Install the brackets onto the Dynojet Radiator shield. The top LH bracket has a punch mark on the backside for reference.

Use the supplied 6x8mm bolts to hold the brackets onto the shield. Leave loose until shield is fully into position.

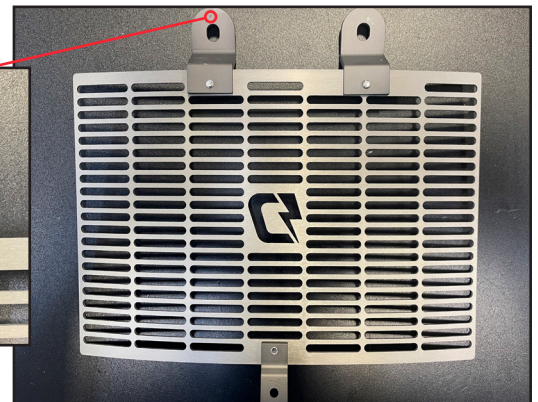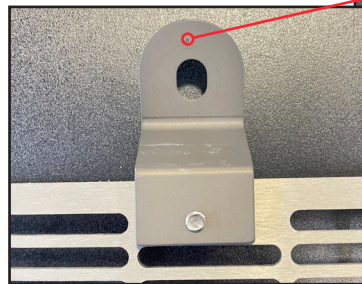


Install the assembled radiator shield onto the motorcycle using the stock hardware that was removed previously.

Once in position fully tighten all hardware.

Reinstall the skidplate.



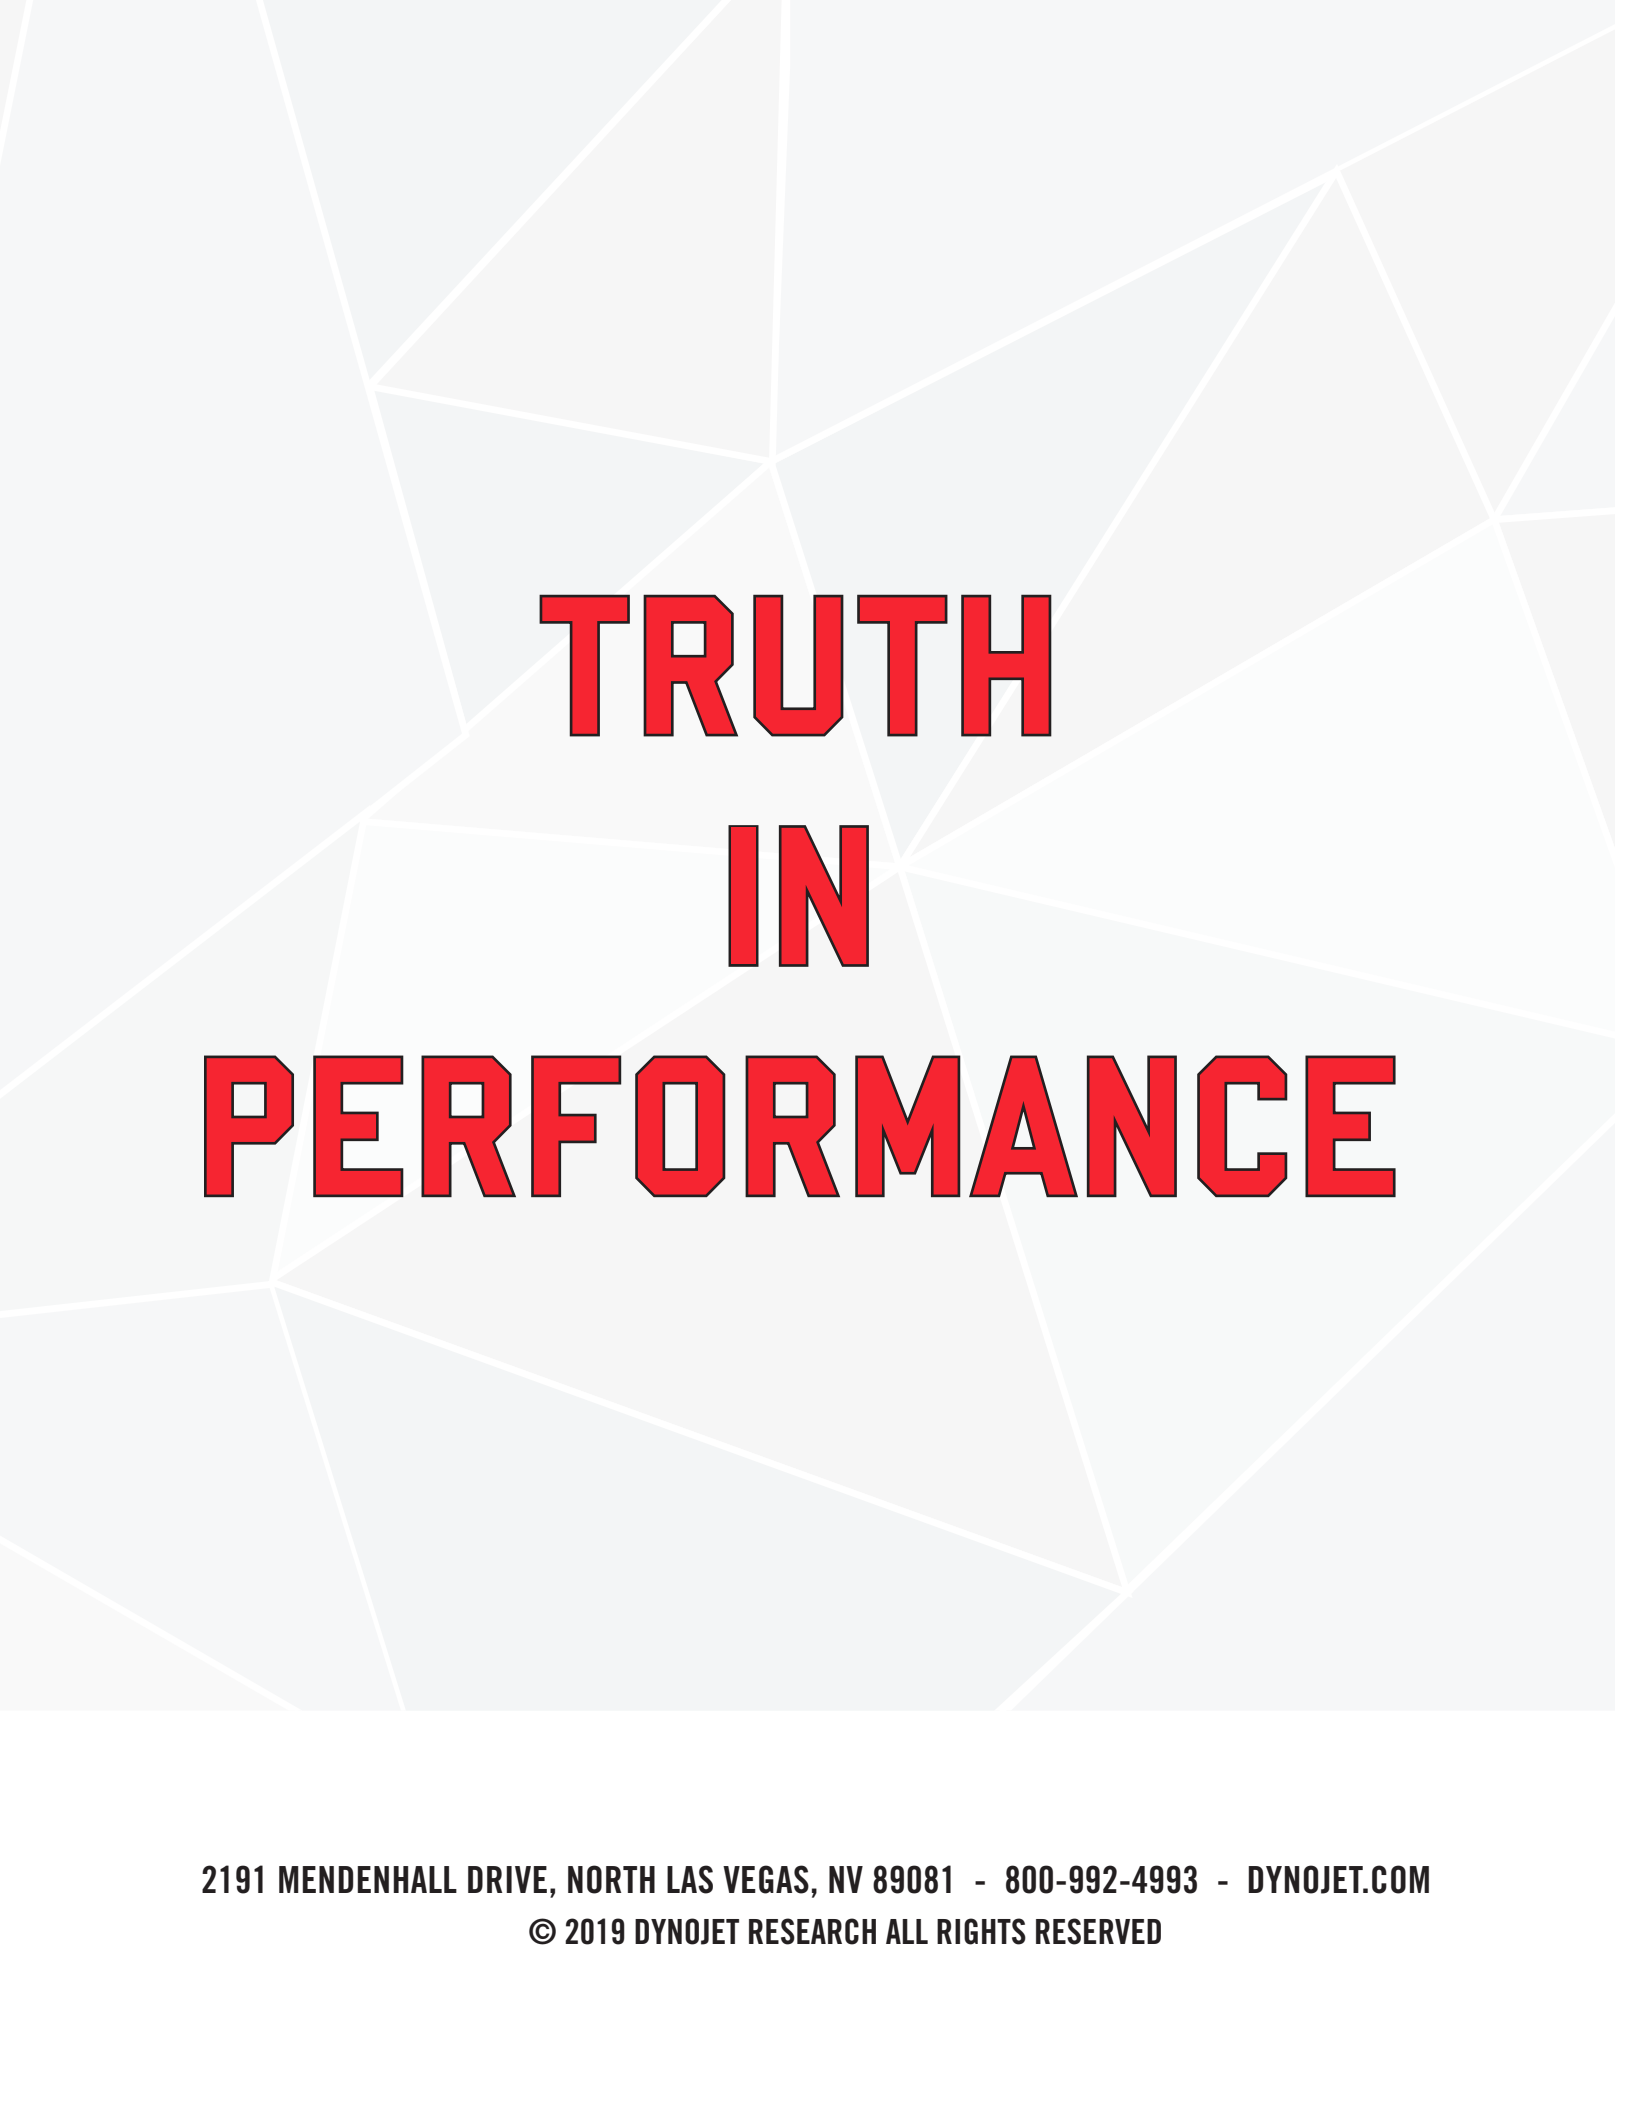

# **TRUTH IN PERFORMANCE**

**2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM**  
**© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED**