

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105
North Las Vegas, NV 89031
TEL: 702-399-1423
FAX: 702-399-1431
8am-5pm Pacific Time
Monday through Friday

Website Address
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.



4115.004

U.S Models Only

1986-88 Yamaha FZ600

Stage 1&3


STAGE 1

For mildly tuned machines using the stock airbox, with stock or K&N filter #YA-1686

STAGE 3

For mildly tuned machines using individual filters or velocity stacks. K&N filters #RC-1824

Both stages may be used with a good aftermarket exhaust

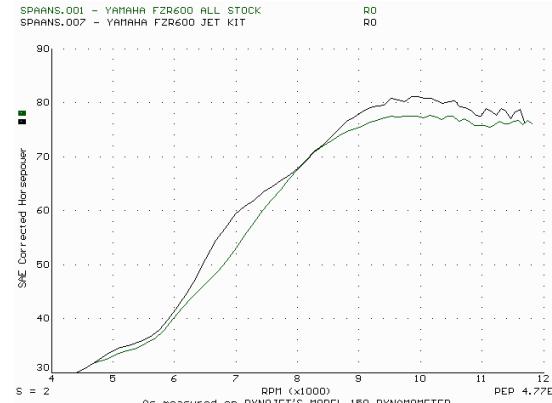

This graph shows a typical gain with a Dynojet jet kit.


WARNING

**NO SMOKING!
NO OPEN FLAME!
WHILE INSTALLING
YOUR DYNOJET KIT**

Parts List		
4	Main Jets	DJ110
4	Main Jets	DJ114
4	Main Jets	DJ126
4	Main Jets	DJ130
1	Slide Drill	DD #32
4	Fuel Needles	DNO466
4	Adjusting Washers	DW0001
4	E-clips	DE0001
1	Plug Drill	DD #5/32
1	Screw	DS0001

STAGE ONE INSTRUCTIONS

1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting the order of assembly. Use the DD #32 drill bit provided to enlarge slide lift holes (Fig. A).
2. Install the Dynojet needles on groove #3, using all stock spacers (Fig. A). Install the Dynojet washers above the e-clip.
3. Remove the main jet and replace with the Dynojet main jets provided. Use the DJ110 main jets with stock exhaust, or use the DJ114 main jets with free flowing aftermarket exhaust. Be sure that the jets you are changing are the main jets.
4. Locate the fuel Mixture plug (Fig. B), if you see a screw head, proceed to adjusting procedure. With the DD #5/32 drill bit provided, carefully drill thru the plugs. NOTE: the mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break thru. Use screw provided to secure and remove the plug. Carefully turn mixture screw clockwise until seated, then back out 3 turns.

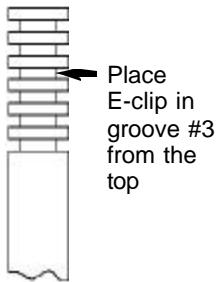

STAGE THREE INSTRUCTIONS

DYNOJET

4115.004

1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting the order of assembly. Use the DD #32 drill bit provided to enlarge slide lift holes (Fig. A).
2. Install the Dynojet needles on groove #3, using all stock spacers (Fig. A). Install the Dynojet washers above the e-clip.
3. Remove the main jet and replace with the Dynojet main jets provided. Use the DJ110 main jets with stock exhaust, or use the DJ114 main jets with free flowing aftermarket exhaust. Be sure that the jets you are changing are the main jets.
4. Locate the fuel mixture plug (Fig. B), if you see a screw head, proceed to adjusting procedure. With the DD #5/32 drill bit provided, carefully drill thru the plugs. NOTE: the mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break thru. Use screw provided to secure and remove the plug. Carefully turn mixture screw clockwise until seated, then back out 3 turns.

Fig. A

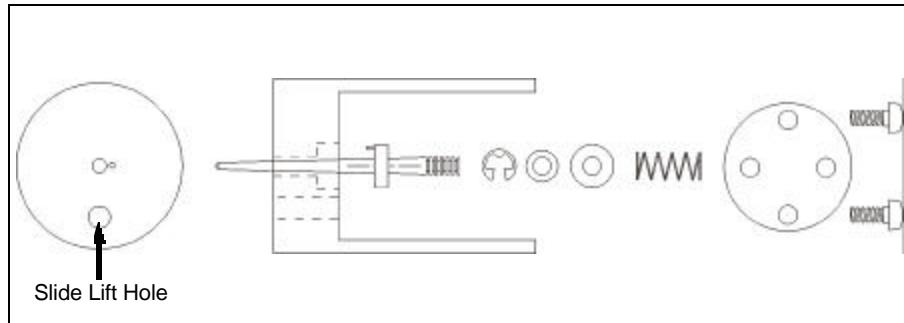


Fig. B

