




PROTECTIVE SPORTS PACKS

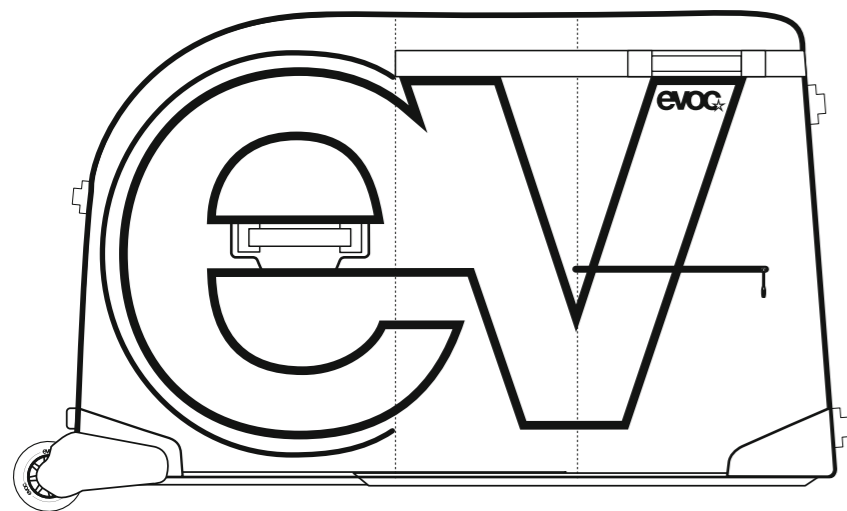

INSTRUCTION MANUAL
FOR PACKING
A MOUNTAINBIKE OR ROADBIKE IN YOUR
BIKE BAG


ENCLOSED PARTS

- 4x WHEELCASE TUBES
- 2x FRONT STICKS (A)
- 2x REAR STICKS (B)
- 1x BIKE BLOCK
- 2x WEBBING LOOPS
- 1x FRAME PAD

TOOLS NEEDED


- PEDAL WRENCH
- ALLEN KEY

BIKE TRAVEL BAG

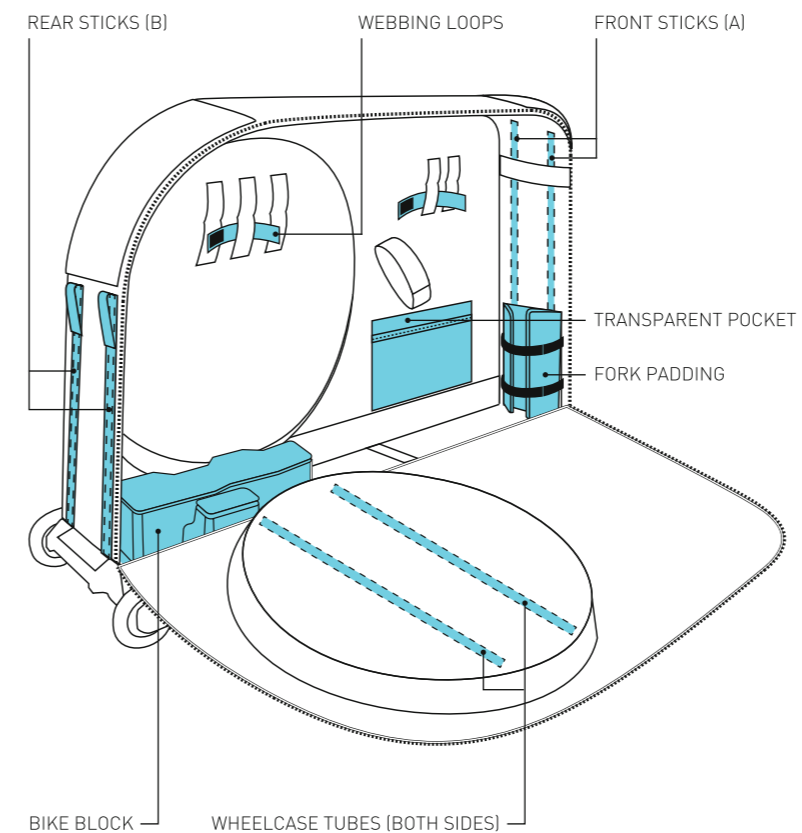


HOW TO ASSEMBLE YOUR BIKE TRAVEL BAG PRO

// 01

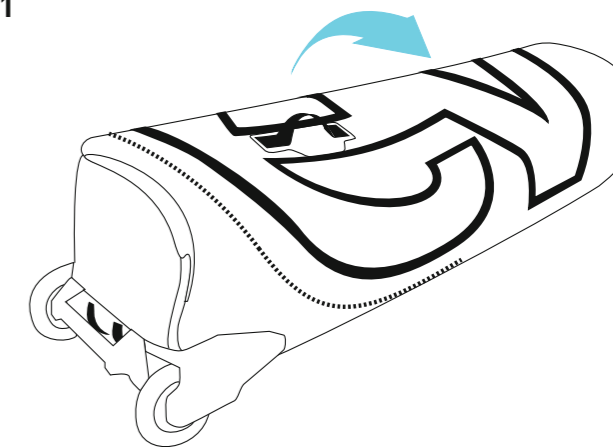


// 02

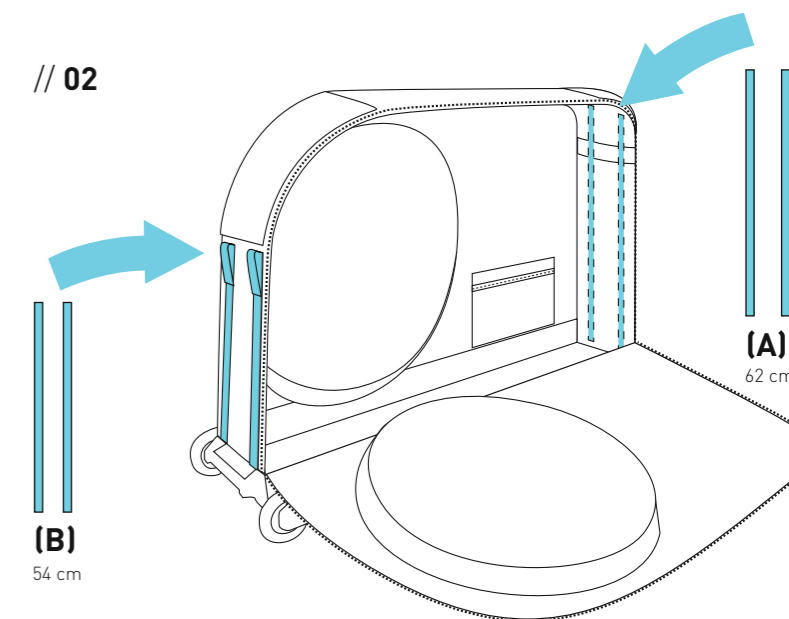


BIKE TRAVEL BAG

// 03

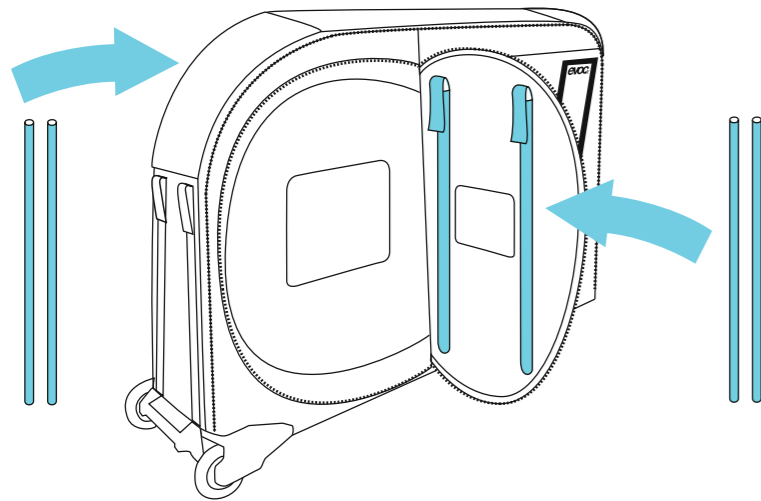


// 04

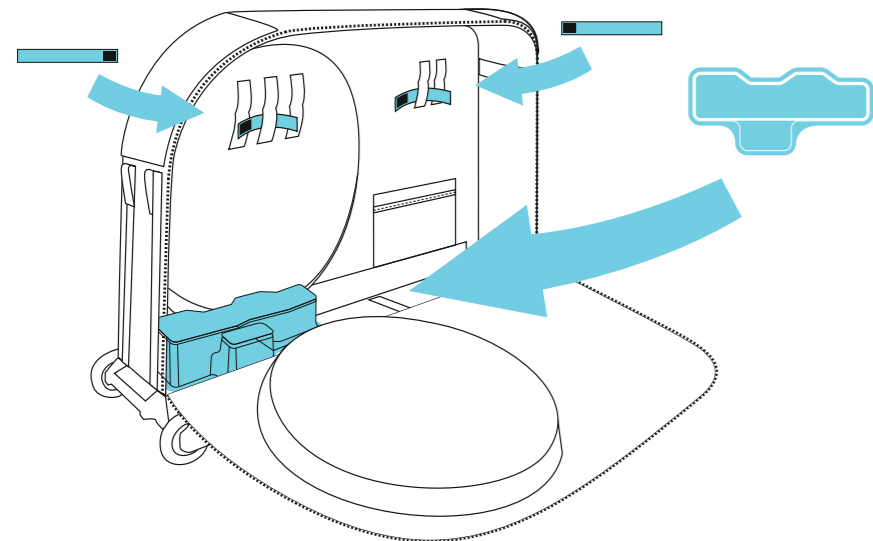


BIKE PREPARATION

// 05

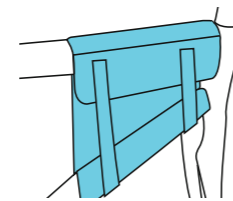


Add FRAME PAD

// 06

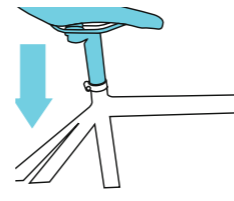


Lower in your bicycle saddle

// 07

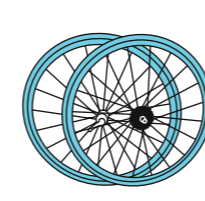


Remove both wheels

// 08

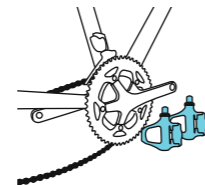


Remove both pedals

// 09

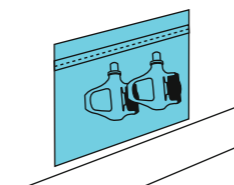


Put pedals in transparent pocket

// 10

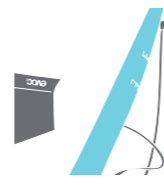


Remove handle bar

// 11

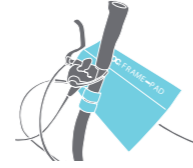


Fix bar to FRAME-PAD

// 12

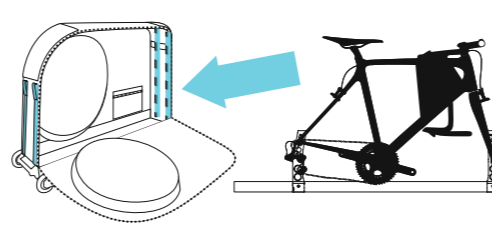


Place your bike in the BIKE BAG PRO

// 13

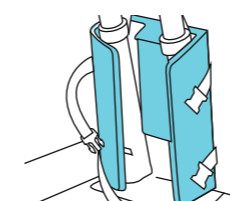



Put fork into FORK PADDING

// 14

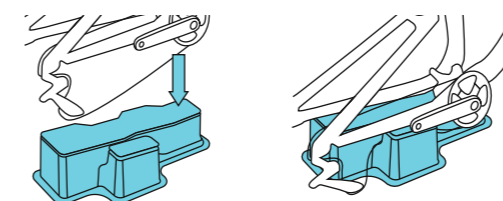

Position bottom bracket on BIKE BLOCK


// 15

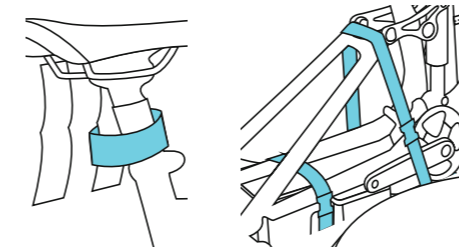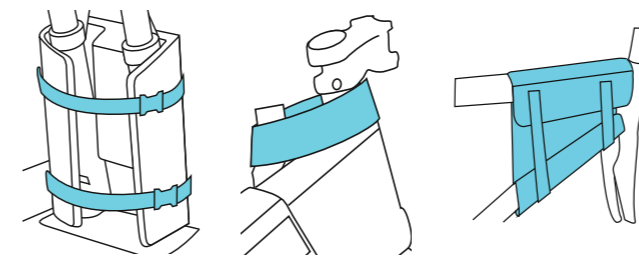

Fix your bike with red straps


BIKE TRAVEL BAG

// 17

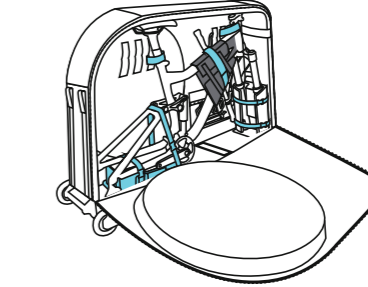

Looks like this? Almost done!

// 18

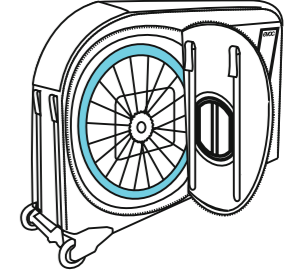

Don't forget to put wheels in wheel compartment

WARRANTY AND AFTER SALES SERVICE



WARRANTY
www.evocsports.com/service/warranty