



GIANT LOOP
giantloopsnow.com

ANCHOR STRAP KIT

Stainless steel quickmounts for
SNOWMOBILES + SNOWBIKES



- Set of 2 heavy-duty, lightweight Anchor Straps constructed with 1" nylon webbing
- Military-spec side-release buckles and fasteners
- 4 stainless steel GL mounts
- Stainless steel hardware (washers, nylock nuts, carriage bolts and button head bolts)

Bolt onto virtually any snowmobile or snowbike tunnel to secure Giant Loop's Revelstoke Tunnel Bag, Gas Bag Fuel Safe Bladder or other gear.



GO LIGHT. GO FAST. GO FAR.




INSTALLING YOUR GIANT LOOP QUICKMOUNTS



NOTE: Failure to follow recommended mounting instructions voids warranty. Manufacturer is not liable for any damage, injury or death that results from improper use and installation of products. By installing these products, user accepts all liabilities, terms and conditions outlined in the Liability & Warranty statement: <http://giantloopmoto.com/warranty/>




CAUTION: Before drilling, ensure bolt holes do not damage heat exchangers or other components. Keep webbing straps away from hot exhaust. Reposition if necessary.

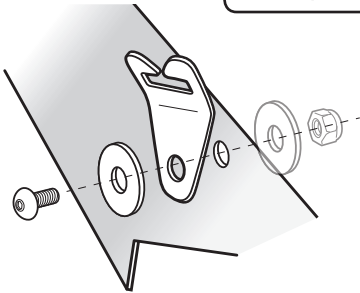


Mounts can be bolted to the top or sides of the tunnel.

Before installing, place your bag onto your machine in position that's best for your gear. Draw the webbing straps down to the ideal anchoring position and mark position for drilling, if there is no existing bolt hole present.


After locating a suitable position for an anchor point, drill a 10mm hole, and attach your GL Mount using the anchor bolt, washers and lock nut as shown.

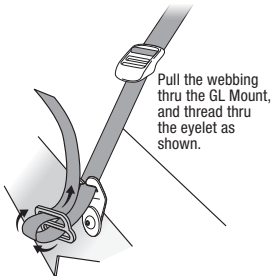

Pull the webbing thru the GL Mount, and thread thru the eyelet as shown.

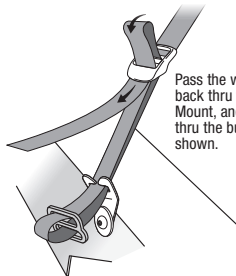

Pass the webbing back thru the GL Mount, and thread thru the buckle as shown.

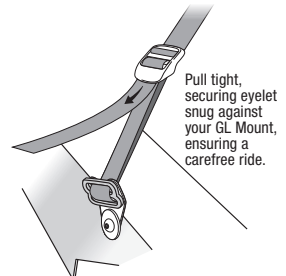

Pull tight, securing eyelet snug against your GL Mount, ensuring a carefree ride.



See giantloopmoto.com/warranty/ for complete warranty details.

