


MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

HONDA CBR600F '95/'96

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

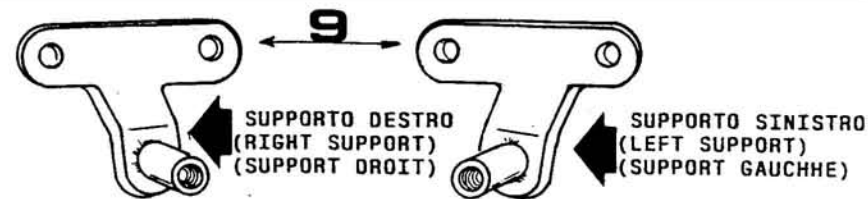


ATTENZIONE: TRA IL SUPPORTO N°10 E IL SUPPORTO COMPOSTO N°11 INSERIRE UN DISTANZIALE Ø 16x3 (N°13)

ATTENTION: BETWEEN THE SUPPORT N° 10 AND THE BUILT-UP SUPPORT N° 11, INSERT 1 SPACER (N° 13) Ø 16x3

ATTENTION: ENTRE LE SUPPORT N° 10 ET LE SUPPORT COMPOSE' N° 11, INSERER L'ENTRETOISE (N° 13) Ø 16x3.

ATTENZIONE: TOGLIERE I GANCI PORTA ELASTICI
ATTENTION: TAKE OFF THE ELASTIC HOLDER HOOKS
ATTENTION: LEVER LES CROCHETS PORTE-ELASTIQUE

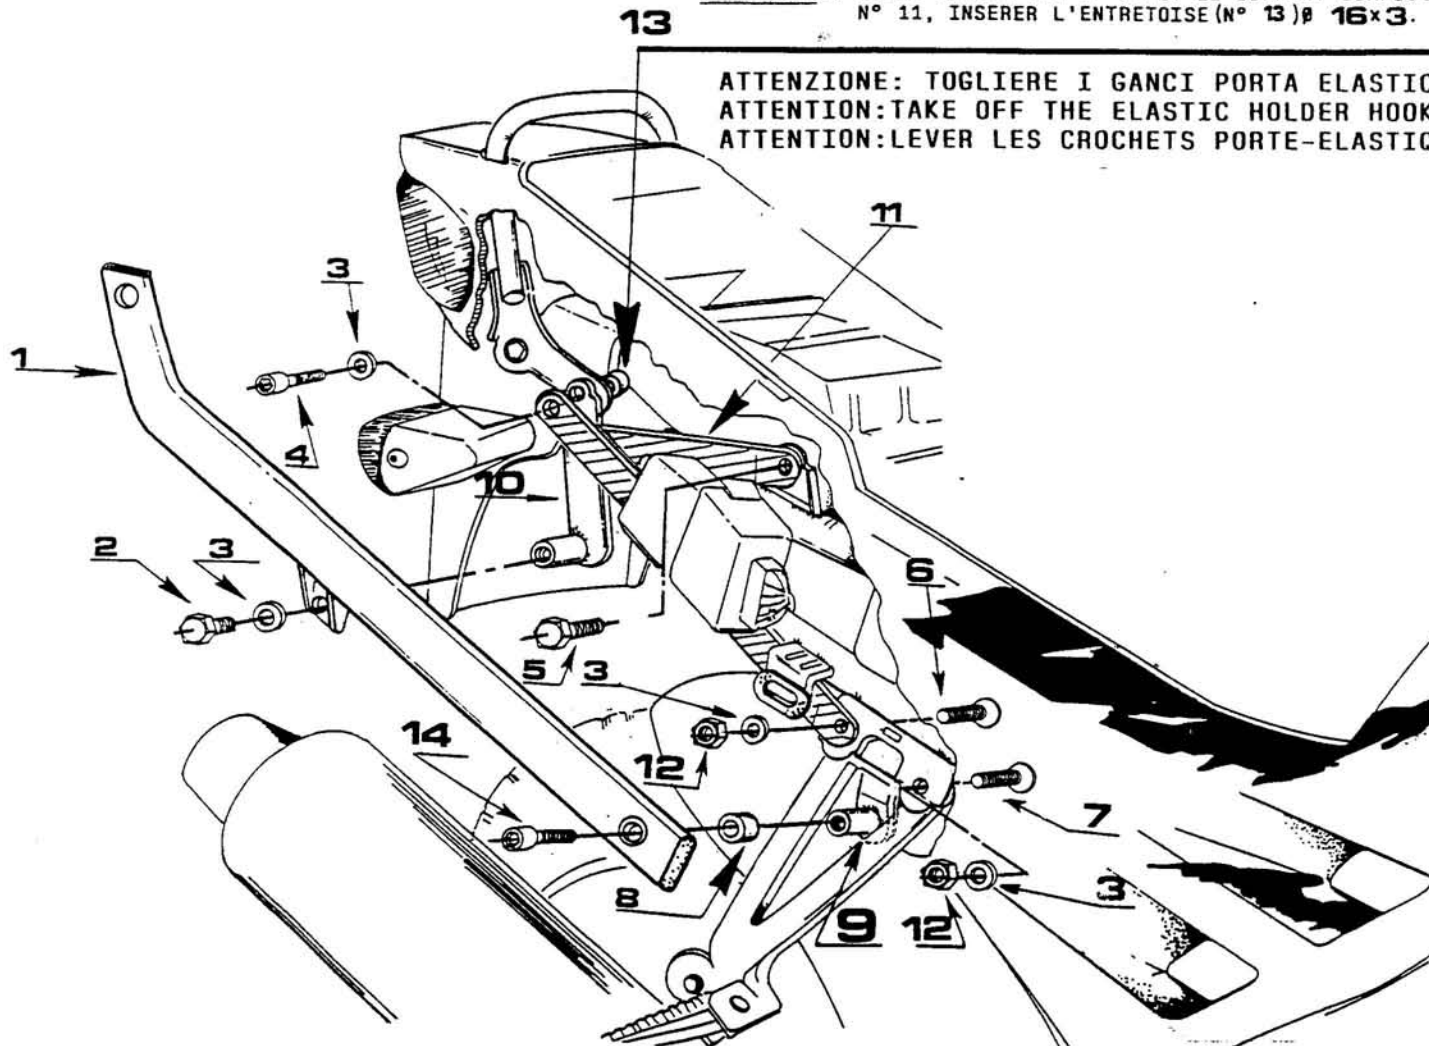

	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE)
1	MONORACK	2
2	VITE TE M 8 X 16 (SCREW M 8 X 16) (VIS M 8 X 16)	2
3	RONDELLA Ø 8 (WASHER Ø 8) (RONDELLA Ø 8)	8
4	VITE TCEI M 8 X 30 (SCREW M 8 X 30) (VIS M 8 X 30)	2
5	VITE ORIGINALE (ORIGINAL SCREW) (VIS ORIGINAL)	-
6	VITE TPSCEI M 8 X 50 (SCREW M 8 X 50) (VIS M 8 X 50)	2
7	VITE TPSCEI M 8 X 45 (SCREW M 8 X 45) (VIS M 8 X 45)	2
8	DISTANZIALE Ø 14 X 20 (COLLAR DISTANCE Ø 14 X 20) (COLLIER DE SEPARATION Ø 14X20)	2
9	SUPPORTO A "T" DX e SX ("T" SUPPORT) (SUPPORT A "T")	2
10	SUPPORTO (SUPPORT) (SUPPORT)	2
11	SUPPORTO COMPOSTO DX e SX (COMPOUND SUPPORT) (SUPPORT COMPOSE')	2
12	DADO M 8 (NUT M 8) (ECROU M 8)	4
13	DISTANZIALE Ø 16 X 3 (COLLAR DISTANCE Ø 16X3) (COLLIER DE SEPARATION Ø 16X3)	2
14	VITE TCEI M 8 X 40 (SCREW M 8 X 40) (VIS M 8 X 40)	4