

Joker MACHINE

streamliner FRONT TURN SIGNAL INSTRUCTIONS


For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403

PHONE: 909-596-9690, FAX: 909-596-9693

sales@jokermachine.com, www.jokermachine.com

WIRING DIAGRAM

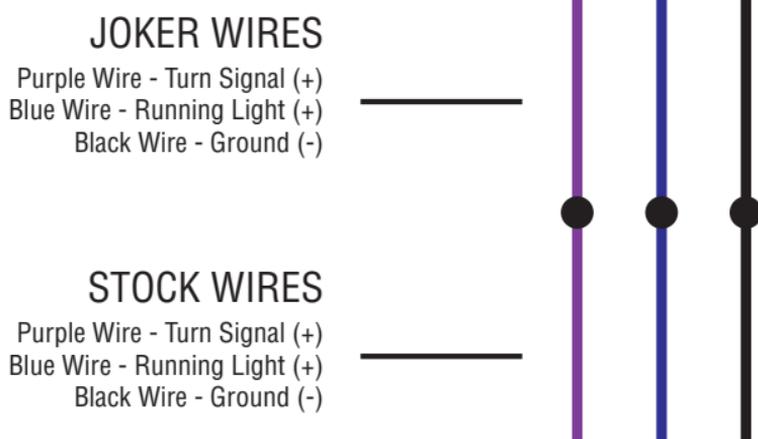

RECOMMENDED:

- Solder all wires for better installation results.
- Use 1/4" heat shrink.

MOUNTING TURN SIGNALS

1. Disconnect battery before beginning installation.
2. Remove stock turn signals brackets. Keep hardware.
3. Remove stock turn signal plug. Cut below plug to utilize the stock plug connected to the wiring harness.
4. If soldering figure out how much heat shrink to use and slide it over wires before making a connections.
5. Connect wires by solder or supplied 18-22 butt connectors. Use diagram to match wires.
6. Seal connections with heat shrink.
7. Using stock hardware mount Streamliner front turn signals.