

POLARIS RANGER XP


NET RAIL

PART # 101005

Hardware Kit: HK-303

Kit Components:


Qty.	Part Description
2.....	Net Rail
4.....	5/16"-18 x 3" Flange Bolt
4.....	5/16"-18 Flange Nut

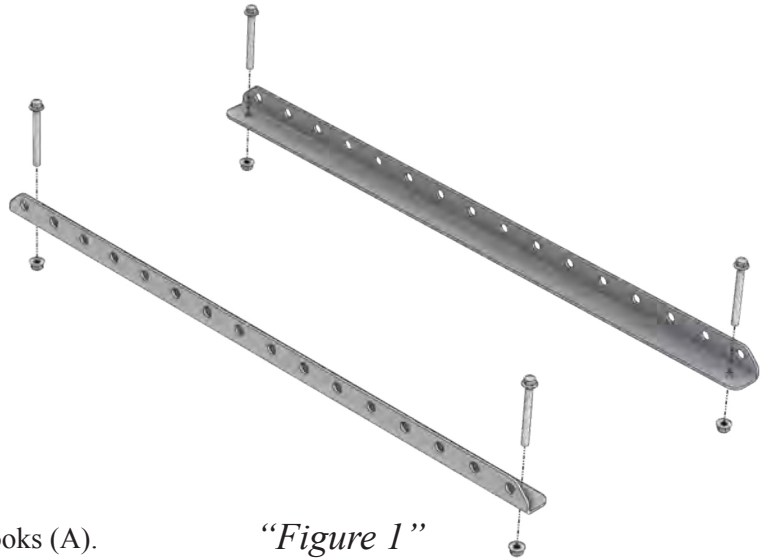

“Figure 1”

INSTALLATION INSTRUCTIONS:

1. Remove Bed Hooks (A) if installed.
2. Install Net Rails using the holes (B) for the Bed Hooks (A). Secure with the 5/16" x 3" Bolts (C) and Nuts.
3. Tighten down all bolts

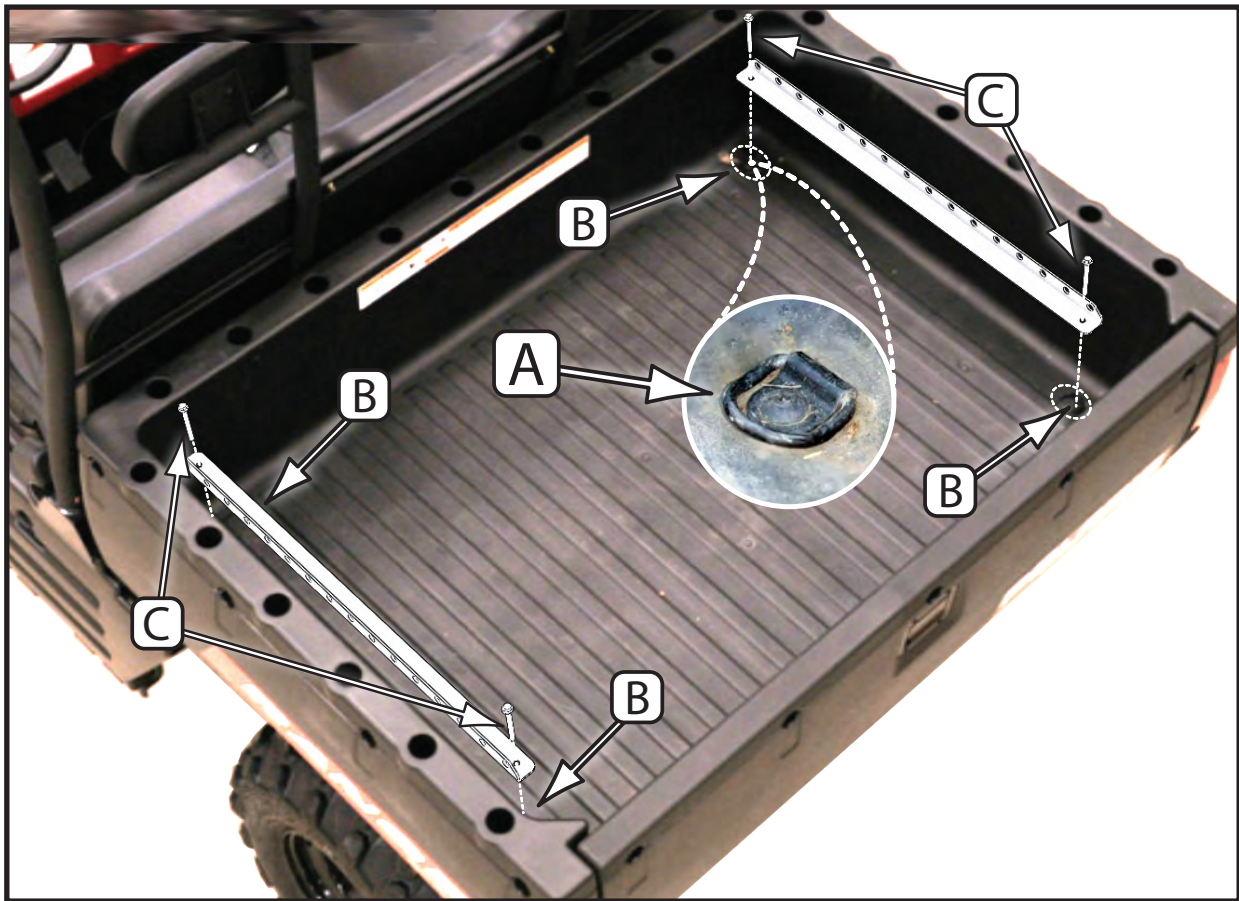

“Figure 2” Bed Hook Removal and Rail Install

