POLARIS RZR 1000

Rear Receiver

PART # 101200 Hardware Kit: HK-011

Kit Components:

n
n

1 KFI Linkage Plate
1 Receiver Plate
4 3/8"-16 Flange Bolt
4 3/8"-16 Nylock Nut (Not Used)
4
1 3/8"-16 x 1 1/4" Flat Head Screw (Not Used)

INSTALLATION INSTRUCTIONS:


- 1. Find a jack to raise the rear end of the machine and take the pressure off the trailing arm linkages.
- 2. Remove nuts and bolts (A) on rear plate as shown in Figure 2. Plate will come off. Keep all hardware as it will be reused.
- 3. Turn the bolts around and reinstall them as shown in Figure 3.
- 4. Place KFI linkage plate over bolts and linkages, reinstall using nuts removed in Step 2 as shown in Figure 4. Tighten bolts and nuts to 33 ft. lbs. (45Nm).
- 5. Install the receiver plate using the 3/8" Flange Bolts supplied in the hardware kit as shown in Figures 1&5.
- 6. Tighten all bolts.




"Figure 5" Receiver Install



©2014 Copyright Kappers Fabricating, Inc. All rights reserved

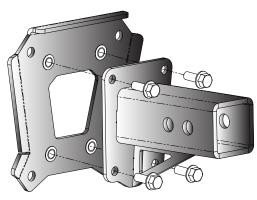

"Figure 1"

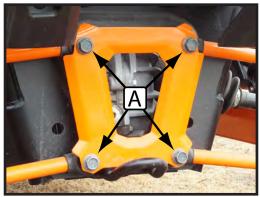

"Figure 2" Rear Plate



"Figure 3" Rotating Bolts



"Figure 4" Plate Install