

CAN-AM COMMANDER

Plow Mount


PART # 105275

Hardware Kit: HK-133

Kit Components:

Qty. Part Description


1.....	Plow Mount Plate
2.....	3/8" Square Nut
2.....	M6 X 30mm Bolt
2.....	6mm X 18mm Flat Washer
2.....	5/16"-18 X 1" Bolt
2.....	5/16"-18 Flanged Nylock Nut
2.....	3/8"-16 X 1 1/2" Bolt

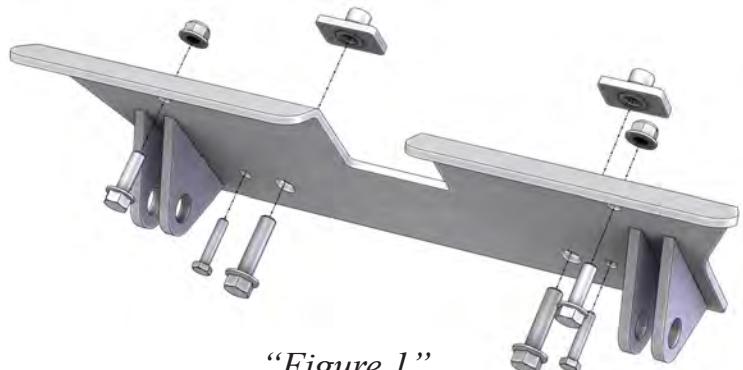


“Figure 1”

INSTALLATION INSTRUCTIONS:


1. Remove bolts (A) on front lower panel as shown in Figure 2.
2. Place Square Nuts behind holes (B) as shown in Figure 3.
3. Place mount plate over lower front panel and install the M6 Bolts and 3/8" Bolts (C) supplied with the hardware kit in the lower holes as shown in Figure 4.
4. Using the mount plate as a template, drill the 2 upper holes and install the 5/16" hardware (D) as shown in Figure 4.
5. Tighten down all bolts.
6. See UTV Plow Tube System instruction manual for tube attachment.

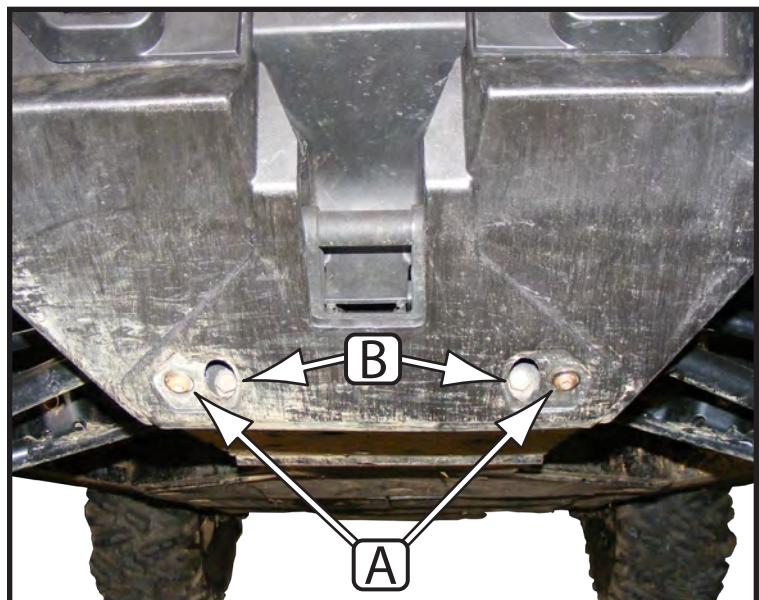

“Figure 2” Front of UTV

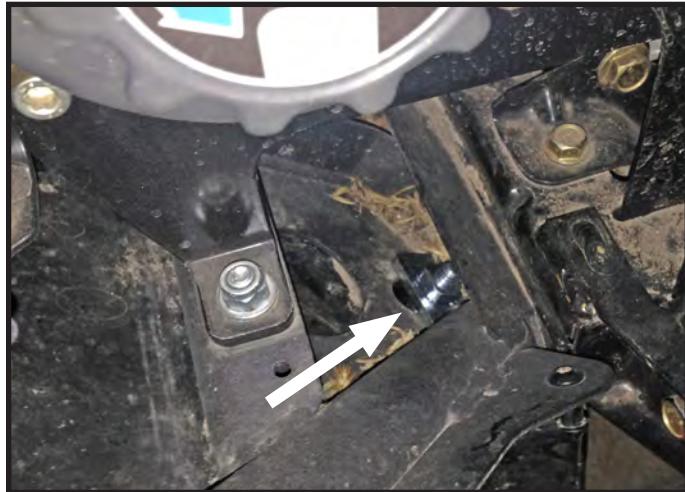

“Figure 3” Square Nut Placement

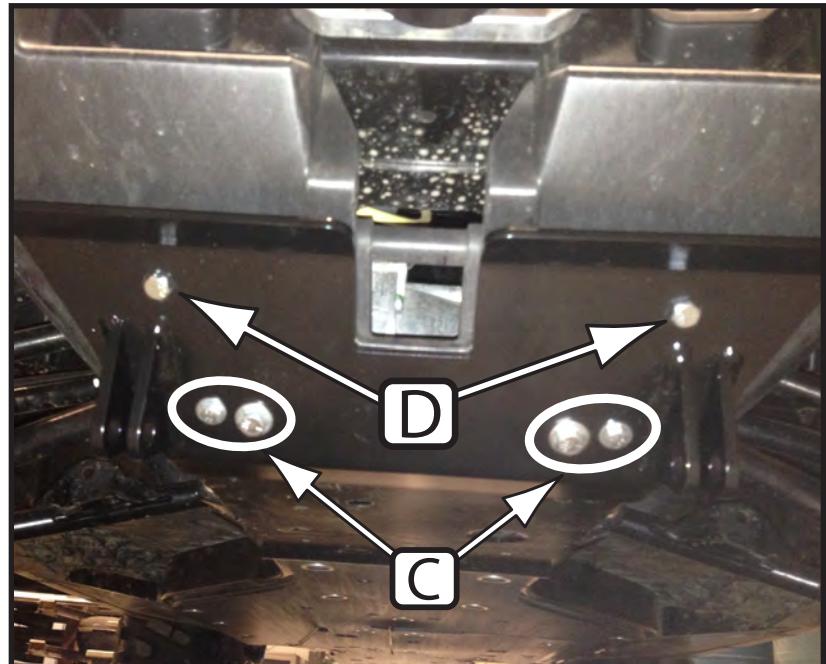

“Figure 4” Mount Plate Install

