

TEXTRON PROWLER PRO

Plow Mount

Plow Mount


PART # 106000

Hardware Kit: HK-011

Kit Components:

Qty. Part Description


- 1..... Plow Mount
- 4..... 3/8"-16 Hex Nut Nylock (only 2 used)
- 4..... 3/8" Flat Washer (only 2 used)
- 4..... 3/8"-16 x 1 Hex Bolt Flange (only 2 used)
- 1..... 3/8-16 X 1-1/4" Flat Head Screw (not used)

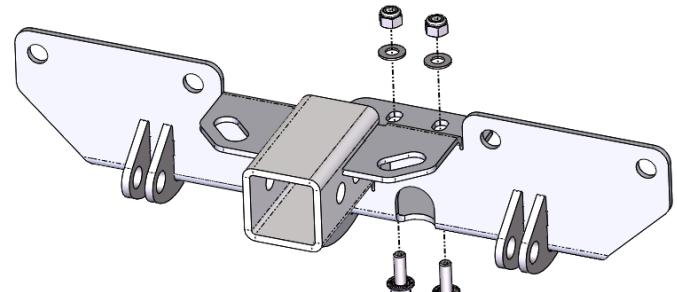

INSTALLATION INSTRUCTIONS:

1. Remove tow hooks and front lower fascia .
Figure 2 Fascia will not be reinstalled. Save tow hooks
2. Align your mount to the holes and insert the 3/8" hardware (A) supplied with your mount from the bottom side *Figure 3*
3. Reinstall tow hooks (B) through plow mont
Figure 4. Tighten all hardware
4. See UTV Plow Tube System instruction manual for tube attachment.


“Figure 1” Exploded View

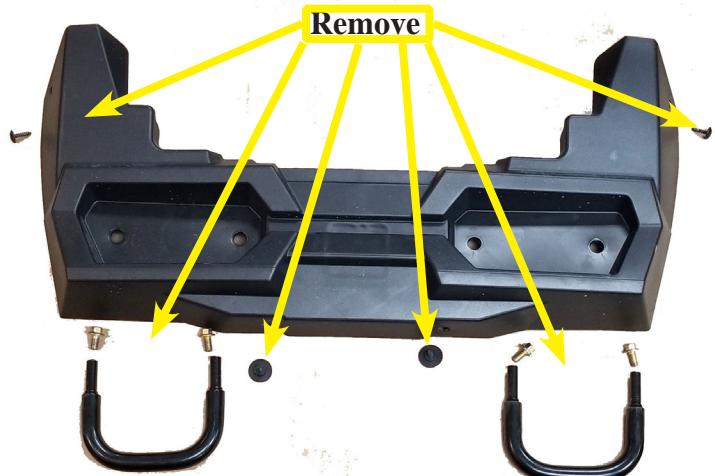

“Figure 2” Tow Hook and Fascia Removal



“Figure 3” Bottom Bolt Locations

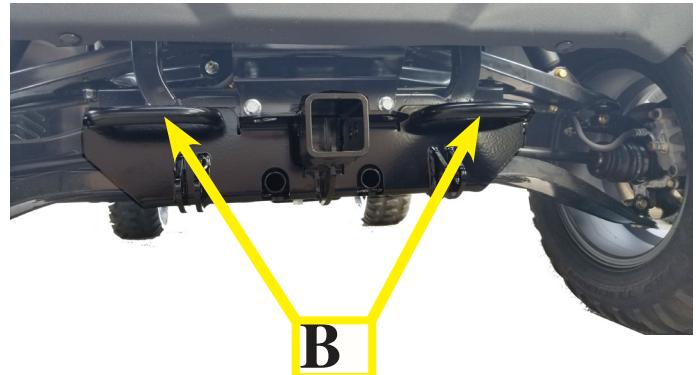

“Figure 4” Top Tow Hook Installed