


# NEGATIVE -1" SQ TUBE LEVELING KIT

**Plow Accessory**

**PART #106320**

<b>Kit Components:</b>		
<b>Item #</b>	<b>Qty.</b>	<b>Description</b>
1	2	-1" PIN ATTACHMENT BRACKET
2	1	HARDWARE KIT (HK-398)
2.1	6	3/8"-16 X 1.25 HEX BOLT FLANGE
2.2	6	3/8"-16 HEX NUT FLANGE NYLOCK

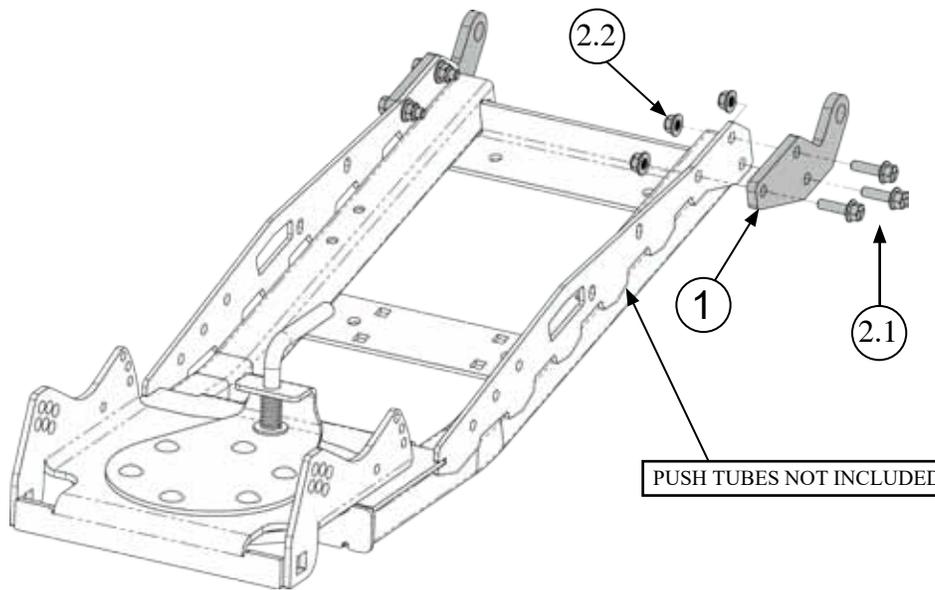

## INSTALLATION INSTRUCTIONS

1. Remove current standard attachment brackets and discard hardware
2. Fasten the pin attachment brackets (1) to the push tubes using bolts (2.1) and nuts (2.2) as shown in image above.
3. Torque 3/8" bolts to 31lb-ft

