



## FAIRING VENT SCREEN FOR 2015+ FLTR H-D

### INCLUDED:

- (1) Pair Vent Screens
- Mounting Adhesive
- Instruction Sheet

### TOOLS NEEDED:

- Phillip #2 Screwdriver
- T25 Torx Driver
- T30 Torx Driver
- 3/16 Allen Wrench
- Front Fender Cover or Large Towel


### QUESTIONS?

 **EMAIL:** [info@getklocked.com](mailto:info@getklocked.com)  
 **CALL:** (605) 996.3700

**WHEN REMOVING PAINTED PARTS IN THE FOLLOWING STEPS, TAKE CARE TO PROTECT YOUR PAINTED PARTS FROM DAMAGE.**



Remove the four phillips screws holding on the windshield. Remove windshield.

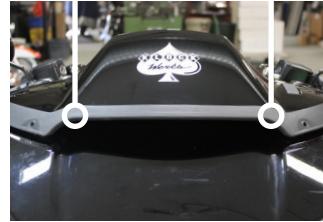

Remove fairing top vent/cowl piece. Pull up on cowl on the left and right side of the top vent opening to release the snap in plastic inserts.



The cowl piece is now free to be pulled away from the inner fairing and removed.



With the cowl removed the top of the radio and speaker pods are exposed.



With your 3/16" Allen Wrench remove the bolts located behind the left and right turn signals.



With your T25 Torx driver, remove the screws and wind deflectors located under the left and right glove box doors.



Remove the left and right speaker grill. From the open top side of the fairing you can press on the inside of the speaker grills and pop them out. There are two snap in plastic inserts holding each grill in.

## INSTRUCTION SHEET



Locate the turn signal wire plugs. They are three wire plugs with a black, purple and blue wire. Unplug both the left and right turn signal plugs.



Remove the T27 Torx screws located in the speaker opening of the inner fairing. **Once these bolts are removed your fairing will be loose and no fasteners will be supporting the fairing. You may want assistance from a friend to support the outer fairing during this step.**



With the outer fairing removed the headlamps, side trim, and side vents are now exposed.


You can now remove the outer fairing.




Remove the headlamp left and right side trim pieces with your T25 Torx driver. There is one screw on the top and the bottom of the side trim pieces.



Once the headlamp trim is removed the side vents are now totally exposed.

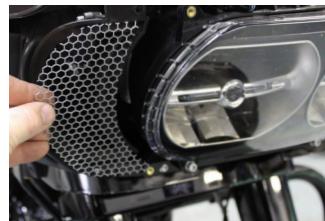

Locate the left and right vent screens. Place the vent screens in their proper location and fit the screens into place.

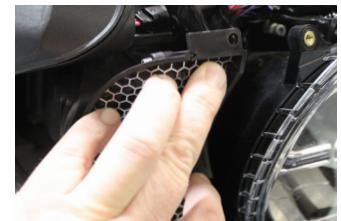

The screens are flat and the openings have a slight contour to them. The vent screens are very pliable and can be easily shaped to the contour of the vent openings by using light pressure with your fingers to shape the screen edges to fit the edges of the vent opening.



When the vent screens are shaped properly there should be a slight friction fit to hold them in place. If they do not hold themselves in place a couple of dabs of silicone on the top and bottom edges of the screen can hold them in place.



You can now replace the left and right headlamp trim pieces to lock your vent screens in place.

Here you see both vent screens and headlamp trim pieces in place and the vent screen installation is complete.



You will now need to reinstall your outer fairing, speaker grills, upper fairing cowl and windshield. Follow the previous instructions in reverse to reinstall these parts. Please refer to your Road Glide service manual if you have questions or require fastener torque specs.

**Thank You for choosing Klock Werks!**