




Installation Instructions

For 2-1 Elypse Front Indicators K68497 for Sportster S

1. Remove OEM front turn signals.
2. Perform next step one side at a time to make holding headlamp bracket easier.
3. Remove one headlight bracket mounting bolt and install K68497 by using the supplied longer mounting bolt. Use medium strength thread locker.
4. Connect LED wires to existing turn signal wires following the guidelines below.
 - a. LED black wire (ground) -> harness black wire in pin position 3
 - b. LED yellow wire (turn) -> harness blue/pink wire in pin position 2
 - c. LED white wire (running) -> harness blue wire in pin position 1

Note: HD Schematic shows wire colors of turn signal harness as black (ground) in pin 3, blue/pink (turn) in pin 2 and blue (running) in pin position 1. Our test bike only had blue wires in pin position 1 and 2 on both left and right turn signal harness's.

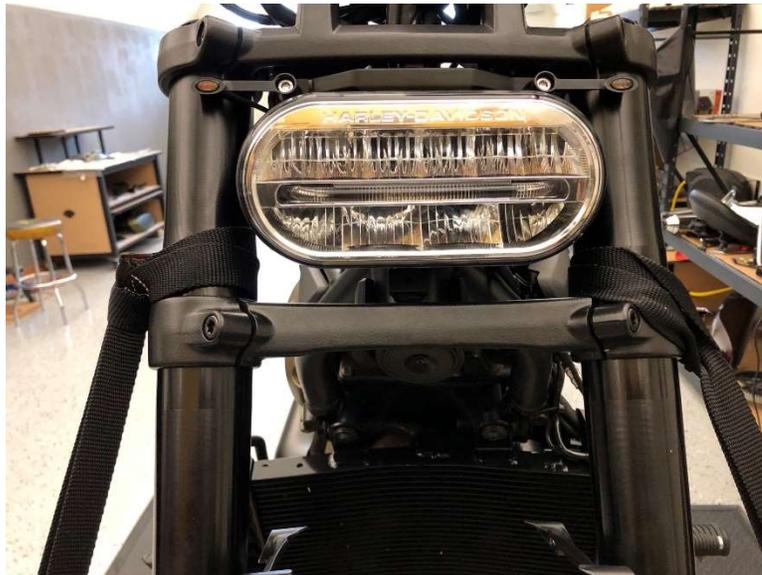

For the latest install guides, video's, FAQ's. and Tech-Tip's scan QR code!



Revision Date: 4/28/2022

www.kodlinusa.com