



QUICK RELEASE ATTACHMENT POINT KIT 1639

FITS: '04-UP SPORTSTERS

NOTE: SPORTSTER MODELS WITH H-D HARD SADDLEBAGS (91412-04) MUST PURCHASE H-D HARDWARE KIT 91405-04 FROM AN AUTHORIZED H-D DEALER.

PARTS INCLUDED

- 4 5/16-18 x 2-1/4" Button Socket Cap Screw (BSCS)
8 End Washer (13/16" x 5/16" x .115)
4 5/16-18 Flange Locknut
2 Spacer, Chrome (0.695" x 0.325" x 0.075")
2 Front Sleeve (15/32" x 5/16" x 0.31")
4 Front Nylon Wear Sleeve
2 Spacer, Chrome (0.695" x 0.325" x 0.187")
2 Rear Sleeve (15/32" x 5/16" x .695")
4 Rear Nylon Wear Sleeve
4 5/16-18 x 3-3/4" Hex Head Cap Screw
2 Spacer, Black (0.75" x 0.325" x 0.425")
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Torx Wrenches Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

ATTENTION! The installation of this product may require removing the rear shock. A factory service manual may be helpful for the installation of this product.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



FRONT MOUNTING POINT

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the front mounting screw from the fender strut. Assemble two (2) of the Front (short) Nylon Wear Sleeves over one (1) Front (short) sleeve. (PIC 1)

STEP 3 Using one 5/16-18 BSCS from the kit, mount two (2) End Washers, the Front Mount Assembly from Step 2 and one (1) Chrome Spacer (0.695" x 0.325" x 0.075"). See PIC 2.

STEP 4 Install the complete Front Mounting Point Assembly to the front hole in the fender (PIC 3). Thread one (1) 5/16-18 Flange Locknut on the screw from inside the fender. Repeat all steps for the opposite side and tighten all hardware.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

REAR MOUNTING POINT

STEP 1 Remove the rear mounting screw from the fender strut. Assemble two (2) of the Rear (long) Nylon Wear Sleeves over one (1) Rear (long) sleeve. (PIC 4)

STEP 2 Using one 5/16-18 BSCS from the kit, mount two (2) End Washers, the Rear Mount Assembly from Step 1 and one (1) Chrome Spacer (0.695" x 0.325" x 0.187"). See PIC 5.

STEP 3 Install the complete Rear Mounting Point Assembly to the rear hole in the fender (PIC 6). Thread the screw in to the fender until tight (there is a clip nut inside the fender - make sure it is in place). Repeat all steps for the opposite side and tighten all hardware.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

PROCEDURE FOR BIKE WITH SADDLEBAGS

FRONT MOUNTING POINT

STEP 1 If your bike is equipped with H-D saddlebags (except PN 91412-04), follow the procedure below.

ATTENTION! The installation of this product may require removing the rear shock. A factory service manual may be helpful for the installation of this product.

STEP 2 Secure the motorcycle in an upright position. Remove the rear shock (refer to factory service manual) and lower the wheel to gain adequate clearance between the rear tire and fender for access to the fender hardware.

STEP 3 Using a 5/16-18 HHCS, mount the bolt through the front fender hole from the inside.

STEP 4 Assemble one (1) Chrome Spacer (0.695" x 0.325" x 0.075"), two (2) End Washers, large Black Spacer and the Front Mount Assembly (see "Front Mounting Point" instructions above) on to the threaded end of the HHCS. See PIC 7.

NOTE For H-D Saddlebag Kit #88312-07, the large Black Spacer is not used in the front mount location.

NOTE Replace the short bushing (included in the H-D saddlebag kit) before securing the saddlebag.

STEP 5 Secure the saddlebag with the 5/16 Flange Locknut.


-cont.-

Kuryakyn®

PIC. 1



PIC. 2

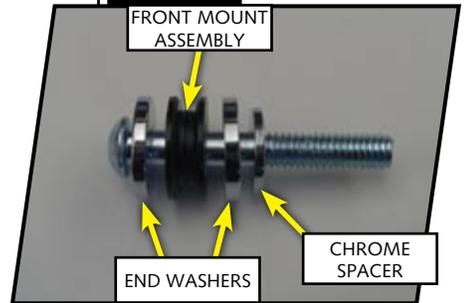


PIC. 3



PIC. 4



PIC. 5

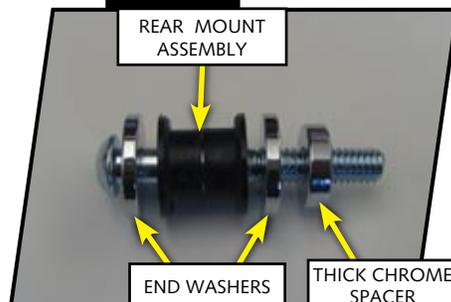

PAGE

2

REAR MOUNTING POINT

STEP 1 Using a 5/16-18 HHCS, mount the bolt through the rear fender hole from the inside.

STEP 2 Assemble one (1) Chrome Spacer (0.695" x 0.325" x 0.187"), two (2) End Washers, large Black Spacer and the Rear Mount Assembly (see "Rear Mounting Point" instructions above) on to the threaded end of the HHCS. See PIC 8.

NOTE The large Black Spacer is only used in the rear mount location for H-D Saddlebag Kit PN 88312-07.

NOTE Replace the long bushing (included in the H-D saddlebag kit) before securing the saddlebag.

STEP 3 Secure the saddlebag with the 5/16 Flange Locknut.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.


Ride On!

Kuryakyn[®]


PIC. 6



PIC. 7

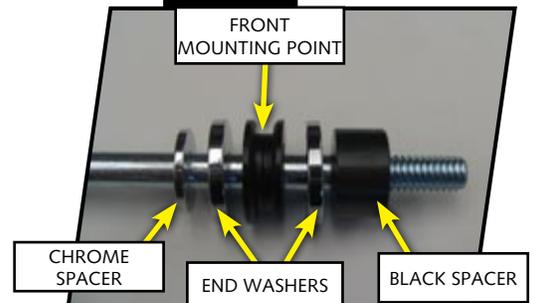

PIC. 8

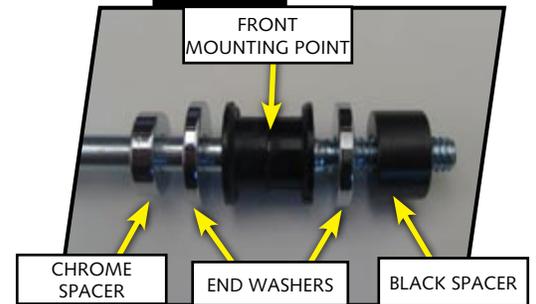

PAGE
3