



TECH-CONNECT POUCH W/MIRROR MOUNT

1797

PARTS INCLUDED

- 1 Tech-Connect Pouch Assembly
- 1 Thick Foam Pad
- 1 Thin Foam Pad
- 1 Mirror Mount Kit Containing:
 - 1 Mirror Mount
 - 1 M10 Internal Tooth Lock Washer
 - 1 5/16" Flat Washer
 - 1 Package Anti-Seize
- 1 Hardware Kit Containing:
 - 1 1/4" Flat Washer
 - 1 1/4" Lock Washer
 - 1 1/4"-20 Acorn Nut
 - 1 Anti-seize Package
 - 1 Nylon Tension Nut
 - 1 Ball Stud
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

NOTICE	IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.
---------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

TOOLS SUGGESTED

Set of Metric and Standard Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



NOTICE

It is the installer's responsibility to ensure that there is adequate clearance between the Tech-Connect Pouch and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 2

Determine which side of the motorcycle that you would like to mount the Mirror Mount. Remove that mirror.

STEP 3

Determine the orientation of the mirror mount so that it will not interfere with any component on the motorcycle. (The typical mounting position is opposite the direction of the mirror head.) PIC 1 Insert the threaded portion of the mirror through the mirror mount. Place the included internal tooth lock washer under the mirror mount and thread the mirror back to the mount on the motorcycle. **(Depending on the area of installation you may need to use the included flat washer between the internal tooth lock washer and the Mirror Mount to give the Mount a level surface.)**

NOTICE

Confirm proper thread depth engagement between the mirror and the perch. The mirror should thread in to the perch 1-1/2 times it's thread diameter.

NOTICE

Ensure that the supplied anti-seize is applied to all threaded fasteners before installation; this will make future removal of the fasteners easier.

STEP 4

To mount the Tech-Connect Pouch, place the ball stud through the Mirror Mount, lining up the edges of the flats on the stud with the notches in the mirror mount. PIC 2 Place the flat washer first, then the lock washer over the protruding end. Apply anti-seize to the threaded portion of the stud and secure with the acorn nut. PIC 3

STEP 5

Place the nylon tension nut over the ball end of the Ball Stud. Install the Tech-Connect Pouch to the Ball Stud by inserting the ball into the fingers on the Pouch back plate. PIC 4 Thread the nylon tension nut onto the fingers. Tighten the tension nut to the desired resistance. See Step 9, Page 3 for further information on the tension nut.

STEP 5

Turn the handlebars in both directions to their full stop position and ensure that there is clearance between the Tech-Connect Pouch and the gas tank, dash and other components on the motorcycle.

WARNING





ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED. INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

WARNING

TO PREVENT POSSIBLE LOSS OF CONTROL, WHICH COULD RESULT IN SERIOUS INJURY OR DEATH, WE DO NOT RECOMMEND REMOVING, REPLACING OR ADJUSTING THE DEVICE IN THE TECH-CONNECT POUCH WHILE RIDING THE MOTORCYCLE .

CAUTION

Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

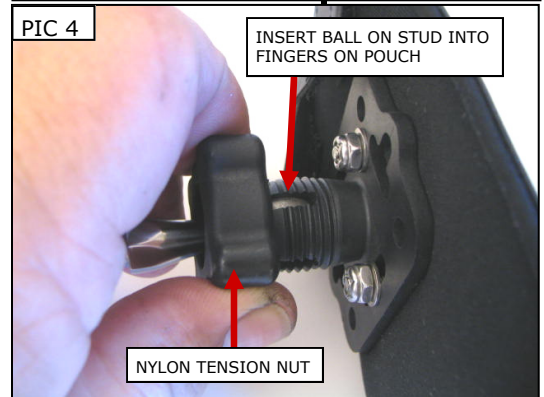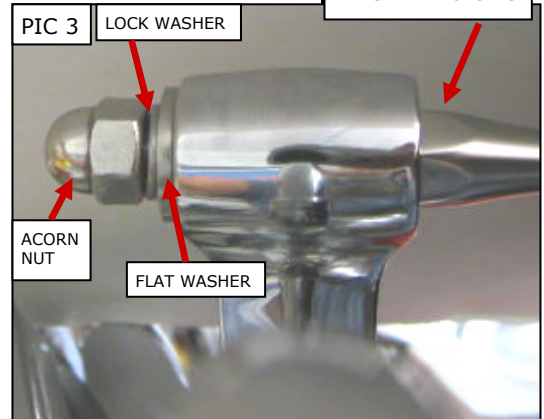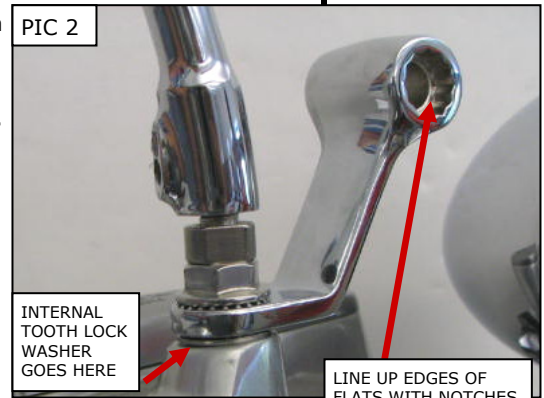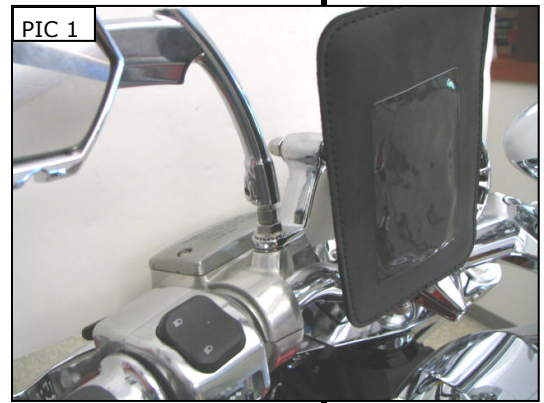

-cont.-

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

USING THE TECH-CONNECT POUCH

NOTICE

Protect the clear window from damage, tools may scratch the window surface.

STEP 6

There are two different thicknesses of foam padding included with the Tech-Connect Pouch. The thinner pad will be used with most devices, the thicker pad with the super thin devices.

NOTE: The foam inserts included fit inside the pouch and can be cut-to-fit to secure smaller GPS units as well as other small electronics or accessories. PIC 5

STEP 7

To remove the Tech-Connect Pouch from the bike for storage, loosen the nylon tension nut on the back side of the holder until it clears the threads. PIC 6 Snap the Tech-Connect Pouch off of the ball. PIC 7 Remove the nylon tension nut from the ball stud and thread it to the Tech-Connect Pouch for storage.

STEP 8

To replace the Tech-Connect Pouch on the swivel ball, remove the nylon tension nut from the back of the Pouch. Slide the tension nut over the swivel ball, snap the Tech-Connect Pouch back on the swivel ball and thread the tension nut onto the Tech-Connect Pouch. Tighten the tension nut to the desired resistance on the ball stud.

STEP 9

To adjust the angle of the Tech-Connect Pouch, loosen the nylon tension nut, adjust the Tech-Connect Pouch to the desired position and tighten the tension nut. PIC 6 The tension nut will allow you to keep the Tech-Connect Pouch in the same position or, with a little less tightness, allow you to move the Tech-Connect Pouch on the swivel ball.

WARNING

ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED. INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

WARNING

DO NOT ATTEMPT TO OPERATE OR REMOVE THE MOBILE DEVICE FROM THE POUCH WHILE OPERATING THE MOTORCYCLE.

NOTICE



Ensure that the Mobile Device is secure in the Tech-Connect Pouch. Küryakyn is not responsible for any Device that is stolen or damaged from use in this Pouch or from the Pouch not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

NOTICE

The Tech-Connect Pouch is not waterproof. Remove the Mobile Device and stow during inclement weather. Küryakyn will not be responsible for any Mobile Device damaged when using this Pouch.

NOTICE

Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.

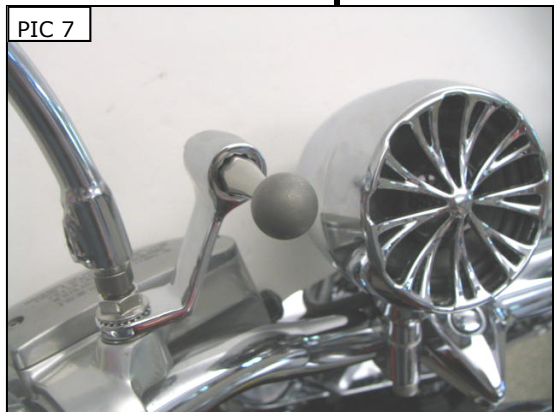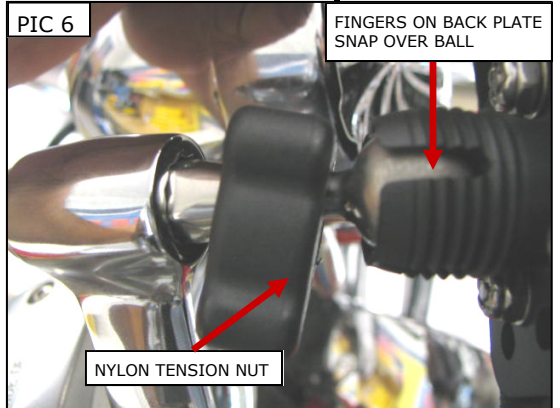

Ride On!