

INSTALLATION INSTRUCTIONS

MESH AIRDAM FOR TOURING, CHROME

6498

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|---------------|---|--|
| 1 | Airdam | 1 | Hardware Kit, containing: |
| 1 | Upper Bracket | 7 | 1/4-20 X .625" Socket Head Cap Screws with Patch |
| 1 | Lower Bracket | 2 | 1/4-20 X .625" Hex Head Cap Screws with Flange |

YOU WILL ALSO NEED:

Ball end hex bit sockets set, socket wrench extension set, ft-lbs (Nm) torque wrench, combination wrench set

PICTURES SHOWN ARE OF THE BLACK PARTS. INSTALLATION OF THE CHROME PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 2 Remove existing hardware from the right and left floorboard forward bracket; set them aside they will be reused.

Note: Refer to your motorcycle's service manual for assistance.

STEP 3 Refer to PIC 2 and 3. Locate provided Airdam, Lower Bracket, and three (3) Socket Head Cap Screws. On the back side of the Airdam, align and place the lower bracket, with the hooks of the bracket facing downward, on the bottom of the Airdam. Fasten bracket to Airdam using three (3) screws.

STEP 4 Refer to PIC 4 and 5. Locate provided Upper Bracket and four (4) Socket Head Cap Screws. On the back side of the Airdam, align and place the upper bracket with the four (4) mounting holes located near the top. Very lightly fasten the Upper Bracket to the Airdam using the four (4) screws.



KURYAKYN.COM

INSTALLATION INSTRUCTIONS

MESH AIRDAM FOR TOURING, CHROME

6498

-CONTINUED-

- STEP 5** Refer to PIC 6. Locate the mounting hardware that was removed in Step 2, from the left and right floorboard forward bracket. Insert the bolts into the mounting holes. On the inside of the bike's frame, align and place the lower bracket hooks of the Airdam to rest on the inserted bolts. Gently lean the Airdam against the front fender.

Note: Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

- STEP 6** Refer to PIC 6. Remove the existing upper screws from the frame downtube; set them aside they will NOT be reused.

- STEP 7** Align the Upper Bracket mounting holes with the frame downtube upper mounting holes. Use masking or painters tape to wrap around the frame and upper bracket.

- STEP 8** Refer to PIC 7. Remove the four (4) Socket Head Cap Screws that connect the Airdam to the Upper Bracket. Gently lean the Airdam against the front fender.

- STEP 9** Refer to PIC 7. Locate two (2) provided Hex Head Cap Screws. Insert the screws through the front of the bracket and frame downtube upper mounting holes. Fully tighten hardware.



- STEP 10** Realign and fasten the Airdam to the Upper Bracket using the four (4) Socket Head Cap Screws removed in Step 8.

- STEP 11** Starting on the right (brake) side, remove the bolt from the floorboard forward bracket mounting hole. Leave the left (clutch) side in, so that the Airdam is held in place.

- STEP 12** Refer to PIC 8 and 9. Realign the floorboard forward mounting bracket. With the lock washer thread on the bolt, insert the bolt through the floorboard bracket, the mounting hole, and the Airdam's Lower Bracket hook. Attach the flange nut to the bolt.

- STEP 13** Repeat Steps 11 through 12 for the left (clutch) side. Fully tighten both mounting bolts.

TORQUE VALUE OF FLOORBOARD BRACKET SCREWS:
36-42 FT-LBS (48.8-56.9 NM)

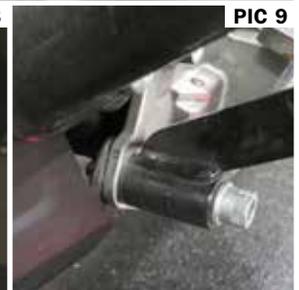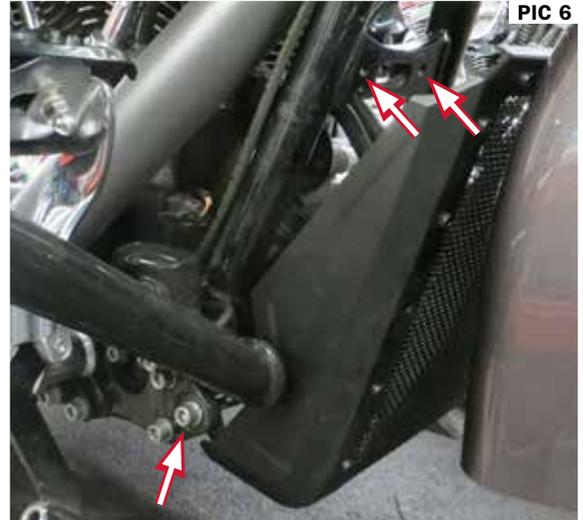

RIGHT (BRAKE) SIDE

LEFT (CLUTCH) SIDE

INSTALLATION INSTRUCTIONS

MESH AIRDAM FOR TOURING, CHROME

6498

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice