

INSTALLATION INSTRUCTIONS

SADDLEBAG EXTENSIONS FOR TOURING, CHROME

7190

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|---------------------------|---|-----------------------------------|
| 1 | Right Saddlebag Extension | 1 | Hardware Kit, containing: |
| 1 | Left Saddlebag Extension | 8 | 1/4-20 X 1" Button Head Cap Screw |
| 1 | Right Closed Panel | 8 | 1/4-20 Locking Nut |
| 1 | Left Closed Panel | 8 | 1/4" Flat Washer |
| | | 8 | 1/4" Sealing Washer |
| | | 2 | Alcohol Pads |

YOU WILL ALSO NEED:

Set of hex wrenches, set of combination wrenches, drill and drill bits, center punch, warm soapy water and a clean rag, Phillips head screwdriver

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.


WARNING YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED TO PREVENT INJURY.

NOTICE PREPARE A CLEAN WORK AREA BEFORE BEGINNING THIS INSTALLATION; ENSURE THAT IT IS A FLAT, STURDY SURFACE AT A COMFORTABLE WORKING HEIGHT. COVER THE SURFACE WITH A CLEAN, DRY BLANKET OR TOWEL TO PREVENT SCRATCHING THE PAINT OR CHROME. KEEP THE AREA CLEAN DURING THE INSTALLATION; REMOVE ALL DEBRIS AFTER DRILLING THE MOUNTING HOLES.

STEP 2 Determine if the provided Saddlebag Extensions will be better fitted with the Open or Closed Panels. The Saddlebag Extensions come with the Open Panels pre-assembled on them.

If the motorcycle's exhaust system does not interfere with the Saddlebag Extensions, and does not protrude out of the rear end of the extensions, the Closed Panels can be installed.

Proceed to Step 3 for installation instructions for the Closed Panels.
Proceed to Step 7 for installation instructions for the Saddlebag Extension assembly.

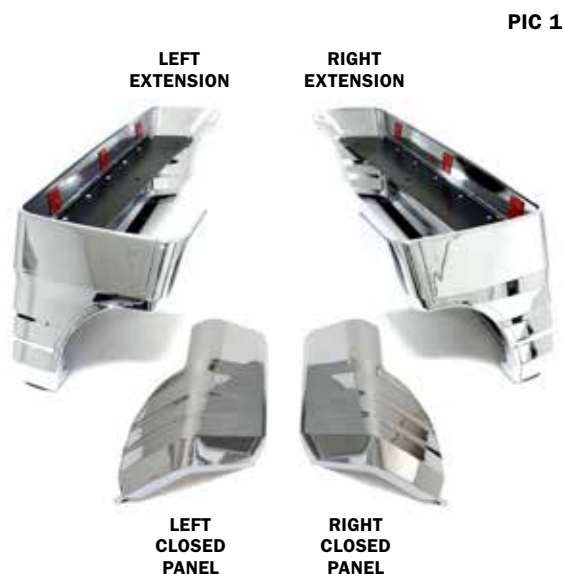

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM
454 COUNTY ROAD VV SOMERSET, WI 54025

INSTALLATION INSTRUCTIONS

SADDLEBAG EXTENSIONS FOR TOURING, CHROME

7190

-CONTINUED-

INSTALLATION OF CLOSED PANELS

STEP 3 Refer to PIC 2 and 3. With the brake-side (right) Saddlebag Extension upside down on a soft, sturdy surface, remove the three (3) locknuts and screws connecting the open panel to the extension. Set hardware aside, it will be reused.


STEP 4 Refer to PIC 4. Locate the provided Right Closed Panel. Align the mounting holes of the Right Open Panel with the holes of the Right Saddlebag Extension.

STEP 5 Refer to PIC 5. Reinstall hardware that was removed in Step 2. Fully tighten hardware.

STEP 6 Refer to PIC 6. Repeat Steps 2 through 4 for the opposite side.



PIC 2

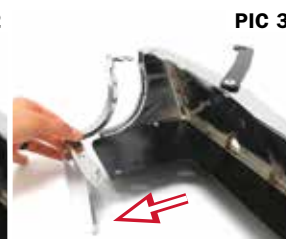

PIC 3



PIC 4



PIC 5



PIC 6

INSTALLATION OF SADDLEBAG EXTENSIONS

STEP 7 Remove the contents of both of the saddlebags. Remove both of the saddlebags along with the securing hardware and washers; set the saddlebags on a soft sturdy surface.

STEP 8 Use warm, soapy water and a clean rag to remove all grease, oil, bugs, dirt and other debris (including wax and polish) from both saddlebags; allow them to dry. Use the included alcohol wipes to remove any wax or polish from the bottom of both bags.

STEP 9 Locate the provided Left and Right Saddlebag Extensions.

STEP 10 Refer to PIC 7. With the brake-side (right) saddlebag upside down on a soft, sturdy surface, test fit the Right Saddlebag Extension.


STEP 11 Refer to PIC 7 and 8. Use a sharpie to mark the center of the four (4) screw holes; set the Extension aside for now.

NOTICE

MEASURE TWICE - DRILL ONCE. DOUBLE CHECK ALL REFERENCE MARKS MADE ON THE SADDLEBAGS BEFORE DRILLING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION.

STEP 12 Repeat Steps 10 and 11 for the other side.

STEP 13 Drill 5/16" holes in both bags at the marks made in Step 11. Remove any debris from the work area. Align and place the Extension on the saddlebag and ensure proper hole alignment. Use masking tape to make alignment marks; remove the Right Saddlebag Extension.

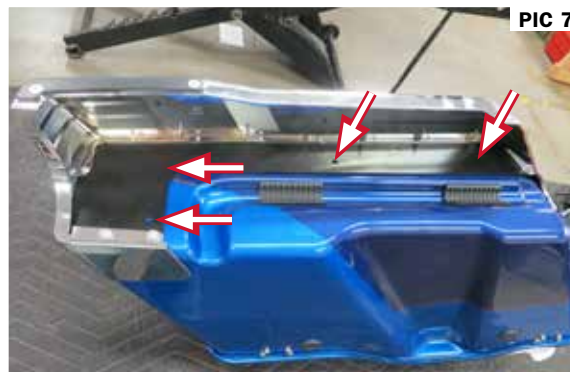

PIC 7



PIC 8

INSTALLATION INSTRUCTIONS

SADDLEBAG EXTENSIONS FOR TOURING, CHROME

7190

-CONTINUED-

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

STEP 14 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 15 Align the Right Saddlebag Extension; press into place for one minute; full bonding will occur after 24 hours.

Note: If the bike is going to be operated before full bonding occurs, secure the Right Saddlebag Extension to the bike with a good quality masking or painter's tape.

STEP 16 Refer to PIC 9 and 10. Locate the included Hardware Kit; set it within arms reach of the work area. Thread a flat washer, followed by a sealing washer, onto a screw. Repeat the process for all screws, flat washers, and sealing washers.

STEP 17 Inside the right saddlebag, insert four (4) of the screw and washer combos through the four (4) holes from Step 13.

STEP 18 Refer to PIC 11 and 12. Inside the saddlebag, secure the Screws with a hex wrench; thread the included Lock Nuts onto the protruding Screws on the bottom outside of the saddlebag. Fully tighten hardware.

STEP 19 Repeat Steps 13 through 18 for the opposite side.

STEP 20 Reinstall both saddlebags and secure them to the bike.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

PIC 9



PIC 10



PIC 11



PIC 12



FINAL





INSTALLATION INSTRUCTIONS

SADDLEBAG EXTENSIONS FOR TOURING, CHROME

7190

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

KURYAKYN.COM

