



## BLACK KINETIC MINI BOARDS with ADAPTER

## 7612

THANK YOU FOR CHOOSING KÜRYAKYN!

**PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.**

### WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

### CAUTION

This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

### NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

### MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Kinetic Mini Board with Adapter (A) - Black
- 1 Right Kinetic Mini Board with Adapter (B) - Black
- 1 Installation Instructions

### TOOLS SUGGESTED

Set of hex wrenches, combination wrenches

### NOTICE

This copy of installation instructions contains important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

### STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the hot engine and exhaust system to cool.

### WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

### BIKE PREP:

### STEP 2

Remove the existing clutch-side (left) peg from the bike. Keep the mounting hardware, it will be reused. Note the location of any spacers or washers; they will need to be reinstalled in **STEP 2**.

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



## PRE-INSTALLATION CONSIDERATIONS:

The Kinetic Mini Boards were designed to be used in many different locations on a variety of motorcycles. These installation instructions contain specific mounting procedures as well as general guidelines for comfortable and safe installation of the boards.

**Küryakyn®**

### **⚠ WARNING**

**INSTALLING THE BOARDS IN A WAY THAT INHIBITS THE PROPER FUNCTION OF THE MOTORCYCLE CAN RESULT IN A LOSS OF CONTROL WHICH CAN RESULT IN SERIOUS INJURY OR DEATH.**

**Driver footboard applications:** Ensure that the installation of the boards does not prohibit the proper function of the gear shifter or rear brake pedal. You may only be able to use the middle or front mounting hole to keep the board from extending too far forward thereby reducing gear shifter or brake pedal clearance.

**Passenger footboard applications:** The boards can be installed so that they fold up in the stow position. Ensure that, when folded back, the boards do not contact any part of the motorcycle and that they remain in the stowed position during operation of the bike.

### **⚠ WARNING**


**THE BOARDS MUST BE INSTALLED SO THEY WILL FOLD UPWARD AND REARWARD IF THEY COME IN CONTACT WITH ANY OBJECT. FAILURE TO INSTALL AND ADJUST THE BOARDS TO OPERATE IN THIS MANNER CAN RESULT IN A LOSS OF CONTROL WHICH CAN RESULT IN SERIOUS INJURY OR DEATH.**

## INSTALL THE KINETIC MINI BOARDS:

### **NOTE:**

Refer to **PIC 1**. Determine the clutch-side (left) board from the brake-side (right) **BEFORE** installation.

**Use your best judgment when installing the Boards. They were designed to fit many different bikes and as a result all mounting positions may not be possible on your specific model of bike.**

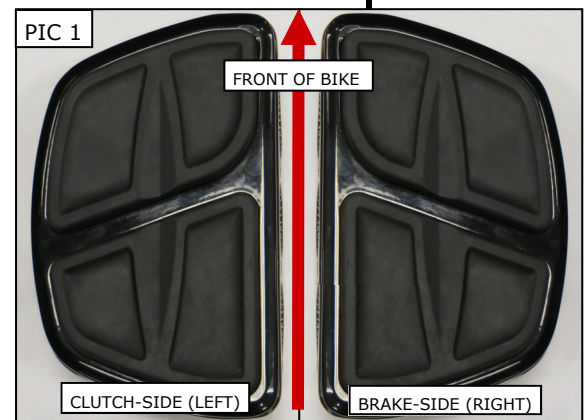

### **STEP 3**


Refer to **PIC 2**. Install the clutch-side (left) Kinetic Mini Board using any spacers or washers removed in **STEP 2**. Ensure that the Kinetic Board is able to fold upward and rearward.

### **STEP 4**

Secure the Board to the clevis with the hardware removed in **STEP 2**.

### **STEP 5**

Repeat **STEPS 2 through 4** for the brake-side (right).

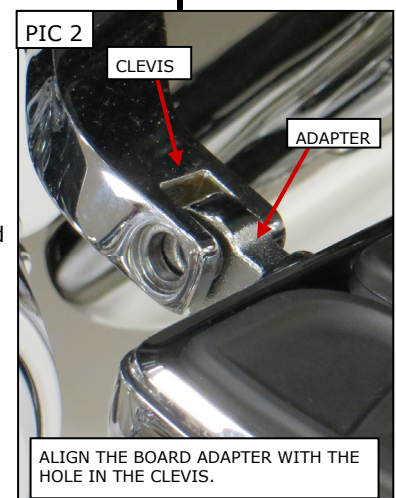

-cont.-

**PAGE**

**2**

## ADJUST THE KINETIC MINI BOARDS:

**NOTE:** There are three splined mounting holes in the Boards. PIC 3 You may use these to adjust the Boards forward or rearward and tilt them up or down.


**STEP 6** Adjust the Board forward or rearward: Remove the 5/16" screw and washer from the underside of the Board. PIC 3 The Adapter will remain on the motorcycle.

Choose your location and orientation of the Board. Reinstall the 5/16" screw, with flat washer, in the Board. Thread the screw into the Adapter.

Ensure the splines on the Board and Adapter are engaged and tighten the screw securely.

**STEP 7** Adjust the Board angle: Loosen (but do not remove) the 5/16" screw. PIC 3 Adjust the angle to the desired position. Ensure that the splines are engaged and retighten the screw.

**STEP 8** Fold the board up and ensure that it does not contact any part of the bike. Adjust if necessary.

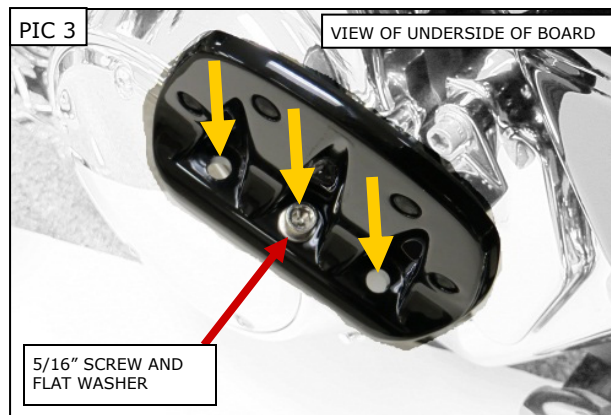

### **WARNING**

ENSURE THAT THE INSTALLATION OF THESE BOARDS DOES NOT INTERFERE WITH THE PROPER OPERATION OF THE MOTORCYCLE **BEFORE RIDING**. INTERFERENCE WITH THE CONTROLS OR ANY COMPONENT ON THE MOTORCYCLE MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

### **NOTICE**

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

*Ride On!*