



## POLYGON INTEGRATED EXHAUST TIPS

### 7622

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>CAUTION</b>	<b>This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.</b>

**MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:**

- 1 Right Polygon Exhaust Tip
- 1 Left Polygon Exhaust Tip
- 1 Hardware Kit containing:
  - 2 Deflector Assemblies
  - 6 M6 X 1.0 X 12MM Hex Flange Head Screws
  - 1 Anti-Seize Packet
- 1 Installation instructions


### TOOLS SUGGESTED:

Set of metric wrenches, Phillips-head screwdriver, set of metric hex wrenches

**NOTICE** These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Put the bike on its center stand (if equipped) or secure it in a motorcycle wheel chock. Allow the engine and exhaust system to cool.

**STEP 2** Refer to **PIC 1**. Remove the three hex screws from both of the existing exhaust tips. Slide the tips off the mufflers. Set the screws and tips aside, they will not be reused.

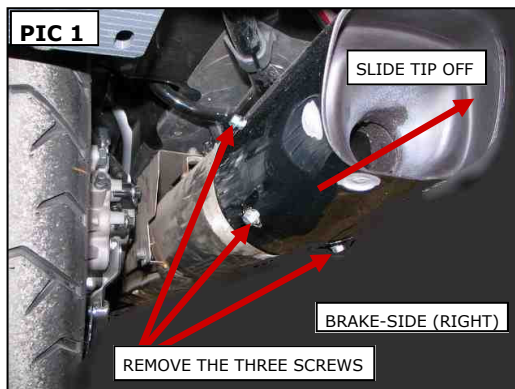

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn  
454 County Road V V  
Somerset, WI 54025-9031  
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




**STEP 3** Refer to **PIC 2**. Locate the brake-side (Right) and clutch-side (Left) Polygon Integrated Exhaust Tip.

**STEP 4** Refer to **PIC 3**. Install the included Deflector Assemblies on the short outlet pipe of each muffler. Push them on as far as they will go and rotate the Deflector so the outlet is pointing towards the bottom of the tire. Looking at the hole in the bottom of the new Tip will give you an idea of the angle of the Deflector. Make sure the Deflectors are centered in the outlet holes. Tighten the clamp screw snugly.

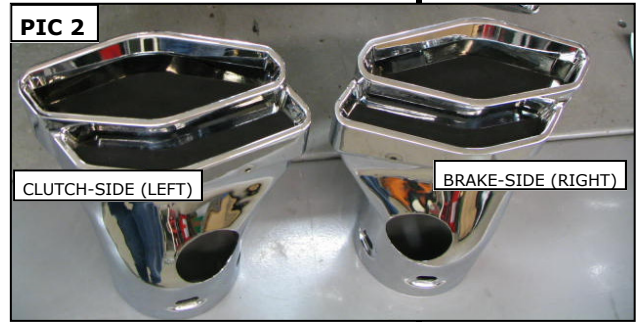

**STEP 5** Refer to **PIC 4**. Determine the orientation of the two Polygon Tips. The openings at the rear of the Tips are cosmetic only. This design will help keep your saddlebags free of soot. The top edges of the Tips should be follow the contour of the saddlebags and maintain 3/8" of clearance.

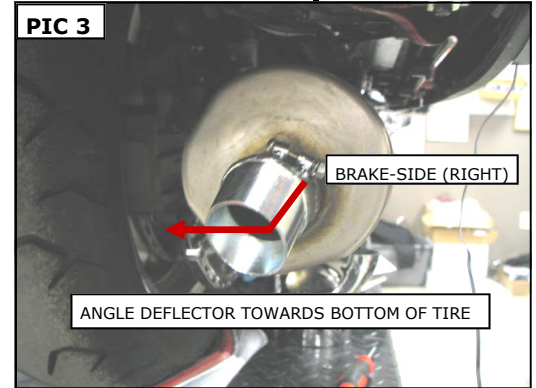


**NOTICE** Apply some of the included anti-seize on the threads of the included screws before installation to make future removal easier.

**STEP 6** Slide each Tip onto its respective muffler; align the holes and begin the three included screws in their threaded holes. Leave the screws loose for now to allow for adjustment.

**STEP 7** With the bike standing upright, adjust the orientation of the Tips so they match the angle of the saddlebags for a consistent gap. Ensure that the Deflector installed in **STEP 4** points at the hole in the bottom of the Tip.

Ensure that the saddlebag doors do not come in contact with the Tips as they are opened.

Loosen the front muffler clamps and "twist" the mufflers if additional adjustment is necessary for proper clearance.

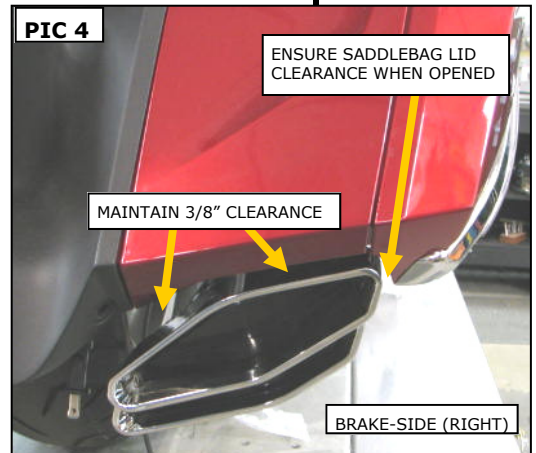

**NOTE:** Refer to **PIC 4**. The Polygon Integrated Tips should not get overly hot, but Küryakyn requires that you maintain 3/8" clearance from the Tip to the saddlebag.

**STEP 8** Tighten the mounting screws securely.

**NOTICE** It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

*Ride On!*